


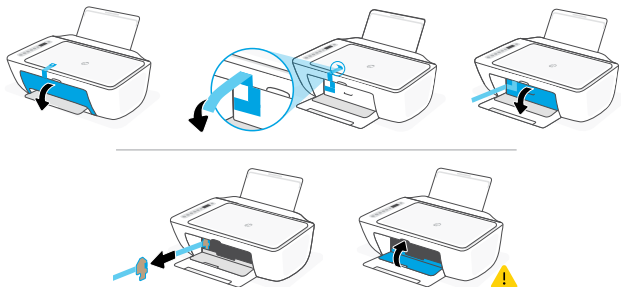


1



Remove packaging and discard all tape and cardboard. Close the cartridge access door.

2

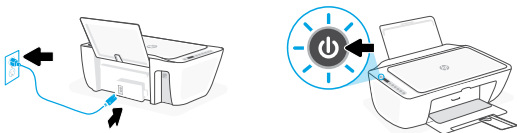

Plug in and power on the printer.

3




hp.com/start/install

Install the HP app to continue setup. Scan the QR code using a mobile device or visit hp.com/start/install on a computer.

4



Use the app to connect printer to Wi-Fi and view guided instructions to install ink and paper. The HP app is also used to print and manage printer features.

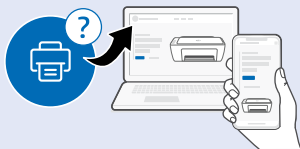


hp.com/start/dj2900

Find setup and printer troubleshooting

Go to hp.com/start/dj2900 for more information on setup, printer features, error codes, and troubleshooting.





Reference information

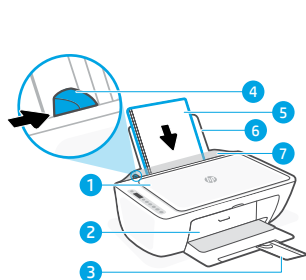


Printer part

- 1 Scanner lid
- 2 Cartridge access door (closed)
- 3 Output tray extender
- 4 Paper guide
- 5 Letter or A4 paper
- 6 Input tray
- 7 Input tray shield
- 8 Cancel, Resume, Information, Wi-Fi, and Copy (Color & Black) buttons
- 9 Error code (E + number).
⚠ See list of icons and codes at hp.com/start/dj2900
- 10 Wireless signal strength.
⚠ If less than 3 bars, move printer closer to router.
- 11 Wireless alert. Reset Wi-Fi.

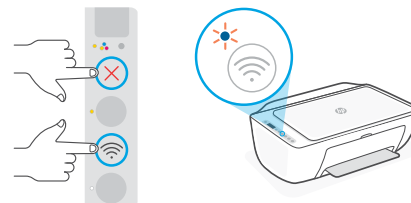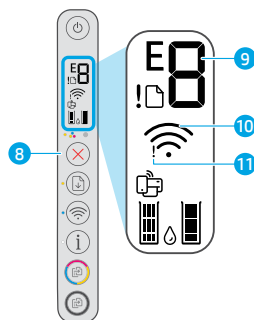

Help: Wi-Fi reset

- 1 Press and at the same time. Watch for the Power button to briefly flash, then release the buttons. The Wireless light will blink blue.
- 2 Wait for one minute. Close and reopen the HP app and then try connecting again.

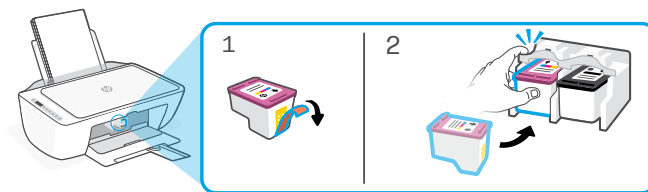

Ink information

Firmly push straight in to insert the cartridges. You will hear a snap and feel the cartridge lock into place. Use the cartridges included with this printer for initial setup.

