



Maintenance and Service Guide

OMEN 17.3 inch Gaming Laptop PC

Model numbers: 17-db1xxx

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

© Copyright 2025 HP Development Company, L.P.

AMD, Radeon, and Ryzen are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVIDIA and GeForce RTX are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. USB Type-C, USB-C, and the USB 5 Gbps, and USB 10 Gbps port logos are registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2025

Document Part Number: P37225-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.microsoft.com>.

If your product ships with Windows in S Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

-
-  **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.
-

Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed only by an authorized service provider.



IMPORTANT: See [Removal and replacement procedures for Customer Self-Repair parts on page 29](#) for details.

Accessing parts described in [Removal and replacement procedures for authorized service provider parts on page 42](#) can damage the computer or void your warranty.

Table of contents

1 Product description	1
2 Getting to know your computer	5
Right side	5
Left side.....	5
Rear	6
Display	7
Low blue light mode (select products only).....	8
Wake-on-voice (select products only).....	8
Keyboard area.....	9
Touchpad settings and components.....	9
Touchpad settings	9
Adjusting touchpad settings.....	9
Turning on the touchpad	9
Touchpad components	10
Lights	10
Special keys.....	11
Bottom	13
Labels	14
3 Illustrated parts catalog	15
Computer major components.....	15
Display assembly subcomponents.....	17
Miscellaneous parts.....	18
4 Removal and replacement procedures preliminary requirements	20
Tools required	20
Service considerations.....	20
Plastic parts.....	20
Cables and connectors.....	20
Drive handling	20
Electrostatic discharge information.....	21
Generating static electricity.....	21
Preventing electrostatic damage to equipment.....	22
Personal grounding methods and equipment.....	22
Grounding the work area.....	23
Recommended materials and equipment.....	23
Cleaning your computer	24
Enabling HP Easy Clean (select products only).....	24
Removing dirt and debris from your computer.....	24

Cleaning your computer with a disinfectant.....	25
Caring for wood veneer (select products only).....	26
Packaging and transporting guidelines.....	26
Accessing support information.....	26
5 Removal and replacement procedures for Customer Self-Repair parts	29
Component replacement procedures	29
Preparation for disassembly.....	29
Bottom cover	29
Battery.....	32
Removing and reinstalling the same battery	32
Installing a new battery.....	33
Solid-state drive.....	38
Memory modules.....	40
6 Removal and replacement procedures for authorized service provider parts.....	42
Component replacement procedures	42
Preparation for disassembly.....	42
Display panel and camera module (without removing the display assembly)	42
RJ-45 board	46
WLAN module.....	47
Speakers.....	48
Heat sink	49
Fans	50
System board	51
IR board.....	54
Audio board.....	56
Touchpad	57
Display assembly.....	59
Top cover with keyboard.....	67
7 Using Setup Utility (BIOS)	69
Starting Setup Utility (BIOS).....	69
Updating Setup Utility (BIOS).....	69
Determining the BIOS version.....	69
Preparing for a BIOS update	70
Downloading a BIOS update	70
Installing a BIOS update	71
8 Backing up, restoring, and recovering	72
Backing up information and creating recovery media.....	72
Using Windows tools for backing up.....	72
Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only).....	72
Restoring and recovering your system.....	72
Creating a system restore	73
Restoring and recovery methods	73
Recovering using the HP Recovery USB flash drive	73

Changing the computer boot order	74
Using HP Sure Recover (select products only).....	74
9 Using HP PC Hardware Diagnostics	75
Using HP PC Hardware Diagnostics Windows (select products only).....	75
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	75
Accessing HP PC Hardware Diagnostics Windows.....	75
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only)	75
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	76
Downloading HP PC Hardware Diagnostics Windows.....	76
Downloading the latest HP PC Hardware Diagnostics Windows version from HP.....	76
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	76
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	77
Installing HP PC Hardware Diagnostics Windows.....	77
Using HP PC Hardware Diagnostics UEFI.....	77
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code.....	77
Starting HP PC Hardware Diagnostics UEFI.....	77
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	78
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive.....	78
Downloading the latest HP PC Hardware Diagnostics UEFI version.....	79
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	79
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	79
Downloading Remote HP PC Hardware Diagnostics UEFI.....	79
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	79
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	80
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	80
10 Specifications	81
Computer specifications	81
Display specifications.....	81
Solid-state drive specifications	82
11 Power cord set requirements.....	83
Requirements for all countries	83
Requirements for specific countries and regions.....	83
12 Recycling	86
Index.....	87

1 Product description

This table provides detailed product information.

 **NOTE:** For the latest specifications related to your computer, go to <http://www.hp.com/support> and follow the instructions to find your product. Select **Specifications & Accessories**, select **Product information**, and then select the specifications link.

Table 11 Product components and their descriptions

Category	Description
Product Name	OMEN 17.3 inch Gaming Laptop PC Model numbers: 17-db1xxx CTO: 17z-db100
Processors	AMD® Ryzen™ processors AMD Ryzen AI 9 365 processor AMD Ryzen AI 7 350 processor AMD Ryzen AI 5 340 processor
Graphics	Internal graphics AMD Radeon® 880M Graphics (Ryzen AI 9 processor) AMD Radeon 860M Graphics (Ryzen AI 7 processor) AMD Radeon 840M Graphics (Ryzen AI 5 processor) Discrete graphics NVIDIA® GeForce RTX™ 5070 NVIDIA GeForce RTX 5060 NVIDIA GeForce RTX 5050
	Supports: <ul style="list-style-type: none">Hybrid graphics: 128 bitsHD Decode, DX12, and HDMIOptimusGraphics SwitcherGPU Performance ScalingMR compatible (60 Hz frame rate)VRFreeSync Premium (internal)
Display	43.9 cm (17.3 in), LCD flat panel, antiglare, low blue light, ultra wide viewing angle (UWVA), sRGB 100%, narrow bezel, 300 nits

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Full high-definition (FHD) (1920 × 1080), embedded DisplayPort™ (eDP) 1.4 + panel self refresh (PSR), 48 - 144 Hz (variable refresh rate [VRR])
	Quad high-definition (QHD) (2560 × 1440), eDP 1.4 without PSR, 48 - 240 Hz (VRR)
	Supports: <ul style="list-style-type: none">● Microsoft DRR (Dynamic Refresh Rate)● 16:9 Aspect Ratio● Panel Certification (TUV + EyeSafe)● Flicker free● Screen-to-body ratio: 84.93 %● Microsoft HDR Streaming Capable● EyeSafe Label
Memory	Customer accessible or upgradeable
	Two SODIMM slots, dual-channel support
	DDR5-5600, 1.1 v
	Supports the following configurations: <ul style="list-style-type: none">● 32 GB (16 × 2)● 24 GB (12 × 2)● 16 GB (8 × 2)
Primary storage	PCIe, NVMe, M.2 2280 solid-state drives (SSDs)
	1 TB, PCIe-4 × 4, Three Layer Cell (TLC)
	1 TB
	1 TB (2 × 512 GB, PCIe-4 × 4) (dual storage configuration)
	512 GB, PCIe-4 × 4, TLC
	512 GB
Audio and video	HyperX
	Dual speakers
	HP Audio Boost
	DTS:X Ultra
	HP True Vision FHD Camera: indicator LED, USB 2.0, HD BSI sensor, f2.0, WDR/TNR, 80° NFOV
	1080p by 30 frames per second
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
	Supports Windows Hello
RJ-45/network jack	Ethernet Integrated 10/100/1000 NIC
Sensor	IR thermal sensor

Table 1.1 Product components and their descriptions (continued)

Category	Description
Wireless	Compatible with Miracast® devices
	Supports Modern Standby (connected)
	Wi-Fi® BIOS SAR
	Dynamic antenna gain (Wi-Fi)
	Dynamic antenna gain (Bluetooth®)
	Bluetooth audio offload
	Bluetooth LE Audio
	UNII-4 5 GHz channel
	Integrated wireless options with dual antennas
	Realtek 8852BE-VT Wi-Fi 6 + Bluetooth 5.4 WW WLAN
	MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WW WLAN
Ports	HDMI v2.1 supporting: up to 8 K @ 60 Hz, 4 K @ 60 Hz, 8 K @ 30 Hz
	Audio-out (headphone)/audio-in (microphone) combo jack
	RJ-45 (network) connector
	USB 3.2 Gen 2 Type-C®, supports:
	<ul style="list-style-type: none">power deliverydata transferHP Sleep & ChargeDisplayPort 2.1 out up to 4K @ 60 HzHDMI 2.1 out up to 4K @ 60 Hz with HDCP 2.3
	USB 3.2 Gen 2 Type A (2) (rear)
	USB 3.2 Gen 2 Type A (supports HP Sleep & Charge) (right)
	AC smart pin adapter plug
Keyboard/pointing devices	Keyboard
	Island-style with numeric keypad, 1-zone RGB backlit
	Island-style with numeric keypad, white backlit
	Clickpad with image sensor
	Multitouch gestures enabled
	Supports precision touchpad
	Support for modern trackpad gestures
	Taps enabled as default
Power requirements	Battery (polymer)
	6 cell, 83 Whr

Table 1-1 Product components and their descriptions (continued)

Category	Description
	HP long life
	HP Fast Charge Technology
	Smart AC adapters (PFC, 4.5 mm)
	230 W, right angle
	Power cord
	C13, premium, 1.83 m (6.0 ft)
Security	Supports Firmware Trusted Platform Module (fTPM) 2.0
	Camera privacy cover
Operating system	Windows® 11 Pro 64 NextGen Premium
	Windows 11 Pro 64 NextGen Standard
	Windows 11 Home 64 NextGen Premium
	Windows 11 Home 64 NextGen Premium Chinese
	Windows 11 Home 64 NextGen Standard Chinese
	Windows 11 Home 64 NextGen Premium Single
	Windows 11 Home 64 NextGen Standard Single
	FreeDOS
Serviceability	End user replaceable parts
	AC adapter
	Bottom cover
	Battery
	SSD
	Memory modules

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Identify the component on the right side of the computer.

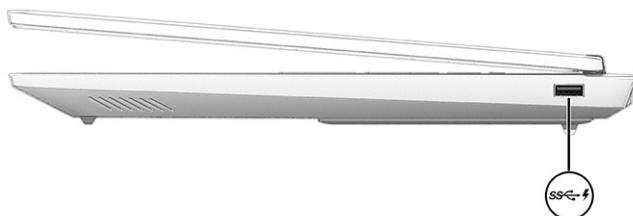


Table 2-1 Right-side component and its description

Component	Description
ss<->	USB 5 Gbps port with HP Sleep and Charge Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.

Left side

Identify the components on the left side of the computer.

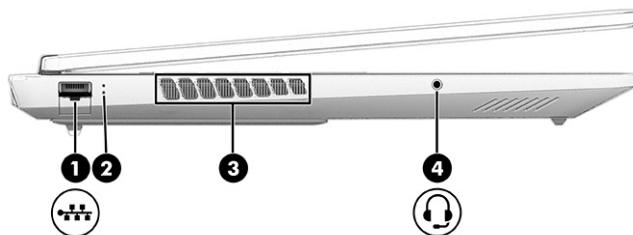


Table 2-2 Left-side components and their descriptions

Component	Description
(1)	RJ-45 (network) jack Connects a network cable.

Table 2-2 Left-side components and their descriptions (continued)

Component	Description	
(2)	RJ-45 (network) status lights	
(3)	Vent	<ul style="list-style-type: none"> White: The network is connected. Amber: Activity is occurring on the network. <p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(4)	 Audio-out (headphone)/Audio-in (microphone) combo jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none"> Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>

Rear

Identify the components on the rear of the computer.

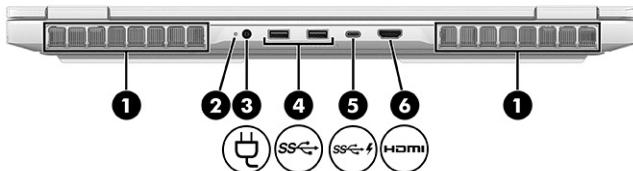


Table 2-3 Rear components and their descriptions

Component	Description	
(1)	Vents (2)	<p>Enable airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(2)	AC adapter and battery light	<ul style="list-style-type: none"> White: The AC adapter is connected and the battery is fully charged. Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level. Amber: The AC adapter is connected and the battery is charging. Off: The battery is not charging.

Table 2-3 Rear components and their descriptions (continued)

Component	Description
(3) 	Power connector Connects an AC adapter. NOTE: To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. You can use an optional 100 W/20 V Type-C adapter when running light-load tasks. System-off charging is supported only when you use a 20 V Type-C adapter.
(4) 	USB 10 Gbps ports (2) Connect USB devices, provide high-speed data transfer, and (for select products) charge small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(5) 	USB Type-C® power connector and 10 Gbps port with HP Sleep and Charge and DisplayPort output Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. - and -
	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and -
(6) 	HDMI port Connects a display device that has a USB Type-C connector, providing DisplayPort output. NOTE: To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. You can use an optional 100 W/20 V Type-C adapter when running light-load tasks. System-off charging is supported only when you use a 20 V Type-C adapter.
	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠️ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the Sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type **XiaoWei** in the search box, and then select **XiaoWei**.
2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.
3. Follow the on-screen instructions.

 **NOTE:** Allow the XiaoWei app to continue running on the computer.

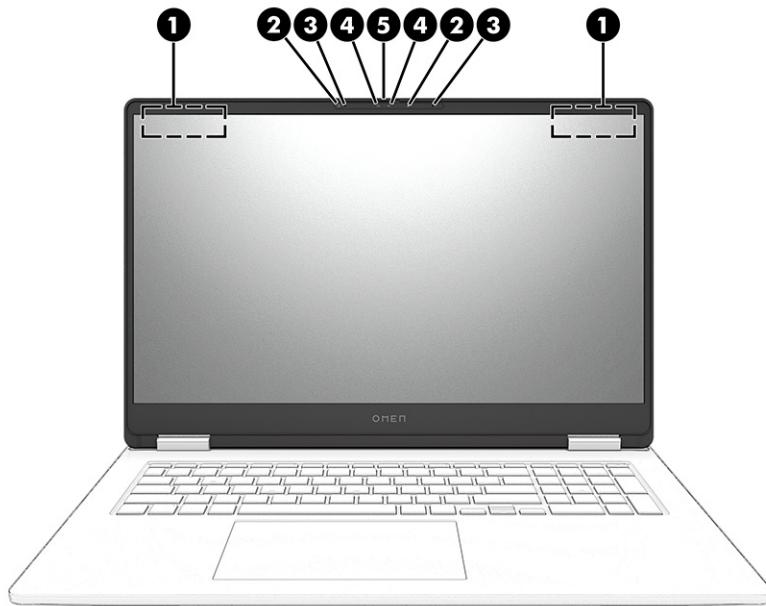


Table 2-4 Display components and their descriptions

Component	Description
(1) WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) Camera lights (2)	On: One or more cameras are in use.
(3) Internal microphones (2)	Record sound.

Table 2-4 Display components and their descriptions (continued)

Component	Description
(4) Cameras (2)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(5) Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens. NOTE: If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type **HP Documentation** in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard area, including the function keys and (select products only) power key, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type **touchpad settings** in the search box, and then press **enter**.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type **touchpad settings** in the search box, and then press **enter**.

2. Using an external mouse, click the **touchpad** button.

If you are not using an external mouse, press the **Tab** key repeatedly until the pointer rests on the **touchpad** button. Then press the **spacebar** to select the button.

Touchpad components

Identify the touchpad components.

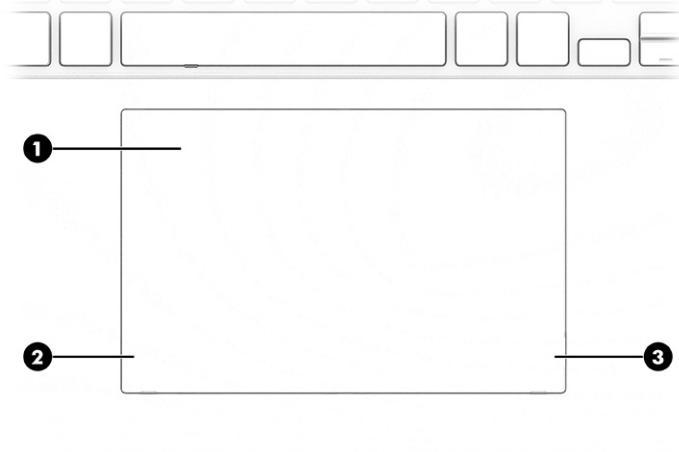


Table 2-5 Touchpad components and their descriptions

Component	Description
(1) Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2) Left touchpad button	Functions like the left button on an external mouse.
(3) Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.

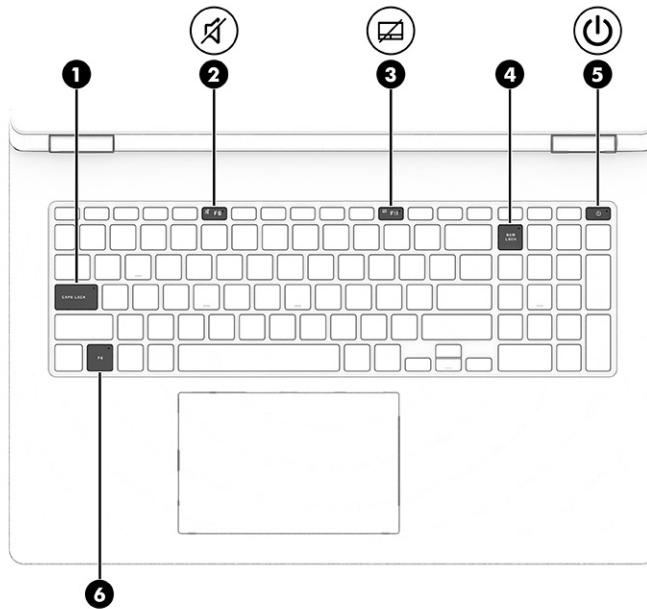


Table 2-6 Lights and their descriptions

Component	Description
(1) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)  Mute light	<ul style="list-style-type: none"> On: Computer sound is off. Off: Computer sound is on.
(3)  Touchpad light	<ul style="list-style-type: none"> On: The touchpad is off. Off: The touchpad is on.
(4) num lock light	On: Num lock is on, which alternates between the navigational and numeric functions on the integrated numeric keypad.
(5)  Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.
(6) Fn lock light	On: The fn key is locked.

Special keys

Identify the special keys.

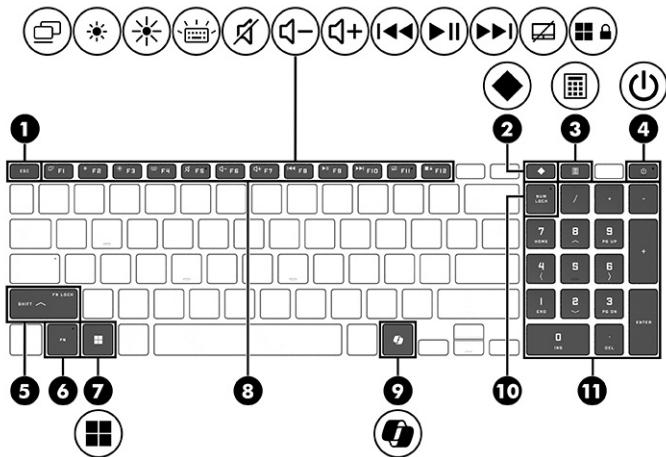


Table 2-7 Special keys and their descriptions

Component	Description
(1)  esc key	Displays system information when pressed in combination with the fn key.
(2)  OMEN key	Opens the OMEN Gaming Hub software.
(3)  Calculator key	Opens the calculator.
(4)  Power button	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power and sleep settings:</p> <ul style="list-style-type: none"> Right-click the Power icon  , and then select Power and sleep settings.
(5)  fn lock key	Pressing the fn + shift will enable the fn lock feature.
(6)  fn key	Executes specific functions when pressed in combination with another key.

Table 2-7 Special keys and their descriptions (continued)

Component	Description
(7) 	Windows key Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(8) Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.
(9) 	Windows Copilot key Opens Windows Copilot (select products only). NOTE: Copilot in Windows (select products only) requires Windows 11. Some features require a neural processing unit (NPU). The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. When the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See http://aka.ms/WindowsAIFeatures .
(10) num lock key	Alternates between the navigational and numeric functions on the integrated numeric keypad.
(11) Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When num lock is pressed, the keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.

Bottom

Identify the bottom components.

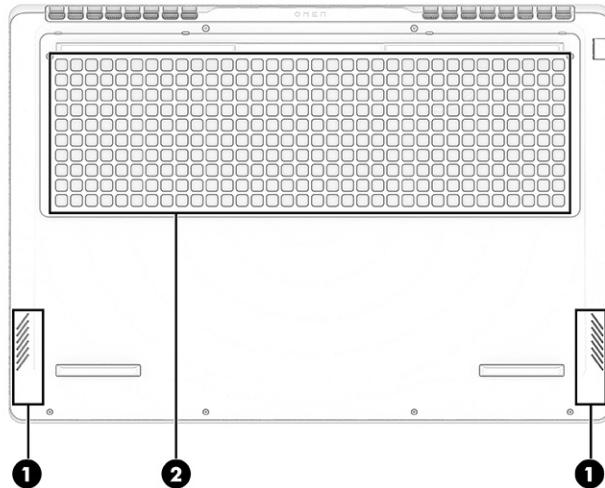


Table 2-8 Bottom components and their descriptions

Component	Description
(1) Speakers (2)	Produce sound.

Table 2-8 Bottom components and their descriptions (continued)

Component	Description
(2) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.



IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble the following example.



Table 2-9 Service label components

Component
(1) Serial number
(2) Product ID
(3) HP product name and model number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

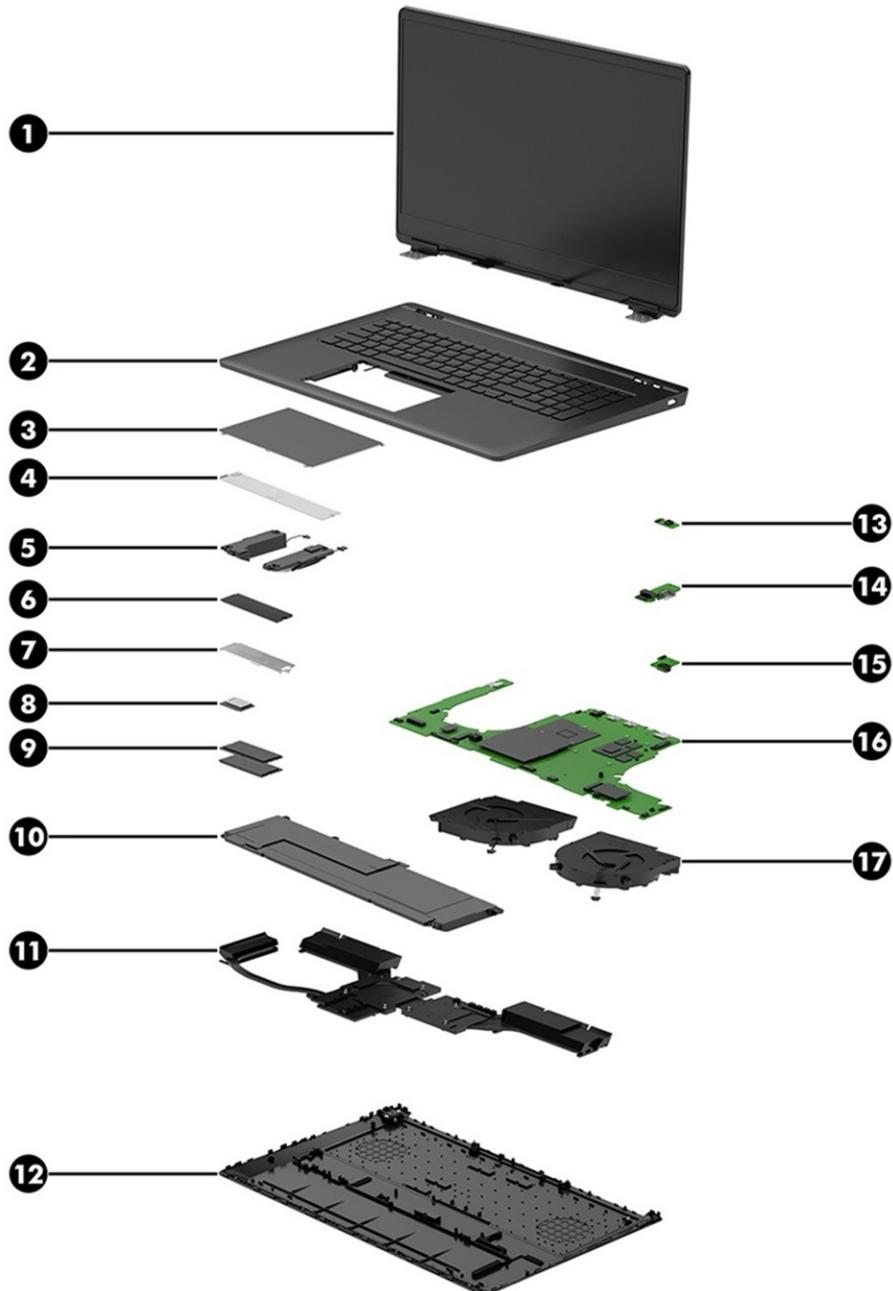


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display assemblies are offered as spare parts only at a subcomponent level. For more information, see Display assembly subcomponents on page 17 .	not available as a spare part
(2)	Top cover with keyboard For a detailed list of country codes, see Top cover with keyboard on page 67 .	
	RGB backlit keyboard	P44304-xx1
	White backlit keyboard	P44305-xx1
(3)	Touchpad (includes rubber)	N96203-001
	NOTE: The touchpad cable is available using spare part number N96205-001.	
(4)	Touchpad bracket	not available as a spare part
(5)	Speakers (left and right)	N96209-001
(6)	SSD (PCIe-4 × 4) NOTE: The SSD thermal pad is available using spare part number P00204-001.	
	1 TB, TLC	M16560-001
	1 TB	N45474-001
	512 GB, TLC	M17436-001
	512 GB	N45476-001
	512 GB (non-Micron [nM]) (for use in dual storage configurations)	N77392-001
(7)	SSD cover	not available as a spare part
(8)	WLAN module NOTE: WLAN module protective tape is available using spare part number M14330-001.	
	Realtek 8852BE-VT Wi-Fi 6 + Bluetooth 5.4	P06350-005
	MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WLAN	N22541-005
(9)	Memory modules (DDR5-5600)	
	16 GB	N38627-001
	12 GB	P33447-001
	8 GB	N37792-001
(10)	Battery (6 cell, 83 Whr)	P04861-001
(11)	Heat sink	N86911-001
	NOTE: Thermal grease is available as spare part number N96202-001.	
(12)	Bottom cover	N96208-001
(13)	IR sensor board (includes cable) NOTE: The IR sensor board cable is available as spare part number N96198-001.	P44306-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(14)	RJ-45 board (includes cable)	P44307-001
	NOTE: The RJ-45 board cable is available using spare part number N96200-001.	
(15)	Audio board (includes cable)	P44308-001
	NOTE: The audio board cable is available as spare part number N96202-001.	
(16)	System board (includes processor; for use in models with discrete graphics memory)	
	AMD Ryzen AI 9 365 processor and NVIDIA GeForce RTX 5070 graphics	P44303-601
	AMD Ryzen AI 9 365 processor and NVIDIA GeForce RTX 5060 graphics	P44301-601
	AMD Ryzen AI 7 350 processor and NVIDIA GeForce RTX 5070 graphics	P44302-601
	AMD Ryzen AI 7 350 processor and NVIDIA GeForce RTX 5060 graphics	P44300-601
	AMD Ryzen AI 7 350 processor and NVIDIA GeForce RTX 5050 graphics	P44298-601
	AMD Ryzen AI 5 340 processor and NVIDIA GeForce RTX 5060 graphics	P44299-601
(17)	Fan kit (includes left fan and right fans)	N96207-001
	NOTE: Fan protective tape is available as spare part number P15502-001.	

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

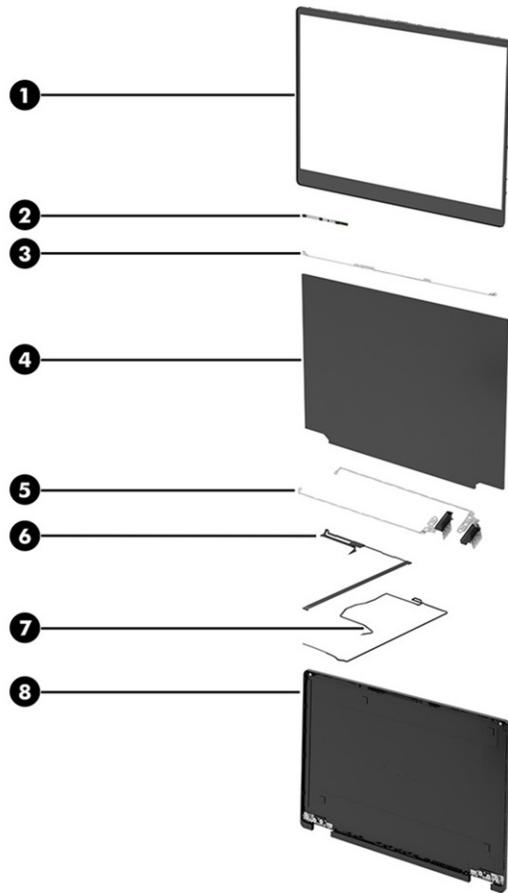


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display bezel	P44311-001
(2)	Camera module (includes display panel and bezel adhesive)	P44312-001
(3)	Top bracket (includes display panel and bezel adhesive)	P44313-001
(4)	Display panel (includes display panel and bezel adhesive)	
	QHD, 300 nits, 240 Hz	N96195-001
	FHD, 300 nits, 144 Hz	N96194-001
(5)	Hinges (includes left and right display hinges and display panel and bezel adhesive)	N96216-001
(6)	Display panel cable (includes display panel and bezel adhesive)	P44314-001
(7)	Wireless antenna kit (includes display panel and bezel adhesive)	N96211-001
(8)	Display back cover (includes display panel and bezel adhesive)	P44310-001
	Hinge caps (include rubber pieces and display panel and bezel adhesive) (not illustrated)	N96217-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapter (230 W, smart, PFC, slim)	N22367-001
Screw Kit	N96218-001
LCD Adhesive Kit (includes tape for the display panel and bezel)	P00205-001
Protective Tape Kit (includes protective tape for the touchpad, connectors, and display cable)	N96204-001
Fan protective tape	P15502-001
Power cords (C13, premium, 1.83 m [6 ft])	
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	M82827-001
North America	M82821-001
South Africa	M82832-001
Switzerland	M82833-001
United Kingdom	M82834-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures.

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 22](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	55% relative humidity	40% relative humidity	10% relative humidity
Walking across carpet	7500 V	15,000 V	35,000 V
Walking across vinyl floor	3000 V	5000 V	12,000 V
Motions of bench worker	400 V	800 V	6000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2000 V
Removing DIPs from vinyl tray	2000 V	4000 V	11,500 V
Removing DIPs from polystyrene foam	3500 V	5000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5000 V	11,000 V	21,000 V



NOTE: Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Method	Voltage
Antistatic plastic	1500
Carbon-loaded plastic	7500
Metalized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - Select the **HP Easy Clean** icon in the taskbar.
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 24](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 25](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 26](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
 2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.
-
-  **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.
-
3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.
-
-  **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 25](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 24](#), [Caring for wood veneer \(select products only\) on page 26](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 24](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 25](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations

Service consideration	Path to access information
Records of reported failure incidents stored on the computer	<p>Windows:</p> <p>Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none">1. Press the power button.2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none">3. Press f10 to enter the BIOS setup.4. Complete one of these tasks: <ul style="list-style-type: none">• (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log.• (On consumer products) Under the Main tab, select System Log. <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none">1. Turn on the computer and allow the operating system to open.2. Select the search icon  in the taskbar.3. Type Event Viewer, and then press enter.4. Select the log from the left panel. Details display in the right panel. <p>ChromeOS™:</p> <ol style="list-style-type: none">1. Go to support.google.com/chrome.2. Search collect Chrome device logs.
Technical bulletins	To locate technical bulletins:
	<ol style="list-style-type: none">1. Go to www.hp.com.2. Place the cursor over Problem solving to display more options.3. Select Support & Troubleshooting.4. Type the serial number, product number, or product name to go to the product support page.5. Select Advisories to view technical bulletins.
Repair professionals	To locate repair professionals:
	<ol style="list-style-type: none">1. Go to www.hp.com.2. Place the cursor over Support resources to display more options.3. Select Authorized service providers.

Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: <ol style="list-style-type: none">1. Go to http://www.hp.com/go/techcenter/pcdiags.2. Select Get Support.3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

-  **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.
-  **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

To remove and replace computer components, use these procedures.

-  **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.
-  **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 20](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.


Table 5-1 Bottom cover description and part number

Description	Spare part number
Bottom cover	N96208-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).

Remove the bottom cover:

1. Loosen the four captive Phillips screws (1) from the bottom cover. The cover should lift up and create a gap near the captive screw that is second from the top left.
2. Remove the four noncaptive Phillips M2.0 × 4.0 screws (2) from the bottom cover.

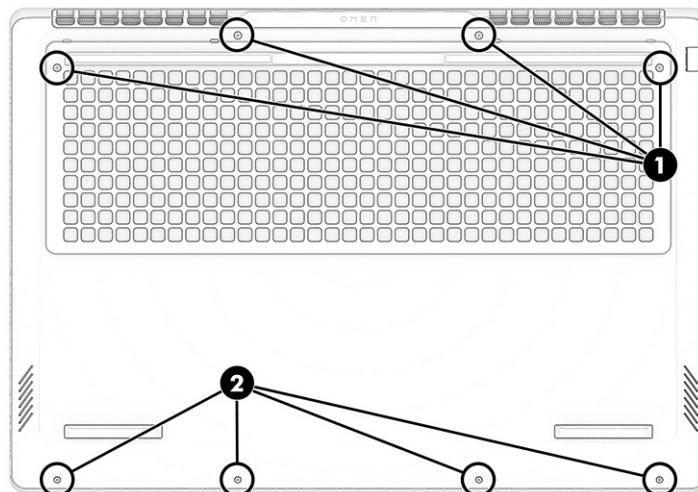

3. Insert a tool (1) in the gap in the top seam to release the bottom cover, and then remove the cover (2) from the computer.

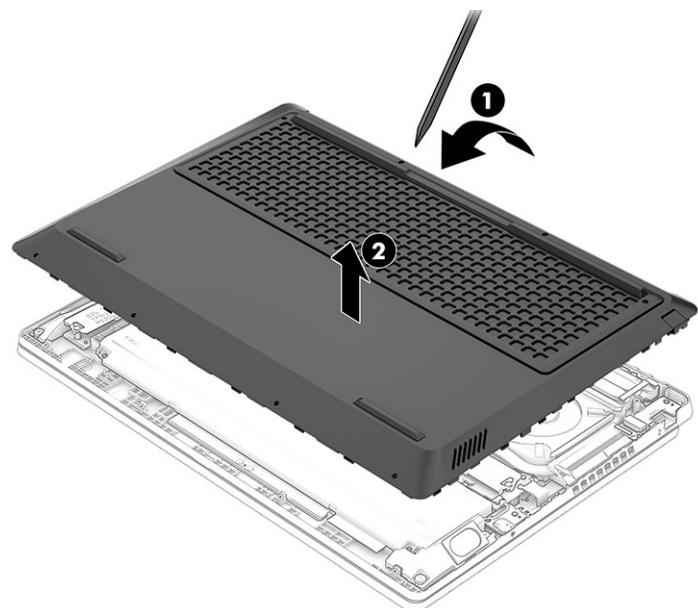


To replace the bottom cover, reverse the removal procedures.

When replacing the bottom cover, remove the Feature Byte label from the inside of the old bottom cover and place it on the inside of the new bottom cover. Be sure to keep this label with the computer, because the label is required for any future repairs.

You can locate product labels:


- Laser etched on the old bottom cover.
- In HP System Information by pressing **fn + esc** when you turn on the computer.

 **NOTE:** Bottom cover appearance might vary.

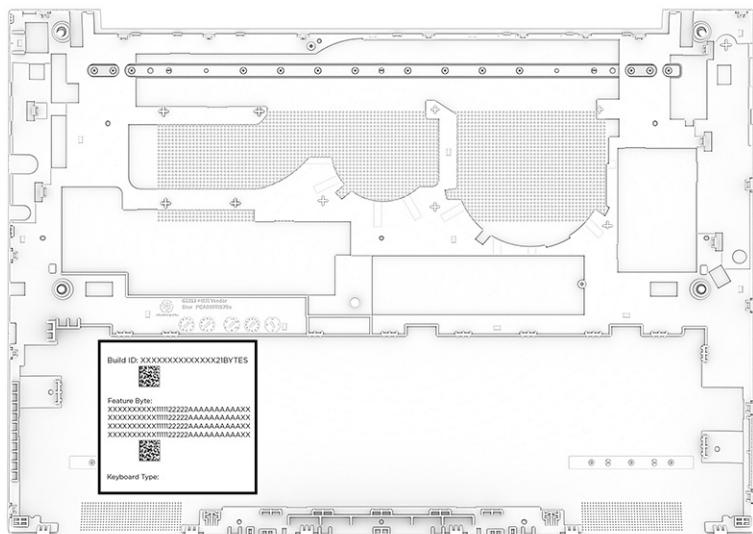


Hand write the product information onto the label of the new bottom cover. Use a ballpoint pen or marker to avoid smudging.

Example of label information

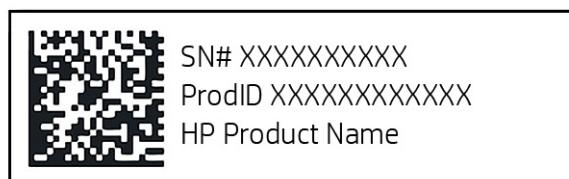

New bottom cover label location

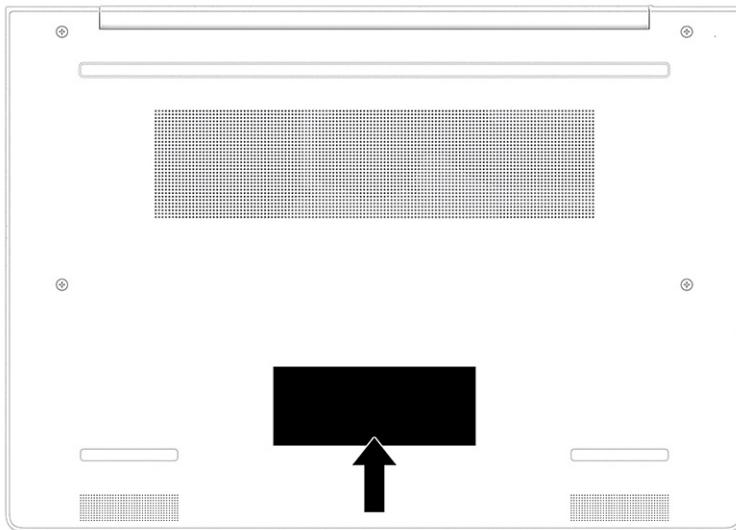

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Removing and reinstalling the same battery on page 32](#).
- To install a new battery, see [Installing a new battery on page 33](#).

Removing and reinstalling the same battery

To remove the battery and reinstall it, use this procedure and illustration.

⚠️ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

For additional battery information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide, select the **Search** icon in the taskbar, type **HP Documentation** in the search box, and then select **HP Documentation**.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).


2. Remove the bottom cover (see [Bottom cover on page 29](#)).

⚠️ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

⚠️ IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable (1) from the system board.
2. Remove the six Phillips M2.0 × 4.0 screws (2) that secure the battery to the computer.
3. Remove the battery (3) from the computer.

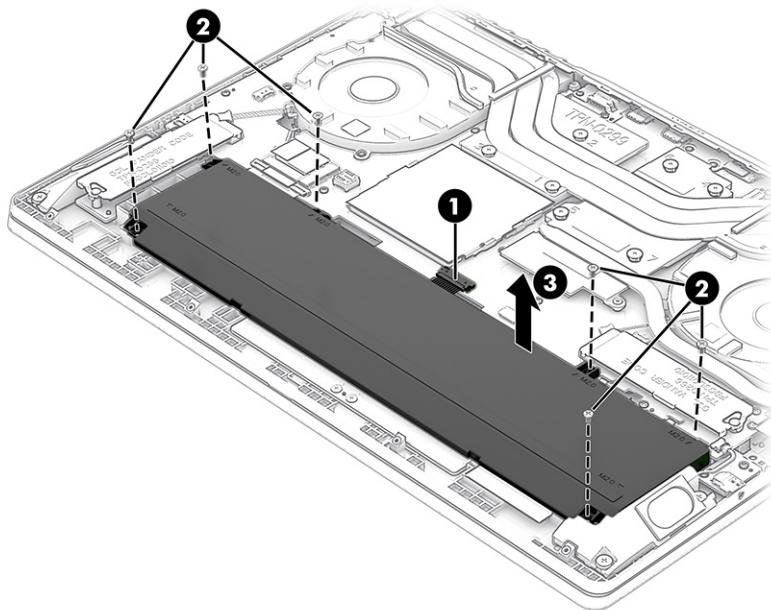

To replace the battery, reverse the removal procedures.

💡 NOTE: When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Installing a new battery

To install a battery, use these procedures and illustrations. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-2 Battery description and part number

Description	Spare part number
6 cell, 83 Whr	P04861-001

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire-extinguisher for use in an emergency.

 **WARNING!** This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop and contact HP Support for assistance. Do not try to remove a battery by force.

 **NOTE:** Screw locations, latch locations, and internal components might vary.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).

 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

-
1. Remove the battery using the revive kit:


- a. Disconnect the battery cable from the system board. The connector location might vary.

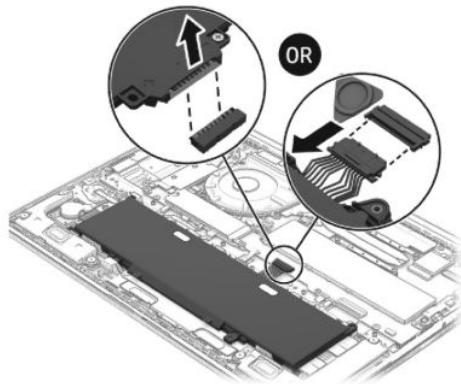

- b. Open the empty battery containment tray.




- c. Remove the paper backing layer from the adhesive on the tray.

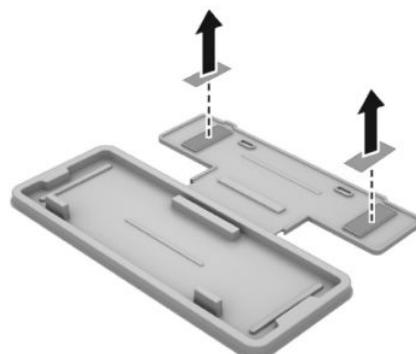


- d. Turn the tray (1) over so that the adhesive is facing down.
e. Place the tray (2) centered on the battery.


- f. Press down on the indentations on the tray (3) to adhere it to the battery.

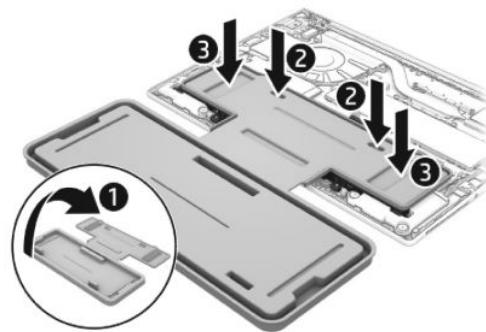

- g. Remove the Phillips screws (1) that secure the battery to the computer. Number of screws and screw locations might vary.
- h. Lift the top of the tray (2) to remove the battery from the computer.

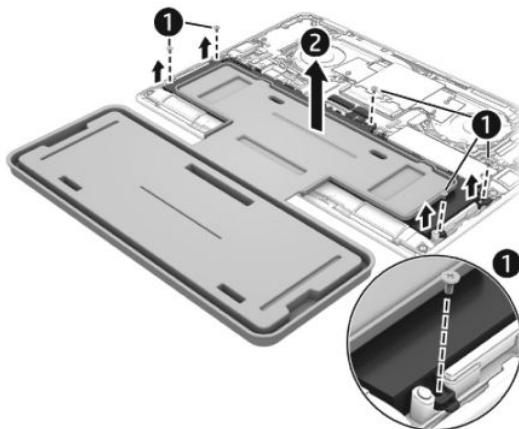


- i. Rotate the battery up and over into the cavity of the containment tray.

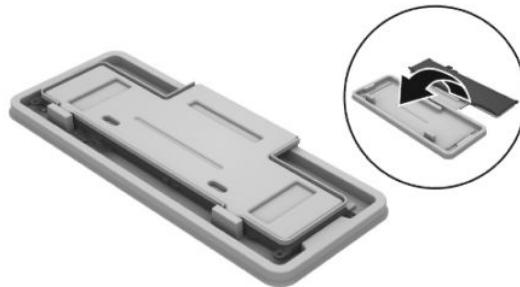


 **NOTE:** Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

2. Install the battery using the revive kit:
 - a. Open the containment tray that includes the new battery.
 - b. Turn the tray (1) over so the battery is facing downward, and then insert the battery (2) into the computer. Adhesive secures the battery to the tray.

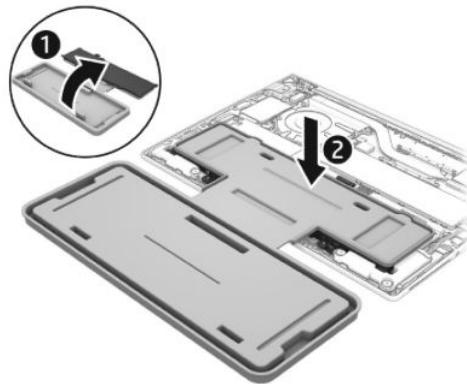


2.
 - c. Install the Phillips screws (1) to secure the battery. Number of screws and screw locations might vary.

- d. Lift the containment tray (2) off the battery.

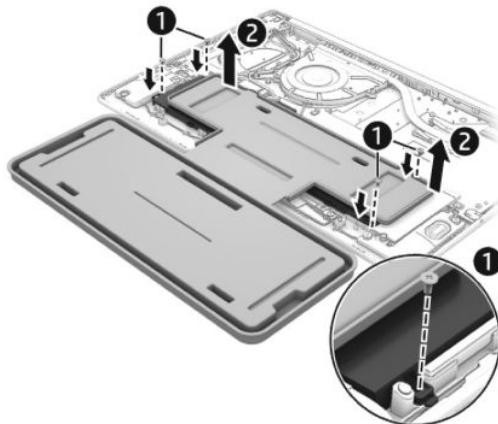

- e. Connect the battery cable to the system board. The connector location might vary.

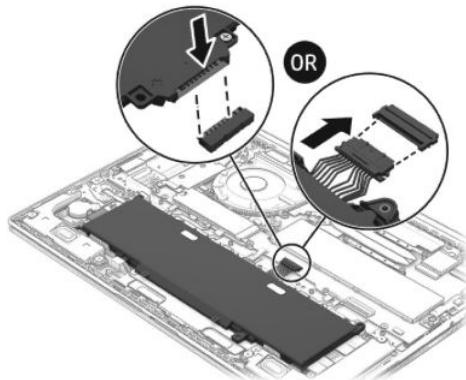

NOTE: When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Solid-state drive

To remove the SSD, use this procedure and illustration.

Table 5-3 SSD descriptions and part numbers


Description	Spare part number
1 TB, TLC	M16560-001
1 TB	N45474-001
512 GB, TLC	M17436-001
512 GB	N45476-001
512 GB (nM) (for use in dual storage configurations)	N77392-001
SSD thermal pad	P00204-001

Before removing the SSD, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

Remove the SSD:

1. Remove the Phillips screw **(1)** from the SSD, and then pull the drive assembly **(2)** away from the socket to remove it.

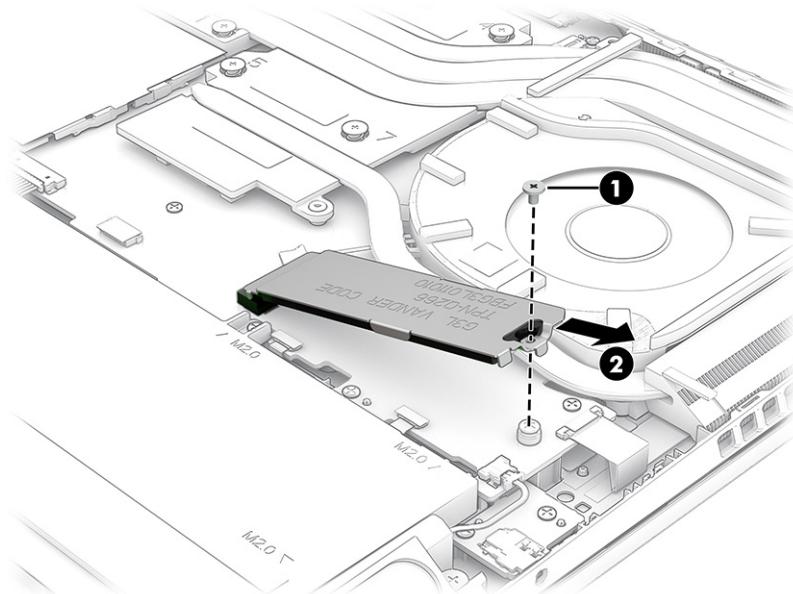

2. Pull the bracket straight up and off the SSD.

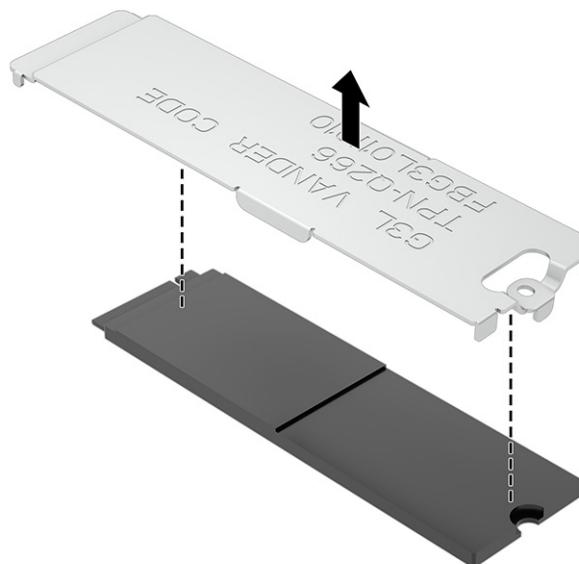

To install the SSD, reverse the removal procedures.

When installing an SSD, be sure that a thermal pad is installed on the bottom of the SSD bracket as shown in the following illustration.



When installing an SSD **in the socket to the left of the battery**, be sure that RF tape is installed on the bottom of the SSD bracket as shown in the following illustration.



NOTE: SSDs are designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 5-4 Memory module descriptions and part numbers

Description	Spare part number
Memory module, 16 GB (DDR5-5600)	N38627-001
Memory module, 12 GB (DDR5-5600)	P33447-001
Memory module, 8 GB (DDR5-5600)	N37792-001

Before removing the memory, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

If you are replacing a memory module, remove the existing memory module:

1. Lift the flap (1) that covers the memory modules.
2. Spread the retention clips (2) outward until the memory module tilts up at a 45° angle, and then remove the memory module (3) from the slot.

 **IMPORTANT:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

To protect a memory module after removal, place it in an electrostatic-safe container.

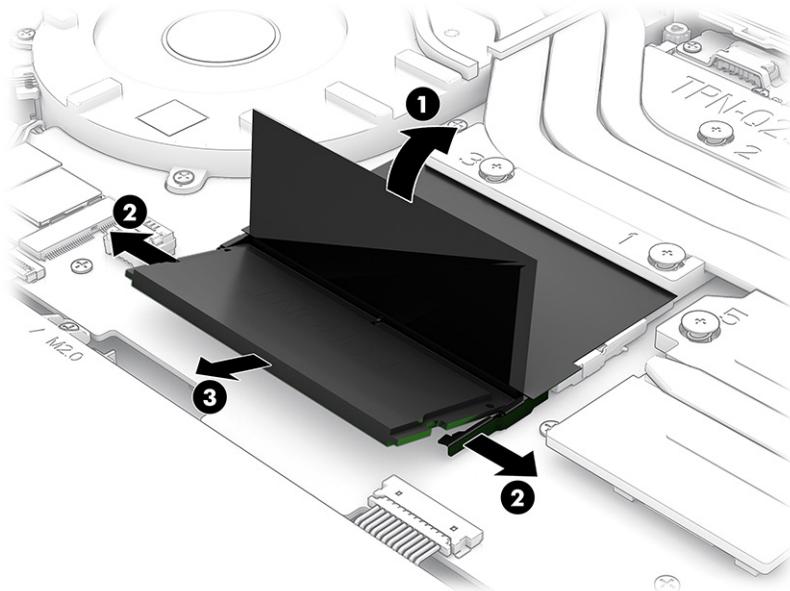

To install memory modules, reverse the removal procedures.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

-
-  **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.
 -  **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.
 -  **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.
-

Component replacement procedures

Use the procedures described in this section to remove and replace computer components.

-
-  **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.
-

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 20](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Display panel and camera module (without removing the display assembly)

You can remove the display panel and camera module without removing the entire display assembly from the computer. To accomplish this task, use these procedures and illustrations.

To remove display subcomponents that require you to remove the display assembly from the computer, see [Display assembly on page 59](#).

Before removing the display subcomponents, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).

3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

Remove the display assembly subcomponents:




NOTE: The display assembly can remain attached to the computer for these procedures.

1. To remove the display panel:

- a. Open the computer to 135°.
- b. Use a tool to release the top (1), left and right sides (2), and bottom (3) of the bezel from the display.
- c. Remove the bezel (4) from the display.



NOTE: To avoid damaging the panel, avoid using a tool to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

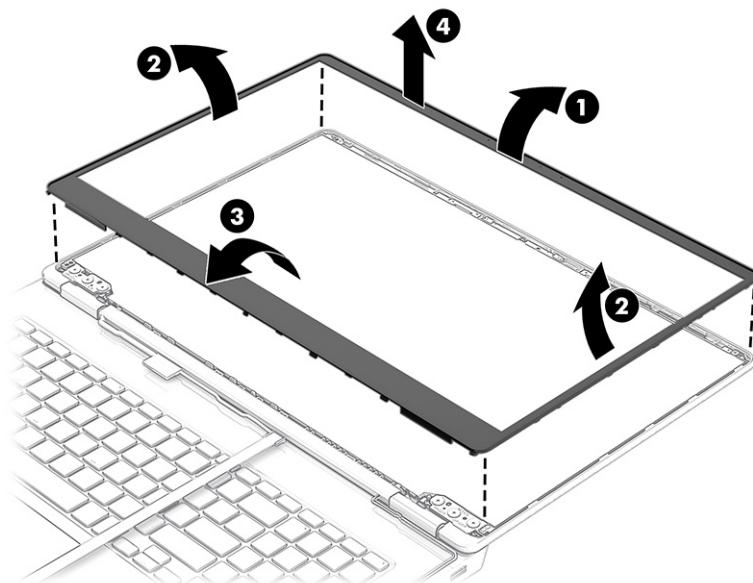


The display bezel is available as spare part number N96212-001.


- d. The display panel is secured to the display enclosure with tape that is installed in two locations under the panel. To remove the panel, use tweezers to grasp the end of each piece of tape (1). Pull the tape (2) out from behind the display panel. You must pull the tape multiple times before it is completely removed. Rotate the top of the panel (3) up and over and place it next to the display rear cover.



NOTE: Pull the tape out slowly and evenly to prevent it from breaking prematurely.

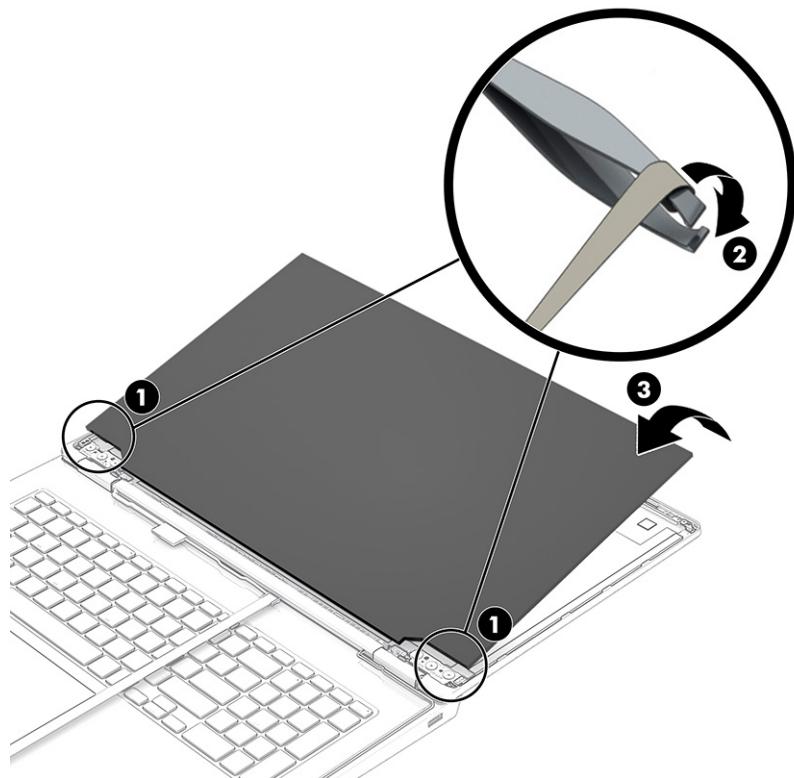


- e. Peel back (do not remove) the conductive tape (1) from the connector on the bottom of the panel. Lift the locking bar (2), and then disconnect the cable (3) from the panel.

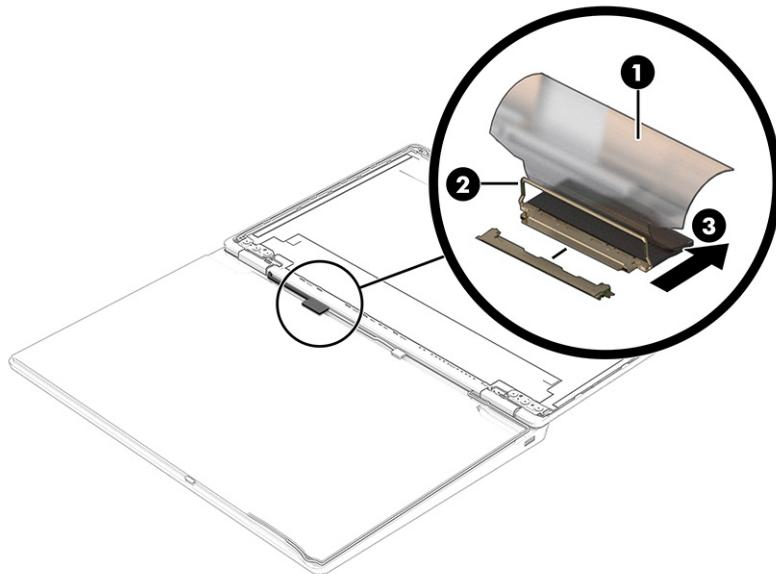

- f. When installing a display panel, use the following illustration to determine tape installation locations on the inside of the display rear cover.

 **NOTE:** When installing the tape onto the display rear cover, be sure that the end of the tape is visible and accessible, and extends out slightly from under the installed display panel.

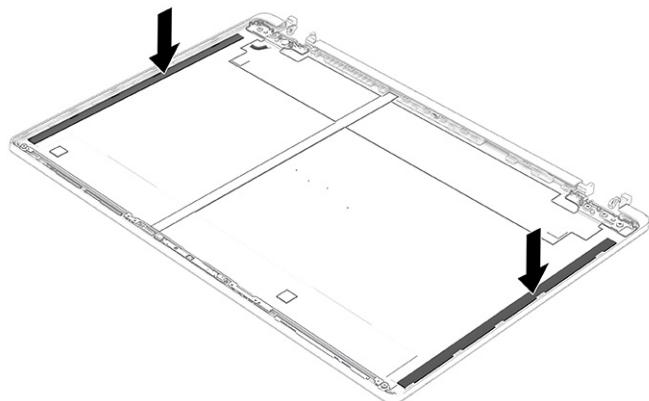

Display panels are available as spare part number N96195-001 for QHD models and N96194-001 for FHD models.


Display panel adhesive is available as spare part number P00205-001.

2. To remove the camera module:

- a. Remove the two Phillips M2.0 × 2.0 screws (1) from the camera bracket, and then remove the bracket (2).



NOTE: Both sides of the camera bracket are inserted under the hinges.

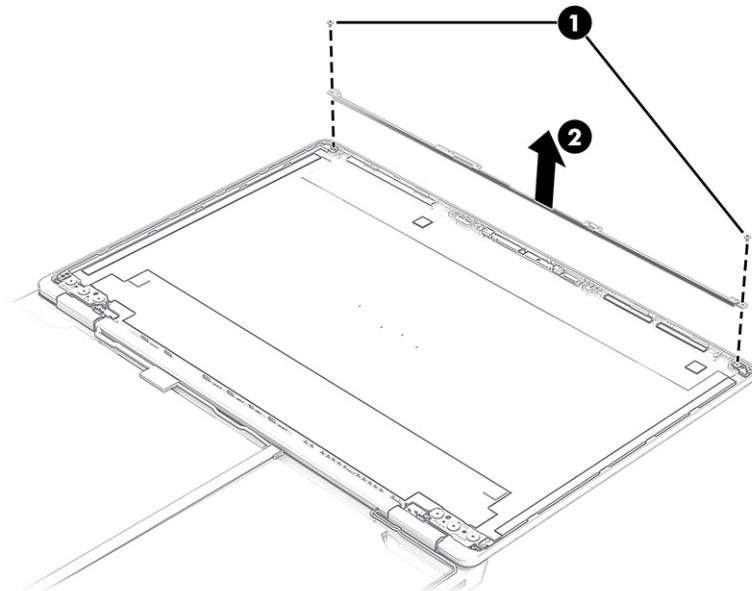


The camera bracket is available as spare part number N96215-001.

- b. Use a thin pry tool (1) to release the bottom of the module.
- c. Using both hands, turn the module (2) upside down.



NOTE: To avoid damaging the module, be sure to support both sides of the module during removal.

- d. Disconnect the cable from the ZIF connector (3) on the camera module.

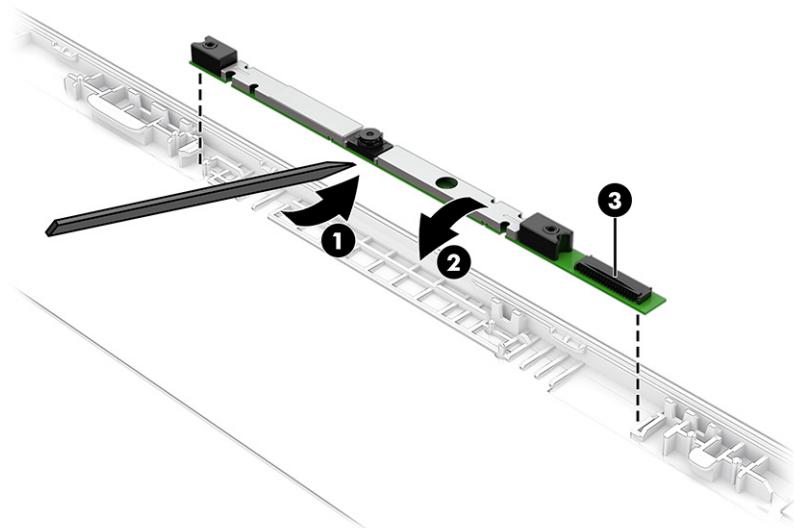

The camera module is available as spare part number N96214-001.

To install the display panel and camera with the display attached to the computer, reverse these procedures.

RJ-45 board

To remove the RJ-45 board, use this procedure and illustration.

Table 6-1 RJ-45 board descriptions and part numbers

Description	Spare part number
RJ-45 board	P44307-001
RJ-45 board cable	N96200-001


Before removing the RJ-45 board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

Remove the RJ-45 board:

1. Disconnect the cable from the ZIF connector (1) on the RJ-45 board.

2. Remove the two Phillips M2.0 × 4.0 screws (2) from the board, and then remove the board (3).

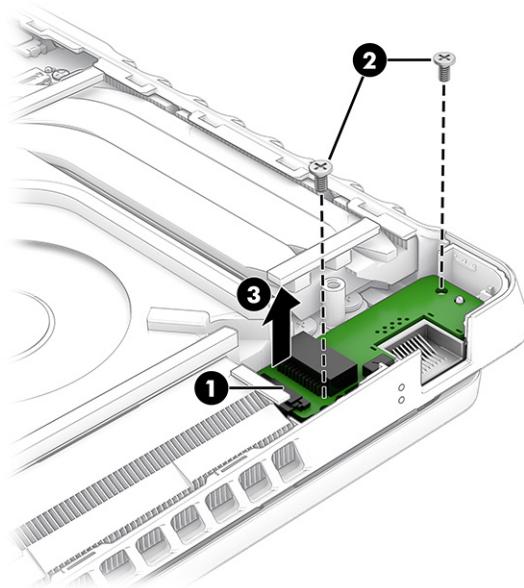

To install the RJ-45 board, reverse the removal procedure.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 6-2 WLAN module descriptions and part numbers

Description	Spare part number
Realtek 8852BE-VT Wi-Fi 6 + Bluetooth 5.4	P06350-005
MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WLAN	N22541-005
WLAN module protective tape	M14330-001

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

Remove the WLAN module:


1. Remove the plastic antenna protector (1) from the module.
2. Carefully disconnect the antenna cables (2) from the module.

3. Remove the Phillips M2.0 × 3.0 screw (3), and then remove the WLAN module (4) from the computer.

 **NOTE:** The #1 white WLAN antenna cable connects to the WLAN module Main terminal. The #2 black WLAN antenna cable connects to the WLAN module Aux terminal.

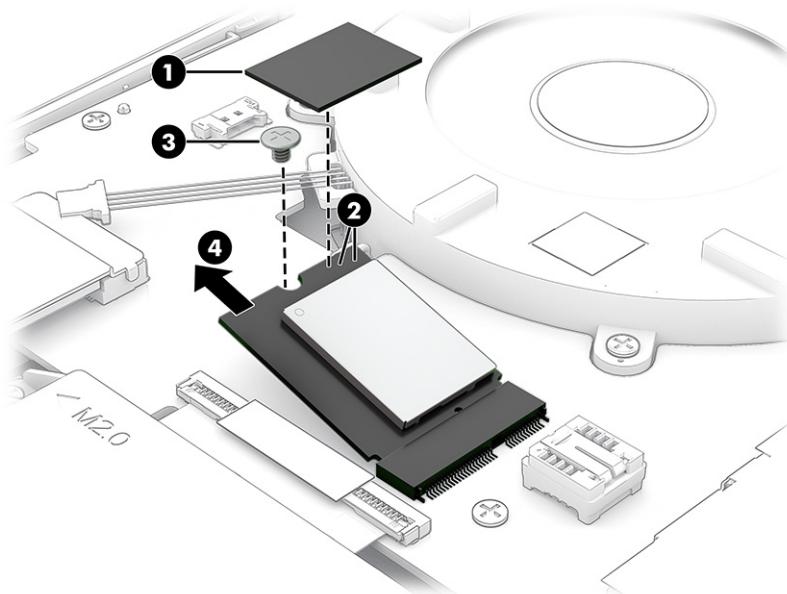

4. If the WLAN antenna is not connected to the terminal on the WLAN module, you must install a protective sleeve on the antenna connector, as shown in the following illustration.

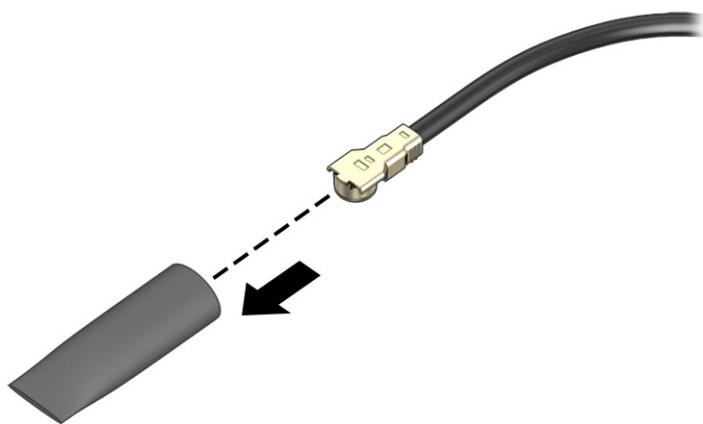

To install the WLAN module, reverse the removal procedure.

Speakers

To remove the speakers, use this procedure and illustration.

Table 6-3 Speaker description and part number


Description	Spare part number
Speakers	N96209-001

Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

Remove the speakers:

1. Disconnect the speaker cables (1) from the system board.
2. Remove the two Phillips M2.0 × 2.0 screws (2) from each speaker.
3. Remove the speakers (3) from the computer.

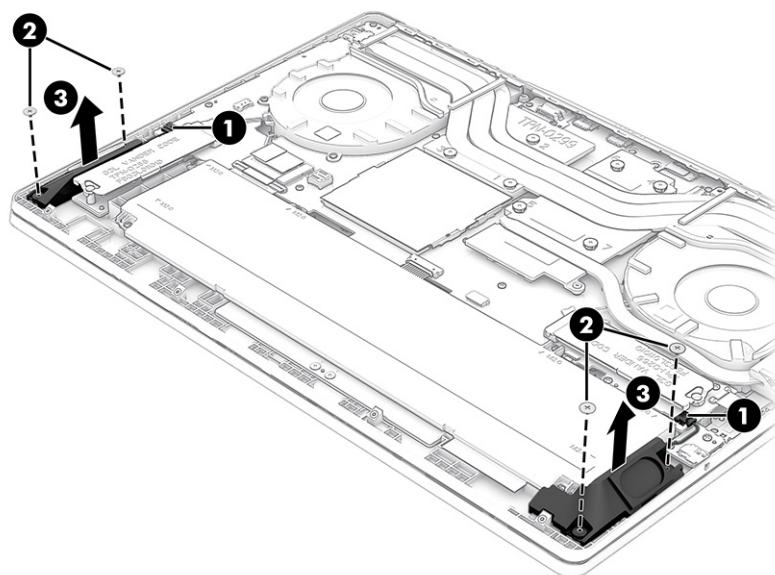

To install the speakers, reverse the removal procedure.

Heat sink

To remove the heat sink, use this procedure and illustration.

Table 6-4 Heat sink descriptions and part numbers

Description	Spare part number
Heat sink	P44309-001
Thermal grease	N86911-001


Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).


3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).

Remove the heat sink:

1. In the order of the screws labeled from '7' to '1' on the heat sink, loosen the seven captive Phillips screws **(1)** that secure the heat sink to the system board.
2. Lift the front of the heat sink **(2)** up to approximately 30°, and then while holding the heat sink on both sides **(3)**, pull it into the computer and out from under the vents.

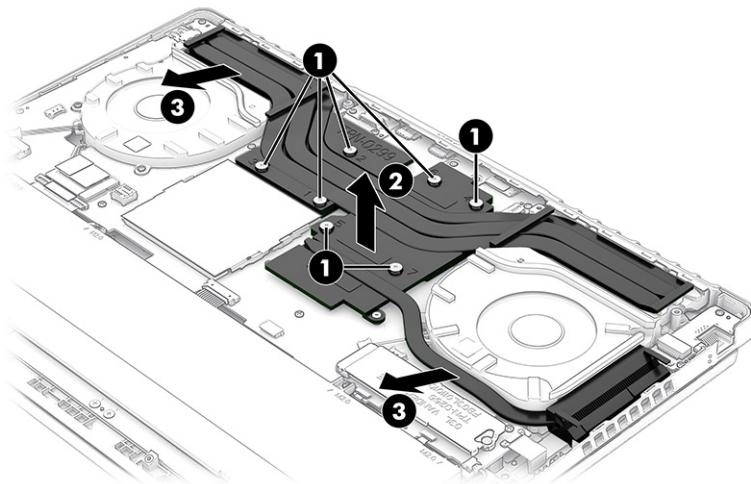

3. Install gray thermal grease **(1)** and white thermal grease **(2)** onto the bottom of the heat sink, as shown in the following illustration.

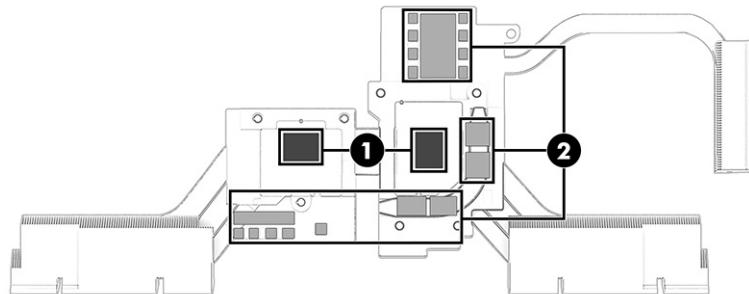

To install the heat sink, reverse the removal procedure.

When installing the heat sink, tighten the screws in the order from '1' to '7'.

Fans

To remove the fans, use this procedure and illustration.

Table 6-5 Fans descriptions and part numbers


Description	Spare part number
Fan kit (includes left and right fans)	N96207-001
NOTE: Be sure to replace both fans at the same time. Do not replace only one fan.	
Fan protective tape	P15502-001

Before removing the fans, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 32](#)).
4. Remove the heat sink (see [Heat sink on page 49](#)).

Remove the fans:

1. Disconnect both fan cables (1) from the system board.
2. Remove the three Phillips M2.0 × 4.0 screws (2) that secure each fan to the computer.
3. Remove the fans from the computer (3).

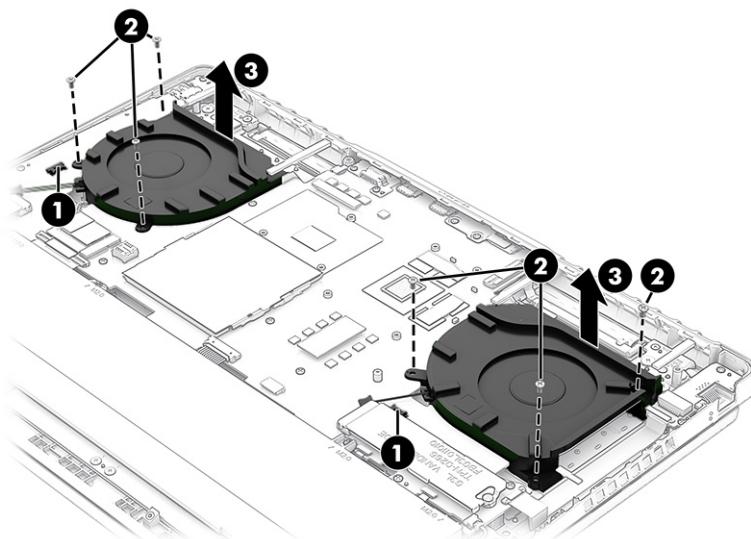

To install the fans, reverse the removal procedure.

System board

To remove the system board, use these procedures and illustrations.

Table 6-6 System board descriptions and part numbers

Description	Spare part number
System board (includes processor):	

Table 6-6 System board descriptions and part numbers (continued)

Description	Spare part number
AMD Ryzen AI 9 365 processor and NVIDIA GeForce RTX 5070 graphics	P44303-601
AMD Ryzen AI 9 365 processor and NVIDIA GeForce RTX 5060 graphics	P44301-601
AMD Ryzen AI 7 350 processor and NVIDIA GeForce RTX 5070 graphics	P44302-601
AMD Ryzen AI 7 350 processor and NVIDIA GeForce RTX 5060 graphics	P44300-601
AMD Ryzen AI 7 350 processor and NVIDIA GeForce RTX 5050 graphics	P44298-601
AMD Ryzen AI 5 340 processor and NVIDIA GeForce RTX 5060 graphics	P44299-601

Before removing the system board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).
4. Remove the SSD (see [Solid-state drive on page 38](#)).
5. Remove the heat sink (see [Heat sink on page 49](#)).
6. Remove the fans (see [Fans on page 50](#)).

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:


- Memory modules (see [Memory modules on page 40](#)).
- WLAN module (see [WLAN module on page 47](#)).

Remove the system board:


1. Disconnect the following cables from the system board:
 - IR board (ZIF) (1)
 - Display cable (ZIF) (2)
 - RJ-45 board cable (ZIF) (3)
 - Speaker cable (4)
 - Audio board cable (ZIF) (5)
 - Touchpad cable (ZIF) (6)
 - Keyboard backlight cable (ZIF) (7)
 - Keyboard cable (ZIF) (8)
 - WLAN antennas from the WLAN module (9)
 - Speaker cable (10)

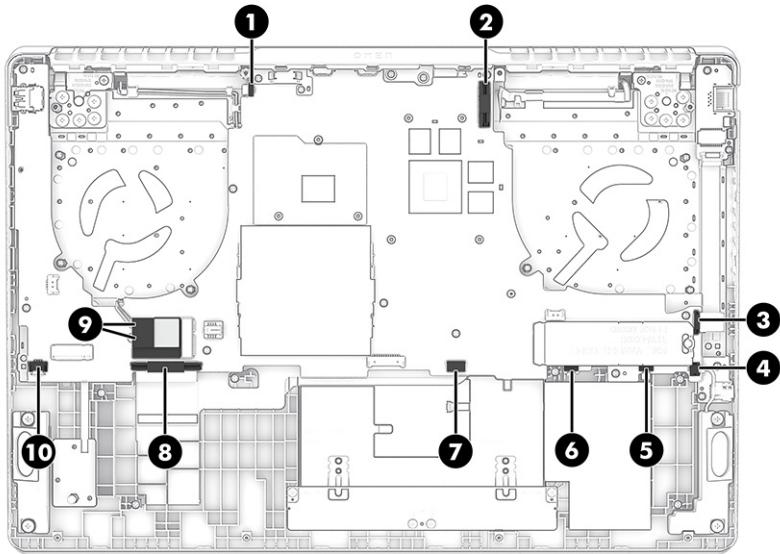


2. Remove the 14 Phillips M2.0 × 2.5 screws that secure the system board to the computer.

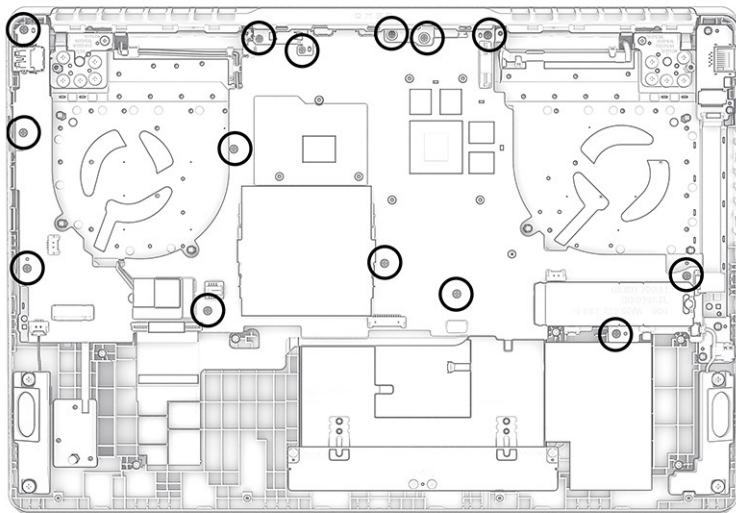

3. Lift up the bottom of the system board (1), and then pull the system board (2) away from the rear connectors to remove it from the computer.

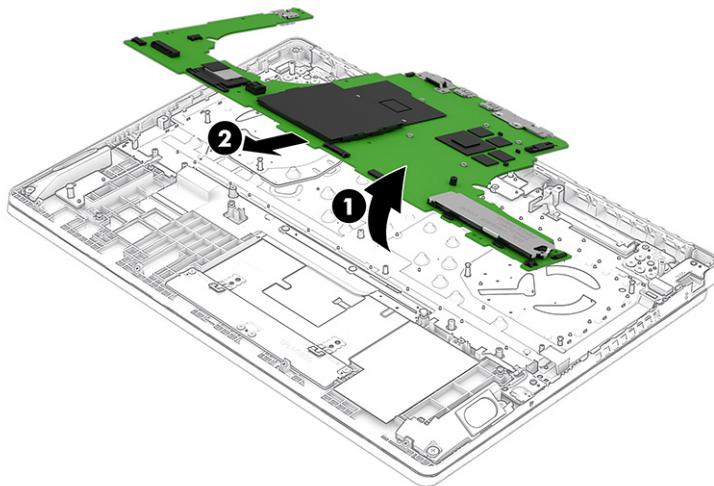

4. Pull the power connector bracket (1) and the USB bracket (2) off the system board. Be sure to install the brackets onto the new system board.

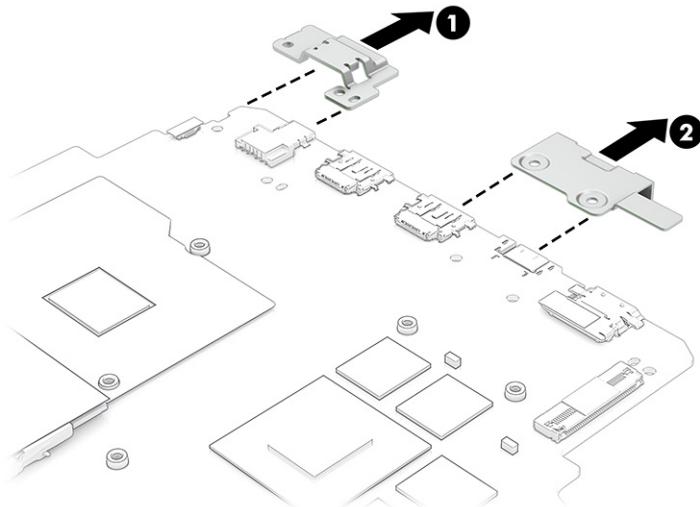

To install the system board, reverse the removal procedure.

IR board

To remove the IR board, use this procedure and illustration.

Table 6-7 IR board descriptions and part numbers


Description	Spare part number
IR board (includes cable)	P44306-001
IR board cable	N96198-001

Before removing the IR board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).
4. Remove the SSD (see [Solid-state drive on page 38](#)).
5. Remove the heat sink (see [Heat sink on page 49](#)).
6. Remove the fans (see [Fans on page 50](#)).
7. Remove the system board (see [System board on page 51](#)).

Remove the IR board:

1. Remove the Phillips M2.0 × 4.0 screw **(1)** that secures the board to the computer.
2. Peel the cable **(2)** off the computer.
3. Remove the board and cable **(3)** from the computer.

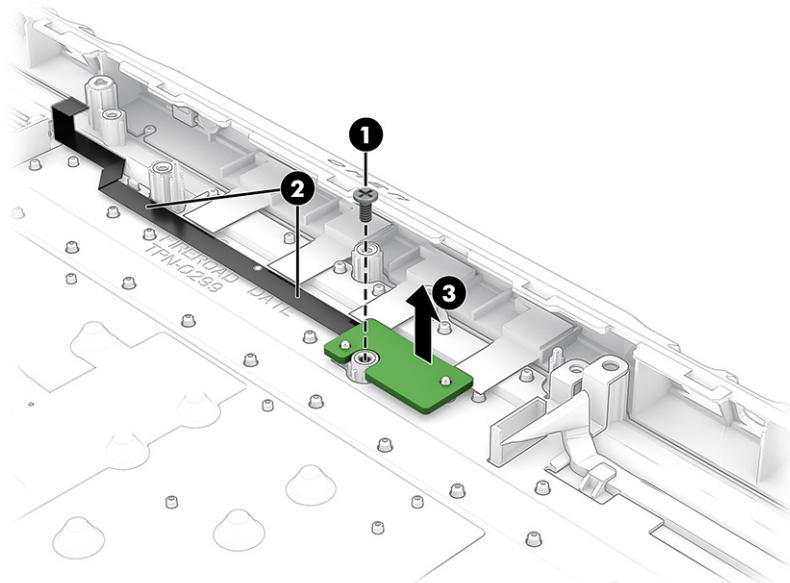

4. Disconnect the cable from the ZIF connector on the IR board.

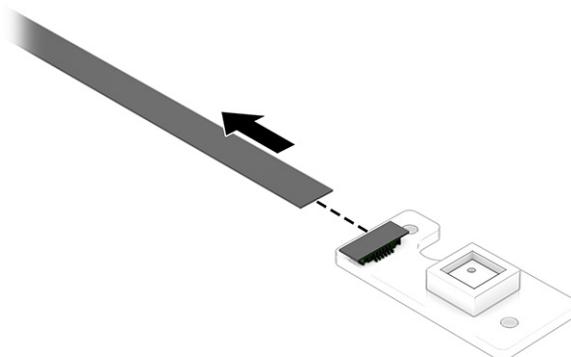

To install the IR board, reverse the removal procedure.

Audio board

To remove the audio board, use this procedure and illustration.

Table 6-8 Audio board descriptions and part numbers


Description	Spare part number
Audio board (includes cable)	P44308-001
Audio cable	N96202-001

Before removing the audio board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).
4. Remove the SSD (see [Solid-state drive on page 38](#)).
5. Remove the heat sink (see [Heat sink on page 49](#)).
6. Remove the fans (see [Fans on page 50](#)).
7. Remove the system board (see [System board on page 51](#)).

Remove the audio board:

1. Remove the two Phillips M2.0 × 4.0 screws (1) that secure the board to the computer.
2. Remove the board (2) and cable from the computer.

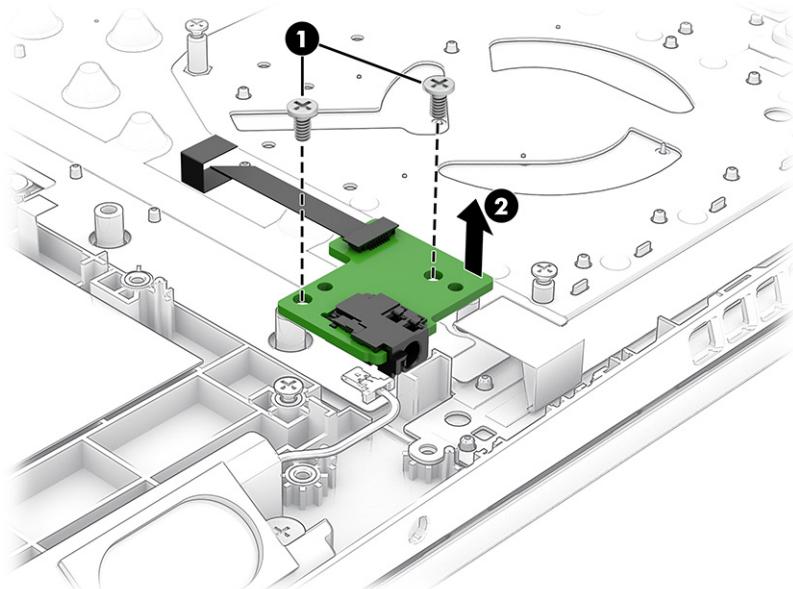

3. Disconnect the cable from the ZIF connector on the audio board.

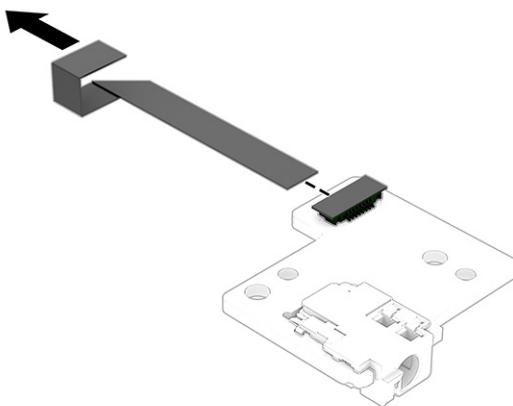

To install the audio board, reverse this procedure.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 6-9 Touchpad descriptions and part numbers

Description	Spare part number
Touchpad	N96203-001
Touchpad cable	N96205-001


Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).
4. Remove the SSD (see [Solid-state drive on page 38](#)).
5. Remove the heat sink (see [Heat sink on page 49](#)).
6. Remove the fans (see [Fans on page 50](#)).
7. Remove the system board (see [System board on page 51](#)).


Remove the touchpad:

1. Lift the foil (1) that covers the two outer screws on the touchpad bracket.
2. Remove the four Phillips M1.6 × 2.5 screws (2) from the bracket.


3. Remove the bracket (3) from the computer.

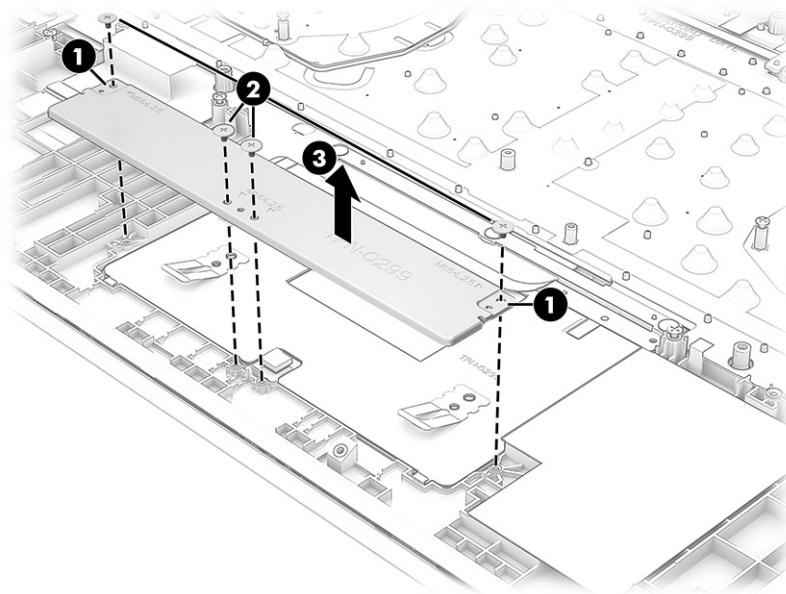

4. Disconnect the touchpad cable from the ZIF connector (1) on the touchpad.
5. Remove the three Phillips M2.0 x 2.0 screws (2) from the touchpad.
6. Lift the conductive tape (3) off the top of the touchpad.
7. Remove the touchpad (4) from the computer.

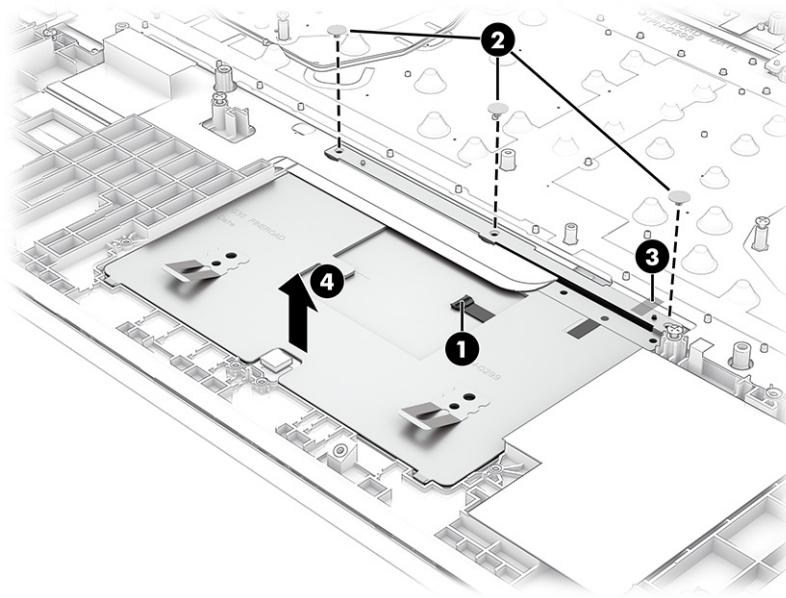

8. When installing a new touchpad, be sure to install two rubber bumpers between the mark lines in the locations shown in the following illustration.

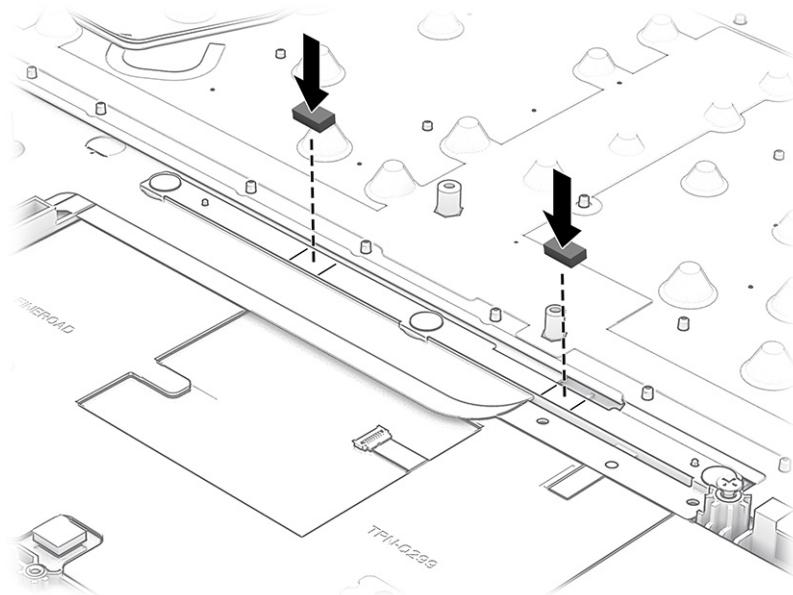

To install the touchpad, reverse the removal procedures.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.



NOTE: The display assembly is spared at the subcomponent level. For display assembly spare part information, see the individual removal subsections.


Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).
4. Remove the SSD (see [Solid-state drive on page 38](#)).
5. Remove the heat sink (see [Heat sink on page 49](#)).
6. Remove the fans (see [Fans on page 50](#)).
7. Remove the system board (see [System board on page 51](#)).

Remove the display assembly:


1. Remove antenna cables from the tape and clips (1) in the computer.

2. Remove the display cable from the clips (2) near the top of the computer.

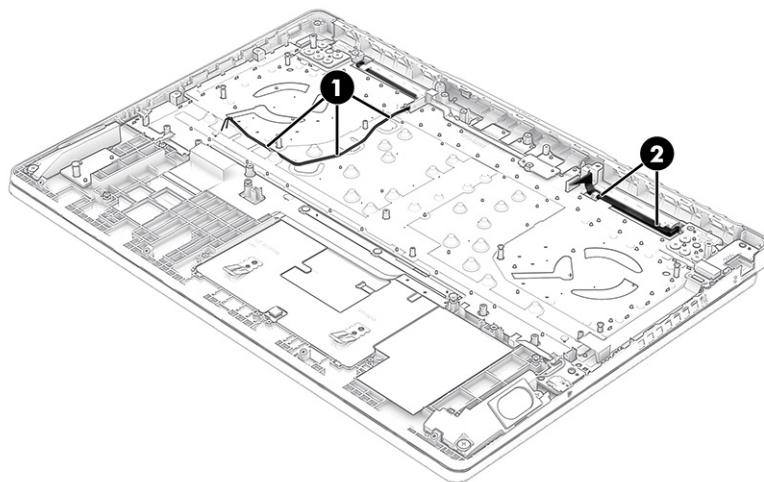


3. Remove the Phillips M2.5 x 3.5 screw (1) from each hinge cover, and then press the tab (2) on each hinge cover to release it. The hinge caps drop out of the bottom of the display


Right hinge cover:

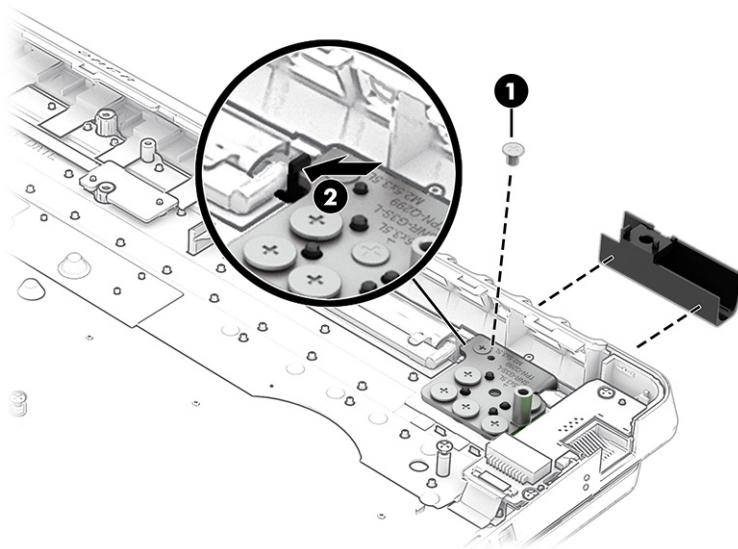


Left hinge cover:

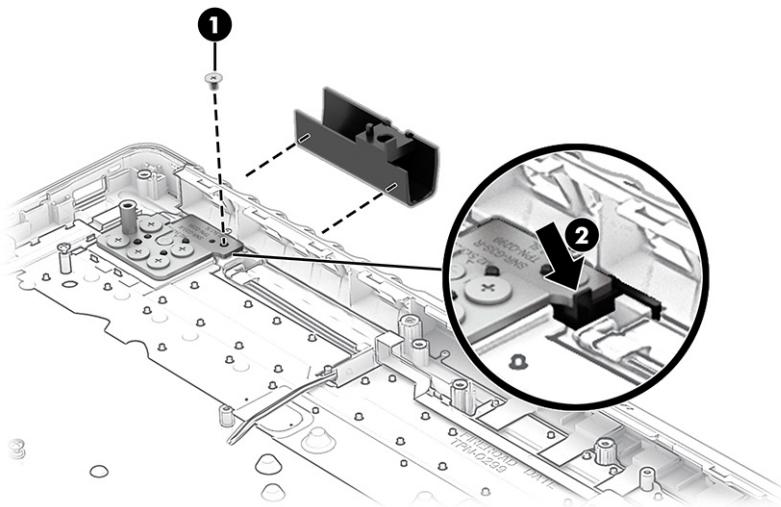


4. Remove the 10 Phillips M2.5 x 4.0 screws (1) that secure the display assembly to the computer, and then remove the brackets (2) from each hinge.

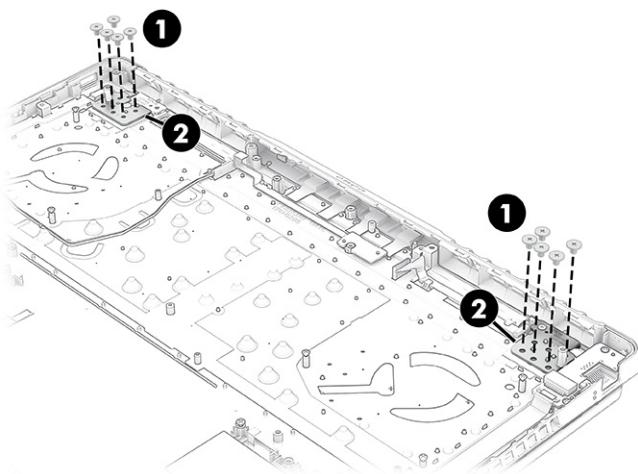

5. Note the locations of the two hinge rubber pieces. Be sure to install these rubber pieces when you reassemble the display.

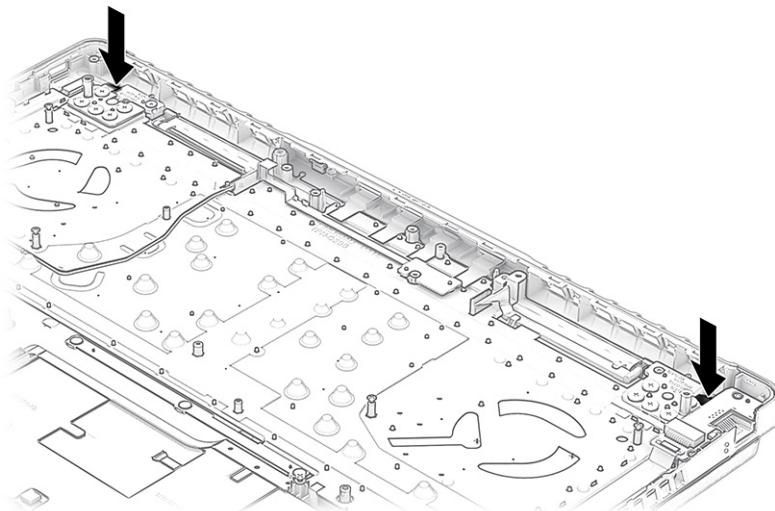


6. Remove the one remaining Phillips 2.5 x 3.5 screw (1) from each hinge.
7. Open the display to 90° (2), and then separate the display (3) from the computer.

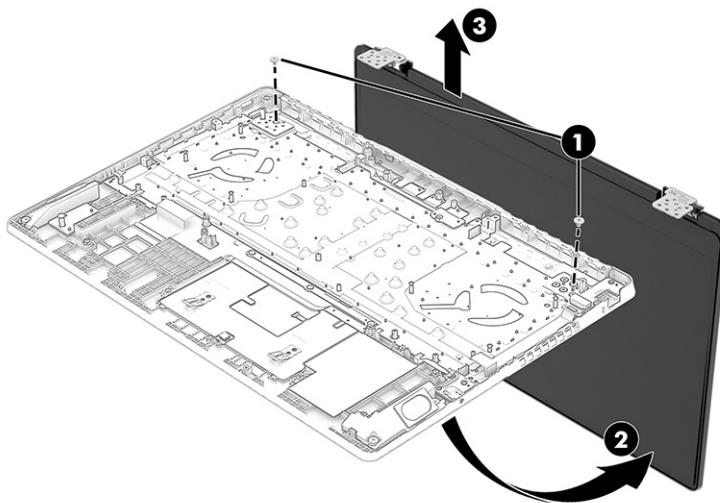

8. To remove the display panel from the display assembly:
 - a. Open the computer to 135°.
 - b. Use a tool to release the top (1), left and right sides (2), and bottom (3) of the bezel from the display.
 - c. Remove the bezel (4) from the display.

 **NOTE:** To avoid damaging the panel, avoid using a tool to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

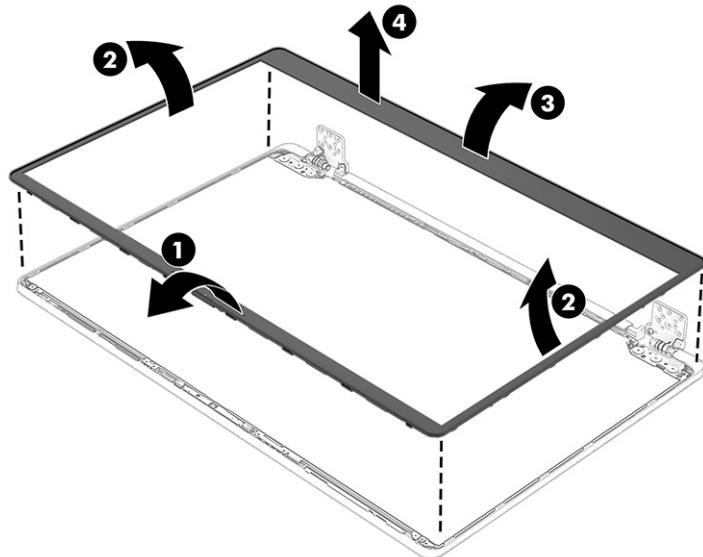


The display bezel is available as spare part number P44311-001.


- d. The display panel is secured to the display enclosure with tape that is installed in two locations under the panel. To remove the panel, use tweezers to grasp the end of each piece of tape (1). Pull the tape (2) out from behind the display panel. You must pull the tape multiple times before it is completely removed. Rotate the top of the panel (3) up and over and place it next to the display rear cover.



NOTE: Pull the tape out slowly and evenly to prevent it from breaking prematurely.

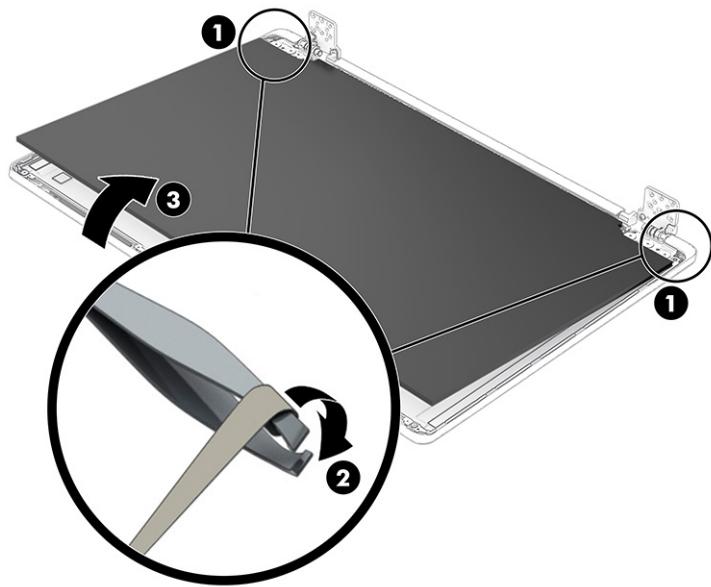


- e. Peel back (do not remove) the conductive tape (1) from the connector on the bottom of the panel. Lift the locking bar (2), and then disconnect the cable (3) from the panel.

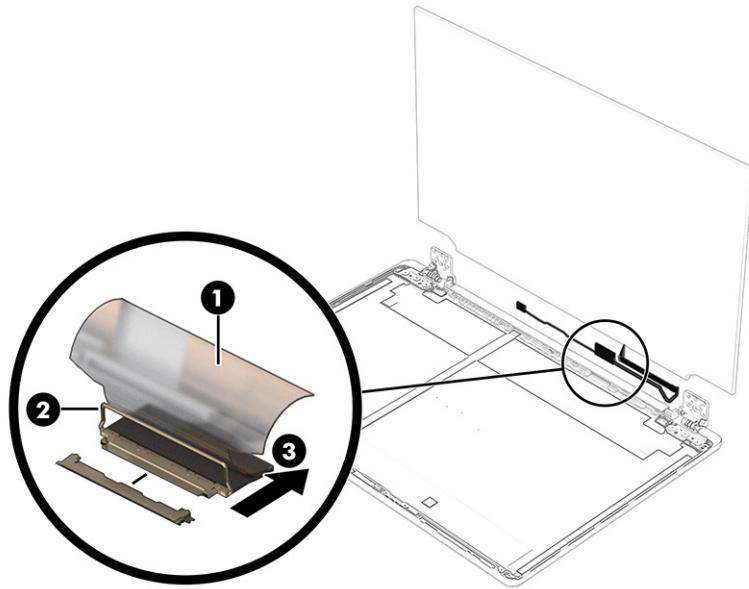

- f. When installing a display panel, use the following illustration to determine tape installation locations on the inside of the display rear cover.

 **NOTE:** When installing the tape onto the display rear cover, be sure that the end of the tape is visible and accessible, and extends out slightly from under the installed display panel.

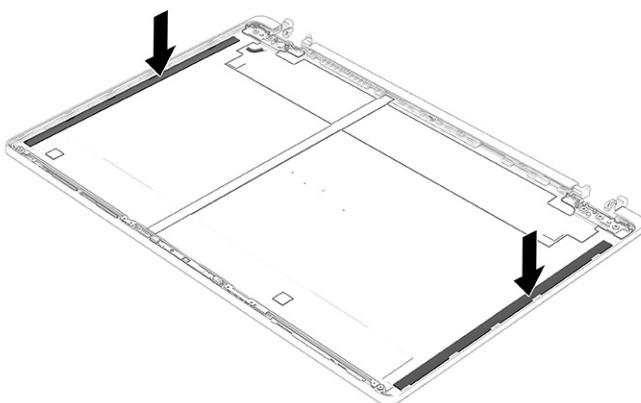

Display panels are available as spare part number N96195-001 for QHD models and N96194-001 for FHD models.


Display panel adhesive is available as spare part number P00205-001.

9. To remove the camera module:

- a. Remove the two Phillips M2.0 × 2.0 screws (1) from the camera bracket, and then remove the bracket (2).



NOTE: Both sides of the camera bracket are inserted under the hinge arms.

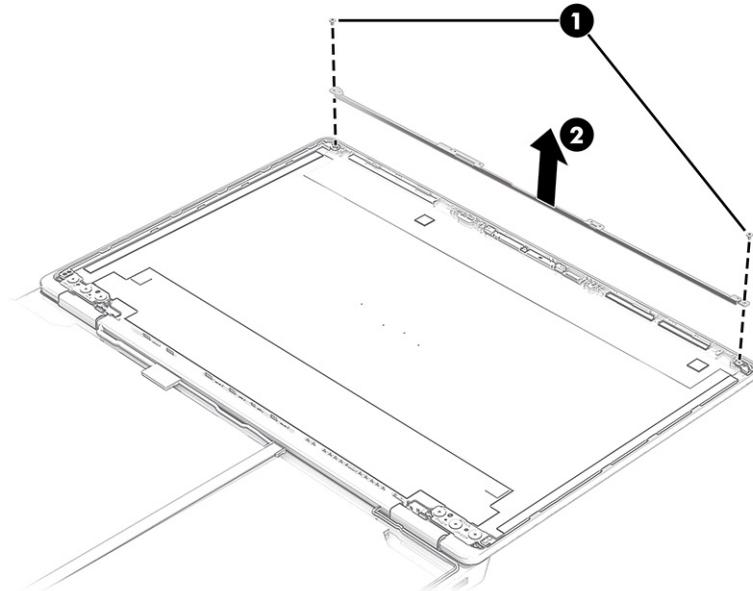


The camera bracket is available as spare part number P44313-001.

- b. Use a thin pry tool (1) to release the bottom of the module.
- c. Using both hands, turn the module (2) upside down.



NOTE: To avoid damaging the module, be sure to support both sides of the module during removal.


- d. Disconnect the cable from the ZIF connector (3) on the camera module.

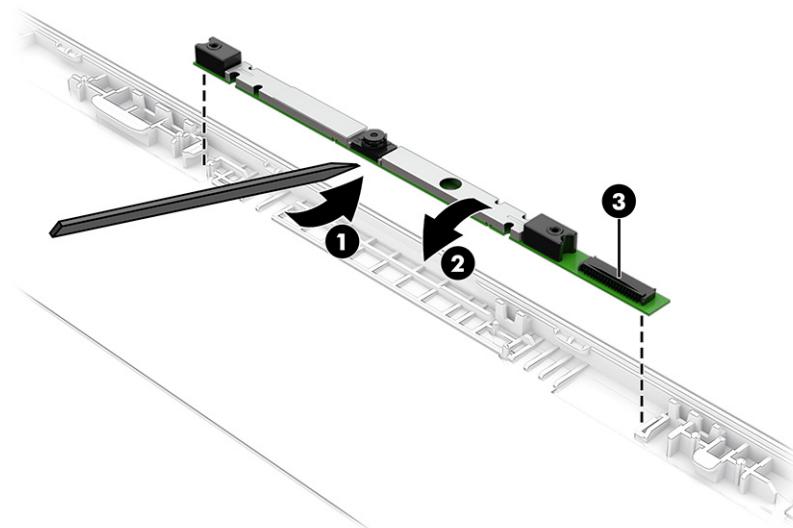

The camera module is available as spare part number P44312-001.

10. To remove the display cable:


- a. Remove the cable from the clips (1) along the bottom of the display back cover.
- b. Peel the cable (2) off the display back cover.

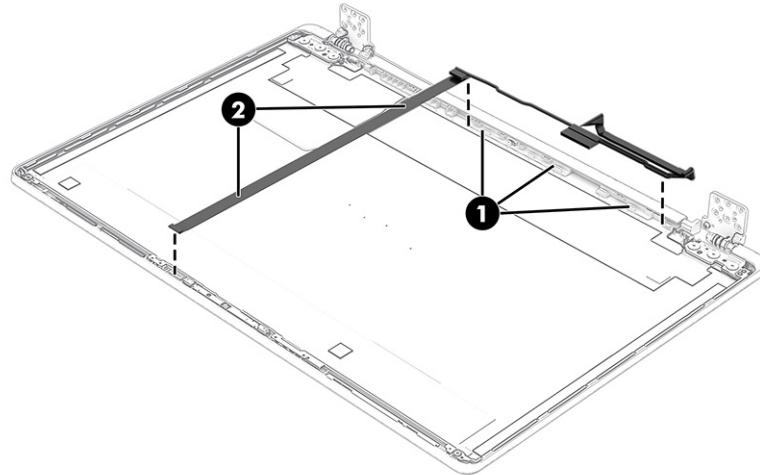

The display cable is available as spare part number P44314-001.

11. To remove the hinges from the display rear cover:

- a. Remove the three Phillips M2.0 × 2.0 screws (1) from the bottom of each hinge.
- b. Pull the hinge arms (2) into the display rear cover, and then remove the hinges and arms.

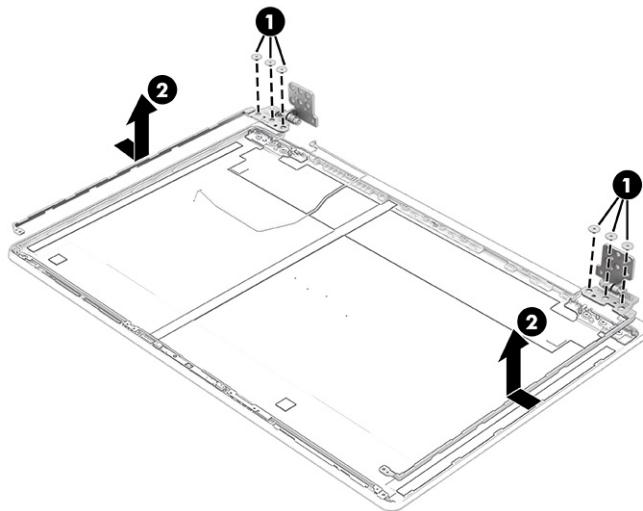


Hinges are available as spare part number N96216-001.

12. To remove the WLAN antennas and cables:

- a. Peel the antennas (1) off the display rear cover.

- b. Remove the antenna cables (2) from the side of the display.

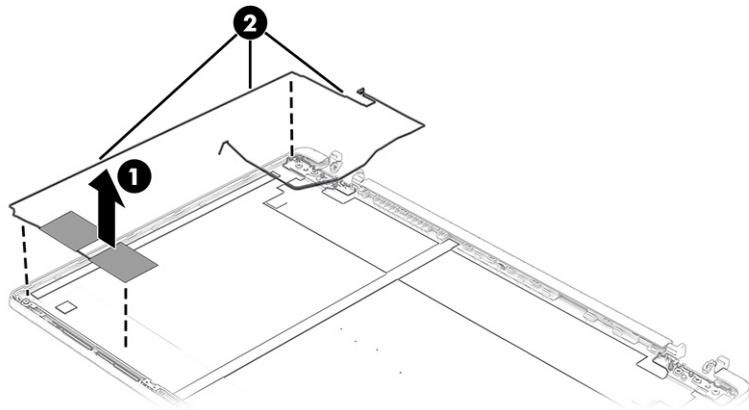


The wireless cables and antennas are available as spare part number N96211-001.

To reassemble and replace the display assembly, reverse these procedures.

NOTE: When installing the tape onto the display rear cover, be sure that the end of the tape is visible and accessible, and extends out slightly from under the installed display panel.

When installing the display, be sure to install the rubber piece next to each hinge.

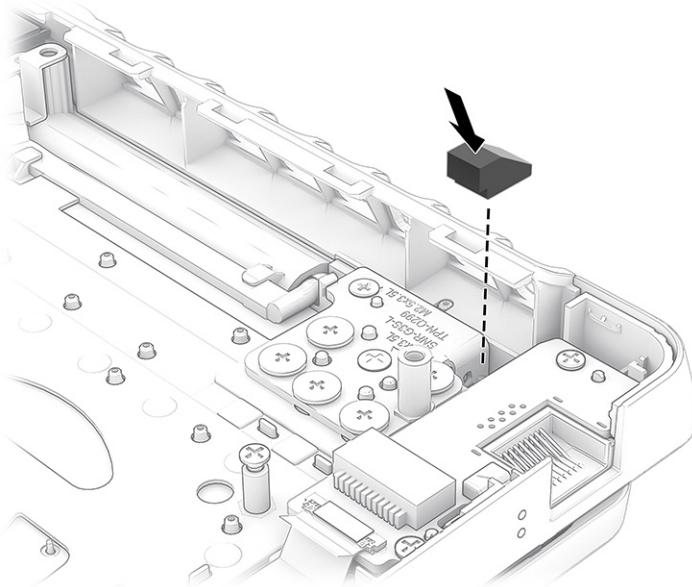

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers with keyboards. The second table provides the country codes.

Table 6-10 Top cover with keyboard descriptions and part numbers

Description	Spare part number
RGB backlit keyboard	P44304-xx1

Table 6-10 Top cover with keyboard descriptions and part numbers (continued)

Description	Spare part number
White backlit keyboard	P44305-xx1

Table 6-11 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Solvenia	-BA1
Brazil	-201	India	-D61	South Korea	-AD1
Bulgaria	-261	Israel	-BB1	Spain	-071
Chile	-161	Italy	-061	Switzerland	-BG1
Czech Republic/Slovakia	-FL1	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001
Hungary	-211	Saudi Arabia	-171		

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).

 **IMPORTANT:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Use one of these options:

- Turn on or restart the computer and quickly press **f10**.
- Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named *Readme .txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
 1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type **support** in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
 2. Under **My notebook**, select **Specifications**.
- Setup Utility (BIOS)

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 69](#)).
 2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **ctrl+alt+s**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 70](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.



IMPORTANT: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the HP AC adapter provided with the computer (select products only), a replacement AC adapter provided by HP, or an AC adapter with the power rating specified on the product label. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.



NOTE: If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.

 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 73](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 73](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.

 **NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see [Recovering using the HP Recovery USB flash drive on page 73](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.

 **NOTE:** You must be connected to the internet to access the Get Help app.

Recovering using the HP Recovery USB flash drive

You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive \(select products only\) on page 72](#).

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.

 **NOTE:** HP recommends that you follow the [Restoring and recovery methods on page 73](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
 - Volume up
 - Volume down
3. Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 76](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Complete one of the following tasks:

- Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
- Select the question mark icon in the taskbar.

2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type **Microsoft Store** in the search box.
2. Type **HP PC Hardware Diagnostics Windows** in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

 **NOTE:** For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 78](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive

 **NOTE:** To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 79](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.

 **NOTE:** You must disable Fast Boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable Fast Boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
 2. Select **Advanced**, and then select **Boot Options**.
 3. Clear **Fast Boot**.
 4. Select **Save Changes and Exit**, and then select **Yes**.
-

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.

 **IMPORTANT:** To prevent loss of data, save your work in all open apps before restarting your computer.

 **NOTE:** When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, input power ratings, and operating specifications provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	397.5 mm	15.65 in
Depth	277.9 mm	10.94 in
Height (front to back)	27.5 mm to 30.0 mm	1.08 in to 1.18 in
Weight	2953 g	6.51 lb
Input power		
Operating voltage and current	19.5 V DC @ 11.8 A - 230 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Non-operating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Non-operating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3048 m	-50 ft to 10,000 ft
Non-operating	-15 m to 12,192 m	-50 ft to 40,000 ft



NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	43.9 cm	17.3 in
Resolution	2560 × 1440 (QHD) 1920 × 1080 (FHD)	
Surface treatment	Antiglare	
Brightness	300 nits	
Viewing angle	UWVA	
Backlight	LCD	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your SSDs.

Table 10-3 SSD specifications

	512 GB*	1TB*
Dimensions		
Height	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm
Weight	<10 g	<10 g
Interface type		
Ready time, maximum (to not busy)	<1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms
Transfer rate		
Sequential read	up to 2150 MBps	up to 2150 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)	

*Actual accessible capacity is less. Actual drive specifications might differ slightly.



NOTE: Certain restrictions and exclusions apply. Contact support for details.

11 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China (PRC)	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KT	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type HO5VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type HO5VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

AC adapter and battery light, identifying 6
AC adapter, spare part numbers 19
action key, identifying 13
audio board
 removal 56
 spare part numbers 56
audio-out (headphone)/audio-in (microphone) combo jack, identifying 6
audio, product description 2

B

backup, creating 72
backups 72
battery
 illustrated 16
 spare part number 16
BIOS
 determining version 69
 downloading an update 70, 71
 starting the Setup Utility 69
 updating 69
Bluetooth label 14
boot order, changing 74
bottom components 13
bottom cover
 illustrated 16
 removal 29
 spare part number 16, 29
buttons
 left touchpad 9, 10
 power 12
 right touchpad 9, 10

C

calculator key, identifying 12
camera
 identifying 9
 illustrated 18
 spare part number 18
camera light, identifying 8
camera privacy cover,
 identifying 9
caps lock light 11

caring for your computer 24

cautions
 electrostatic discharge 20, 21
cleaning your computer 24
 caring for wood veneer 26
 disinfecting 25
 HP Easy Clean 24
 removing dirt and debris 24

components

 bottom 13
 display 7, 8
 keyboard area 9
 left side 5
 lights 10
 rear 6
 right side 5
 touchpad 9, 10
computer major components 15
computer specifications 81
connectors
 power 7
control zone 9

D

display
 specifications 81
display assembly
 subcomponents 17
display back cover
 illustrated 18
 spare part number 18
display bezel
 illustrated 18
 spare part number 18
display cable
 illustrated 18
 spare part number 18
display components 7, 8
display panel
 illustrated 18
 product description 1
 spare part number 18

E

electrostatic discharge (ESD) 20, 21
 preventing damage 20-22

esc key, identifying 12

F

fan
 illustrated 17
 spare part number 17
fans
 removal 50
 spare part number 50
fn key, identifying 12
fn lock key, identifying 12
fn lock light, identifying 11

G

graphics, product description 1
grounding methods 20-22
guidelines
 packaging 20, 26
 transporting 20, 26
 workstation 20

H

hard drive
 product description 2
 specifications 81
HDMI port
 identifying 7
heat sink
 illustrated 16
 removal 49
 spare part number 16, 49
hinge
 illustrated 18
 spare part number 18
HP PC Hardware Diagnostics UEFI
 downloading 78
 failure ID code 77
 HP Hotkey Support
 software 78
 starting 77, 78
 using 77
HP PC Hardware Diagnostics
 Windows
 accessing 75, 76
 downloading 76
 failure ID code 75
 installing 77

using 75
HP Recovery media
recovery 73
HP Sure Recover 74

I

illustrated parts catalog 15
integrated numeric keypad,
identifying 13
internal microphones,
identifying 8
IR board
removal 54
spare part numbers 54

J

jacks
audio-out (headphone)/audio-in
(microphone) 6
network 5, 6
RJ-45 (network) 5, 6

K

keyboard
product description 3
keyboard with top cover
spare part numbers 67
keypad, integrated numeric 13
keys
action 13
calculator 12
esc 12
fn 12
fn lock 12
num lock 13
OMEN 12
Windows 13

L

labels
Bluetooth 14
regulatory 14
serial number 14
service 14
wireless certification 14
WLAN 14
left control zone, identifying 9
left side components 5
lights
AC adapter and battery 6
camera 8
caps lock 11
fn lock 11

mute 11
num lock 11
power 11
RJ-45 (network) status 6
touchpad 9, 11
low blue light mode 8

M

memory module
product description 2
memory modules
illustrated 16
removal 40
spare part number 16
spare part numbers 40
microphone
product description 2
miscellaneous parts, spare part
number 18
model name 1
mute light, identifying 11

N

network jack, identifying 5, 6
num lock key, identifying 13
num lock light 11

O

OMEN key, identifying 12
operating system, product
description 4

P

packaging guidelines 20, 26
pointing device, product
description 3
port with HP Sleep and Charge,
identifying 5
ports
HDMI 7
product description 3
USB 10 Gbps 7
USB Type-C power connector
and 10 Gbps port with HP
Sleep and Charge and
DisplayPort output 7
USB with HP Sleep and
Charge 5
power button, identifying 12
power connector
identifying 7

power cord
requirements for all
countries 83
requirements for specific
countries and regions 83
set requirements 83

power cords, spare part
numbers 19

power light, identifying 11
power requirements, product
description 3

primary storage
product description 2

processor
product description 1

product description
audio 2
display panel 1
graphics 1
hard drive 2
keyboard 3
memory module 2
microphone 2
operating system 4
pointing device 3
ports 3

power requirements 3
primary storage 2
processors 1
product name 1
security 4

serviceability 4
solid-state drive 2
video 2
wireless 3

product name 1
product name and number,
computer 14

R

rear components 6
recovery 72
discs 73
media 73
USB flash drive 73

recovery media 72
creating using HP Cloud
Recovery Download
Tool 72

creating using Windows
tools 72

regulatory information
regulatory label 14
wireless certification labels 14

- Remote HP PC Hardware
 Diagnostics UEFI settings
 customizing 80
 using 79
- removal and replacement
 procedures 29, 42
 solid-state drive 38
- restoring 72
- restoring and recovery
 methods 73
- right control zone, identifying 9
- right side components 5
- RJ-45 (network) jack,
 identifying 5, 6
- RJ-45 (network) status lights,
 identifying 6
- RJ-45 board
 illustrated 17
 removal 46
 spare part number 17
 spare part numbers 46
- S**
- Screw Kit, spare part number 19
- security, product description 4
- serial number, computer 14
- service labels, locating 14
- serviceability, product
 description 4
- solid-state drive
 illustrated 16
 product description 2
 removal and replacement 38
 spare part number 16
 specifications 82
- spare part country codes 67
- speaker
 illustrated 16
 removal 48
 spare part number 16
 spare part numbers 48
- speakers 13
- special keys
 identifying 11
 using 11
- specifications
 computer 81
 display 81
 hard drive 81
 solid-state drive 82
- static electricity 20, 21
- support information 26
- system board
 removal 51
- spare part numbers 51
- system restore 73
- system restore point, creating 72
- T**
- top cover/keyboard
 illustrated 16
 spare part number 16
- touchpad
 illustrated 16
 removal 57
 settings 9
 spare part number 16
 spare part numbers 57
- touchpad buttons
 identifying 9, 10
- touchpad components 9
- touchpad light, identifying 9, 11
- touchpad settings, adjusting 9
- touchpad zone, identifying 9, 10
- transporting guidelines 20, 26
- traveling with the computer 14
- U**
- USB 10 Gbps port, identifying 7
- USB Type-C power connector and
 10 Gbps port with HP Sleep and
 Charge and DisplayPort output,
 identifying 7
- V**
- vents, identifying 6, 14
- video, product description 2
- W**
- wake-on-voice 8
- Windows
 backup 72
 recovery media 72
 system restore point 72
- Windows key, identifying 13
- Windows tools, using 72
- wireless antennas
 illustrated 18
 spare part number 18
- wireless antennas, identifying 8
- wireless certification label 14
- wireless, product description 3
- WLAN antennas, identifying 8
- WLAN device 14
- WLAN label 14
- WLAN module
 illustrated 16
- removal 47
- spare part number 16
- spare part numbers 47
- workstation guidelines 20