

Contact support

To resolve a hardware or software problem, go to <http://www.hp.com/support>. Use this site to get more information about your product, including links to discussion forums and instructions on troubleshooting. You can also find information about how to contact HP and open a support case.

Locate system information

System information is provided on the service label or found in one of the following locations: the bottom of the computer, the back of the display, inside the battery bay, or beneath the service door. The label may be in paper form or imprinted on the product. In some Windows products, you can briefly press the **fn+esc** key combination to display the System Information screen.

Feedback on this document

To help us improve this document, please send any suggestions, comments, or errors to hp.doc.feedback@hp.com. Include the document part number (located near the bar code) when submitting your feedback.

- ⚠ WARNING!** To reduce the risk of electric shock:
- Plug the power cord into an AC outlet that is easily accessible at all times.
 - If the power cord has a 3-pin attachment plug, plug the cord into a grounded (earthed) 3-pin outlet.

For more safety, regulatory, labeling, battery disposal information, and Restriction of Hazardous Substances (RoHS), see the *Regulatory, Safety, and Environmental Notices* provided with your user guides. To locate the user guides for your computer, see the "Find more information" section of this poster.

- ⚠ WARNING!** To reduce the risk of serious injury, read the *Safety & Comfort Guide* provided with your user guides. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is also available on the web at <http://www.hp.com/ergo>.

- ⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

SIMPLIFIED DECLARATION OF CONFORMITY

The Regulatory Model Number (RMN) for this equipment is HSN-I60C, HSN-I61C.

Hereby, HP declares that this equipment is in compliance with Directive 2014/53/EU. To view the Declaration of Conformity for this equipment, go to www.hp.eu/certificates and search using this equipment's RMN.

UK: Hereby, HP declares that this equipment is in compliance with the relevant statutory requirements. To view the Declaration of Conformity for this equipment, go to www.hp.eu/certificates and search using this equipment's RMN.

SOFTWARE TERMS

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

HP Services Scan is provided with Windows Update on select products and will check entitlement on each hardware device to determine if an HP TechPulse-enabled service has been purchased, and will download applicable software automatically. HP TechPulse is a telemetry and analytics platform that provides critical data around devices and applications. For full system requirements or to disable this feature, please visit <http://www.hpdaas.com/requirements>. Not applicable in China.

LIMITED WARRANTY

In some countries or regions, HP may provide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from <http://www.hp.com/go/orderdocuments>. For products purchased in Asia Pacific, you can write to HP at POD, PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your product name, and your name, phone number, and postal address.

© Copyright 2024 HP Development Company, L.P.

Thunderbolt and the Thunderbolt logo are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>.

If your product ships with Windows in S Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: November 2024



Setup instructions ►

Find more information ▼

WINDOWS® PRODUCTS

To learn more about Windows and to access help topics, select the **Start** button , select **All apps**, and then select **Tips** or **Get Help** (requires a network connection).

To access the user guides, select the **Search** icon, type **HP Documentation**, and then select **HP Documentation**.

LINUX® PRODUCTS

To access the user guides, double-click the **HP Documents** icon on the desktop.

FreeDOS PRODUCTS


To access the user guides, select **HP Documents** on the **Boot Menu**.

To view the latest information available for your new computer, including how-to topics, updates, accessories, cleaning, Restriction of Hazardous Substances (RoHS), upgrades, and more, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Setup & User Guides**.




P16871-001

PRINTER: Replace this box with Printed- In (PI) Statement(s) as per spec.
NOTE: This box is simply a placeholder. PI Statement(s) do not have to fit inside the box but should be placed in this area.

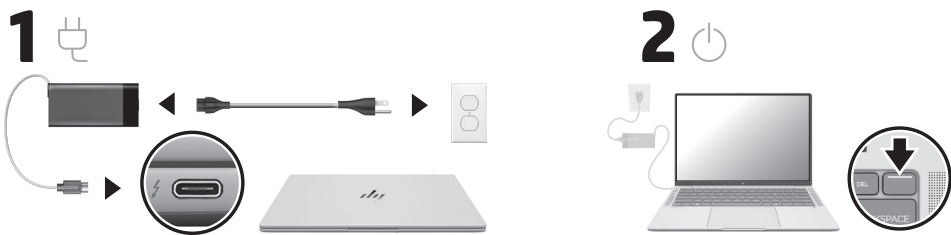

Before you press the power button to turn on the computer for the first time, either connect the HP AC adapter provided with the computer (select products only) or a minimum 65 W adapter to maximum 100 W adapter, depending on your product.

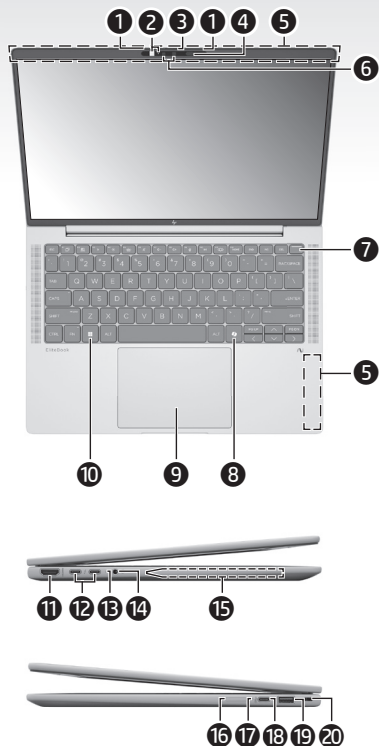

- 1 Internal microphones (2)
- 2 Camera lights (2)
- 3 Camera privacy cover
- 4 Ambient light and color sensor
- 5 Internal wireless antenna(s)*
- 6 Cameras (2)
- 7 Power button/Fingerprint reader*
- 8 Windows Copilot key**
- 9 Touchpad
- 10 Windows key
- 11 HDMI port
- 12 USB Type-C® Thunderbolt™ ports (2)
- 13 Battery light
- 14 Audio-out (headphone)/ Audio-in (microphone) combo jack
- 15 Magnetic pen attachment area
- 16 Nano SIM card slot
- 17 Battery light
- 18 USB Type-C port
- 19 USB port
- 20 Security cable slot
- 21 Speakers (2)
- 22 Vent

* Select products only.

** Copilot in Windows requires Windows 11. Some features require a neural processing unit. The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. Where the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See <http://aka.ms/WindowsAIFeatures>.

Actual computer color, features, feature locations, icon labels, and accessories might vary from the image depicted.



Select the **Network** icon in the lower-right corner of the taskbar, and then connect to one of the available networks.

To set up a WLAN and connect to the internet, you need a broadband modem (DSL or cable, purchased separately), internet service purchased from an internet service provider, and a wireless router (purchased separately).

Windows Start screen

Depending on your product, you can use a keyboard and mouse, a touchpad, or a touch screen to navigate the Windows Start screen.

DISPLAY THE START MENU

Select the **Start** button .

FIND SETTINGS

Select the **Start** button , and then select the **Settings** icon .

SHUT DOWN YOUR COMPUTER

Select the **Start** button , select the **Power** icon , and then select **Shut down**.

SEARCH

Select the **Search** icon in the taskbar, and then type the name of an app, setting, file, or internet topic in the search box.

SWITCH BETWEEN OPEN APPS

Select the **Task view** icon .

The features and appearance of the Windows screen vary, depending on the version of the operating system and additional software installed on your computer.

Gestures

Some computers support a touchscreen, but some computers, apps, and files might not support all touch gestures.

TOUCHPAD OR TOUCH SCREEN



Tap or double-tap to select



Pinch zoom

TOUCH SCREEN ONLY



Slide to scroll

TOUCHPAD ONLY



Tap to right-click



Slide to navigate



Multifeatured gestures



For details about multifeatured gestures, select **Start**, select **Settings**, select **Bluetooth & devices**, and then select **Touchpad**.

