



Maintenance and Service Guide

HP ProBook 4 G2a 16 inch Notebook Next Gen AI PC

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2026 HP Development Company, L.P.

AMD, Ryzen, and Radeon are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. ChromeOS is a trademark of Google LLC. Intel and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. The microSD Logo and microSD are trademarks of SD-3C LLC. USB Type-C, USB-C, and the USB 5 Gbps and USB 20 Gbps port logos are trademarks or registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2026

Document Part Number: Q10291-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>. **If your product ships with Windows in S Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at [Windows.com/SmodeFAQ](https://www.windows.com/smodefaq).

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows, rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows, rugs or clothing, during operation. The computer and the AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed only by an authorized service provider.



IMPORTANT: See [Removal and replacement procedures for Customer Self-Repair parts on page 35](#) for details.

Accessing parts described in [Removal and replacement procedures for authorized service provider parts on page 53](#) can damage the computer or void your warranty.

Table of contents

1 Product description.....	1
2 Components.....	5
Right.....	5
Left.....	5
Display.....	7
Low blue light mode (select products only).....	7
Keyboard area.....	9
Touchpad.....	9
Touchpad settings.....	9
Adjusting touchpad settings.....	9
Turning on the touchpad.....	9
Touchpad components.....	9
Lights.....	10
Fingerprint reader.....	12
Special keys.....	12
Bottom.....	14
Labels.....	15
3 Illustrated parts catalog.....	18
Computer major components.....	18
Display assembly subcomponents.....	21
Miscellaneous parts.....	22
4 Removal and replacement procedures preliminary requirements.....	27
Tools required.....	27
Service considerations.....	27
Plastic parts.....	27
Cables and connectors.....	27
Drive handling.....	27
Electrostatic discharge information.....	28
Generating static electricity.....	28
Preventing electrostatic damage to equipment.....	29
Personal grounding methods and equipment.....	29
Grounding the work area.....	30
Recommended materials and equipment.....	30
Cleaning your computer.....	31
Enabling HP Easy Clean (select products only).....	31
Removing dirt and debris from your computer.....	31
Cleaning your computer with a disinfectant.....	32
Caring for wood veneer (select products only).....	33

Packaging and transporting guidelines.....	33
Accessing support information	33
5 Removal and replacement procedures for Customer Self-Repair parts.....	35
Component replacement procedures.....	35
Preparation for disassembly.....	35
Bottom cover	35
Battery	38
Removing and reinstalling the same battery	38
Installing a new battery	40
Memory modules.....	44
Solid-state drive	45
Second solid-state drive (M.2 2230) (select products only).....	47
WLAN module.....	49
WWAN module	50
6 Removal and replacement procedures for authorized service provider parts.....	53
Component replacement procedures.....	53
Speakers	53
Fingerprint reader board	54
Fan.....	55
I/O board	56
Touchpad.....	57
Heat sink.....	58
System board	60
Display assembly	62
Top cover with keyboard.....	70
7 Backing up, restoring, and recovering.....	71
Backing up information and creating recovery media.....	71
Using Windows tools for backing up.....	71
Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)	71
Restoring and recovering your system	71
Creating a system restore	72
Restoring and recovery methods	72
Recovering using the HP Recovery USB flash drive	72
Changing the computer boot order	73
Using HP Sure Recover (select products only).....	73
8 Computer Setup (BIOS), TPM, and HP Sure Start	74
Using Computer Setup	74
Navigating and selecting in Computer Setup	74
Restoring factory settings in Computer Setup.....	74
Updating the BIOS.....	75
Determining the BIOS version	75
Preparing for a BIOS update.....	75
Downloading a BIOS update	76
Installing a BIOS update.....	76

Changing the boot order using the f9 prompt	77
TPM BIOS settings (select products only)	77
Using HP Sure Start (select products only).....	77
9 Using HP PC Hardware Diagnostics.....	78
Using HP PC Hardware Diagnostics Windows (select products only).....	78
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	78
Accessing HP PC Hardware Diagnostics Windows.....	78
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only).....	78
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)	79
Downloading HP PC Hardware Diagnostics Windows.....	79
Downloading the latest HP PC Hardware Diagnostics Windows version from HP.....	79
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store.....	79
Downloading HP Hardware Diagnostics Windows by product name or number (select products only).....	80
Installing HP PC Hardware Diagnostics Windows	80
Using HP PC Hardware Diagnostics UEFI.....	80
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	80
Starting HP PC Hardware Diagnostics UEFI.....	80
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)	81
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	81
Downloading the latest HP PC Hardware Diagnostics UEFI version.....	82
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only).....	82
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	82
Downloading Remote HP PC Hardware Diagnostics UEFI	82
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	82
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	83
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	83
10 Specifications.....	84
Computer specifications.....	84
Display specifications.....	85
11 Statement of memory volatility.....	86
Current BIOS steps.....	86
Nonvolatile memory usage	88
Questions and answers	89
12 Power cord set requirements.....	91
Requirements for all countries	91
Requirements for specific countries and regions.....	91
13 Swelling or deformation of notebook battery.....	94
Swollen notebook batteries	94

Swollen battery is not a safety issue.....	94
Discontinue using a swollen battery	94
Replace a swollen battery	94
Minimize battery swelling.....	94
Adaptive Battery Optimizer (consumer notebooks).....	95
HP Battery Health Manager (commercial notebooks).....	95
14 Recycling.....	96
Index	97

1 Product description

This table provides detailed product information.



NOTE: For the latest specifications related to your computer, go to <http://www.hp.com/support> and follow the instructions to find your product. Select **Specifications & Accessories**, select **Product information**, and then select the specifications link.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP ProBook 4 G2a 16 inch Notebook Next Gen AI PC
Processors	AMD® processors
	AMD Ryzen™ AI 7 processor H 450
	AMD Ryzen AI 7 processor 450
	AMD Ryzen AI 7 processor 445
	AMD Ryzen AI 5 processor 435
	AMD Ryzen AI 3 processor 430
Display	40.6 cm (16.0 in), bent type panel, camera privacy cover
	Nontouch
	2.5 K (2560 × 1600), WLED + low blue light, UWVA, antiglare, Adobe 100% + DCI-P3 100%, eDP 1.2 without PSR, 400 nits, 120 Hz (VRR)
	WUXGA (1920 × 1200), WLED + low blue light, UWVA, antiglare, WLED + low blue light, low power, sRGB 100%, eDP 1.5, 400 nits, 60 Hz
	WUXGA (1920 × 1200), LED, UWVA, antiglare, sRGB 62.5% eDP 1.2 without PSR, 300 nits, 60 Hz
	WUXGA (1920 × 1200), OLED + low blue light, UWVA, antiglare, DCI-P3 95% eDP 1.2 without PSR, 300 nits, 60 Hz
	Touch
	WUXGA (1920 × 1200), LED, UWVA, antiglare, sRGB 62.5% eDP 1.2 without PSR, 300 nits
	16:10 aspect ratio - Screen-to-body ration: up to 90.6% - Max hinge open angle: 177 ± 3°
Memory	Two customer-replaceable memory module slots supporting up to 64 GB of RAM
	DDR5-5600 dual-channel support
	Supports the following configurations:
	64 GB (32 × 2) 48 GB (24 × 2) 32 GB (16 × 2 or 1 × 32)

Table 1-1 Product components and their descriptions (continued)

Category	Description
	24 GB (24 × 1)
	16 GB (8 × 2) or (16 × 1)
	12 GB (12 × 1)
	8 GB (8 × 1)
Storage	Primary storage (M.2 2280 solid-state drive [SSD])
	1 TB
	512 GB
	256 GB
	Secondary storage (PCIe, NVMe, M.2 2230 solid-state drive [SSD])
	256 GB
Audio and video	Camera (select products only)
	5 MP + IR (infrared), fixed, HDR, AI, wide field-of-view (WFOV)
	FHD camera, fixed, HDR, narrow field-of-view (NFOV)
	Camera privacy cover
	Audio
	Audio by Poly Studio
	AI noise reduction
	Two integrated stereo speakers (2 W/4 ohm per speaker)
	Dual-array microphones
RJ-45 (network) jack	Realtek GBE RTL8111HSH-CG Ethernet Controller
Wireless	Wireless Local Area Network (WLAN) (M.2 2230; select products only)
	MediaTek MT7925 Wi-Fi® 7 Bluetooth® 6.0 WW WLAN
	MediaTek RZ616 Wi-Fi 6E Bluetooth 5.3 AIM-T WLAN
	Wireless Low Power Wide Area Network (LPWAN) (select products only)
	HP RW220-GL LTE (CAT-1bis)
	Wireless Wide Area Network (WWAN) (select products only)
	HP R15 5G Solution WWAN
	HP R15 5G Go Solution
Ports	Audio-out (headphone)/audio-in (microphone) combo jack
	HDMI 2.1 (resolution up to 4K @ 60 Hz, bandwidth 6 Gbps TMDS mode)
	USB 3.1 Type-C (2)
	- USB Power Delivery
	- DisplayPort™ 1.4
	USB 3.1 Type-A Gen1 (2)

Table 1-1 Product components and their descriptions (continued)

Category	Description
	RJ-45 (network) jack
	Nano SIM card slot (select products only)
	Nano security slot
Sensors	Hall effect sensor
	Fingerprint sensor (select products only)
	HP Sure Platform
	HP Tamper Lock
	Thermal sensor
Keyboard/pointing devices	HP standard notebook keyboard with clickpad
	Backlit
Power requirements	Battery (long life, polymer, fast charge [50% in 30 minutes])
	3 cell, 68 Whr
	3 cell, 56 Whr
	HP power adapters (USB Type-C®) (select products only)
	100 W, GaN, wall mount, halogen free, fixed
	100 W, GaN, wall mount, halogen free, foldable
	65 W, GaN, standard, straight
	65 W, GaN, wall mount, halogen free, fixed
	65 W, GaN, wall mount, halogen free, foldable
	65 W, GaN, wall mount, fixed
	Power cord (select products only)
	C5, 1.0 m (3.3 ft) conventional
	C5, 1.0 m (3.3 ft), conventional, red, straight
	Non-standard, straight, halogen free, duckhead
Security	Fingerprint sensor (select products only)
	Camera privacy cover
	Nano security lock
Operating system	Windows® 11 Home
	Windows 11 Pro for Business
	Windows 11 Home Single Language
	Windows 11 Pro
	Windows 11 Pro (Windows 11 Enterprise available with a Volume Licensing Agreement)
	Windows 11 Pro Education
	FreeDOS

Table 1-1 Product components and their descriptions (continued)

Category	Description
Serviceability	End user replaceable parts
	AC adapter
	Bottom cover
	Battery
	SSD
	Memory modules

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right

Use this illustration and table to identify the components on the right side of the computer.

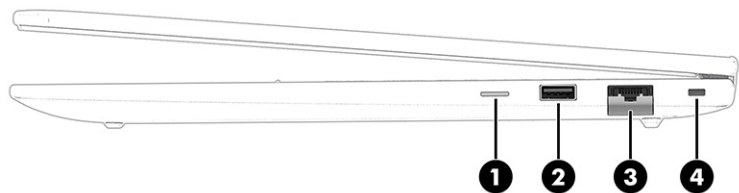


Table 2-1 Right-side components and their descriptions

	Component	Description
(1)	NanoSIM tray (select products only)	Allows the use of a NanoSIM.
(2)	 USB 5 Gbps port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3)	 RJ-45 (network) jack/status lights	Connects a network cable. • Green (left): The network is connected. • Amber (right): Activity is occurring on the network.
(4)	 Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.

Left

Use this illustration and table to identify the components on the left side of the computer.

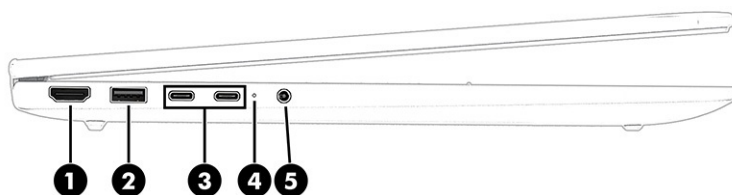


Table 2-2 Left-side components and their descriptions

	Component	Description
(1) 	HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.
(2) 	USB 5 Gbps port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3) 	USB Type-C 20 Gbps ports with HP Sleep and Charge (2)	Connect a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connect a display device that has a USB Type-C connector, providing DisplayPort™ output.
(4) 	Battery light	When AC power is connected: • White: The battery charge is greater than 90%. • Amber: The battery charge is from 0 to 90%. • Off: The battery is not charging. When AC power is disconnected (battery not charging): • Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. • Off: The battery is not charging.

Table 2-2 Left-side components and their descriptions (continued)

	Component	Description
(5)	 Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide: ■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.

Display

Use this illustration and table to identify the display components.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

 **WARNING!** To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

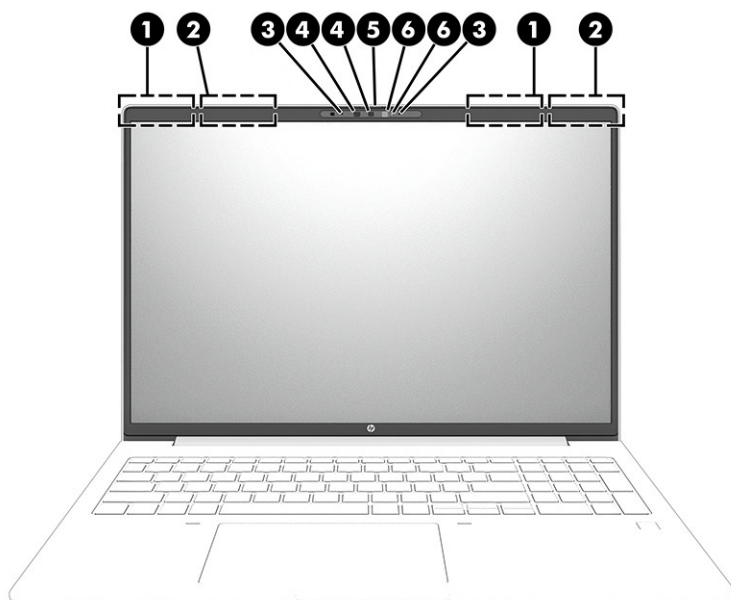


Table 2-3 Display components and their descriptions

	Component	Description
(1)	WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	WWAN antennas* (2)	Send and receive wireless signals to communicate with wireless wide area networks (WWANs).
(3)	Internal microphones (2)	Record sound.
(4)	Cameras (2)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(5)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens. NOTE: If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.
(6)	Camera lights (2)	On: One or more cameras are in use.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard, including the function keys and power key (select products only), is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad

The touchpad settings and components are described here.

Touchpad settings

You learn how to adjust the touchpad settings and components here.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press [enter](#).
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press [enter](#).
2. Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the [Tab](#) key repeatedly until the pointer rests on the **touchpad** button. Then press the [spacebar](#) to select the button.

Touchpad components

Use this illustration and table to identify the touchpad components.

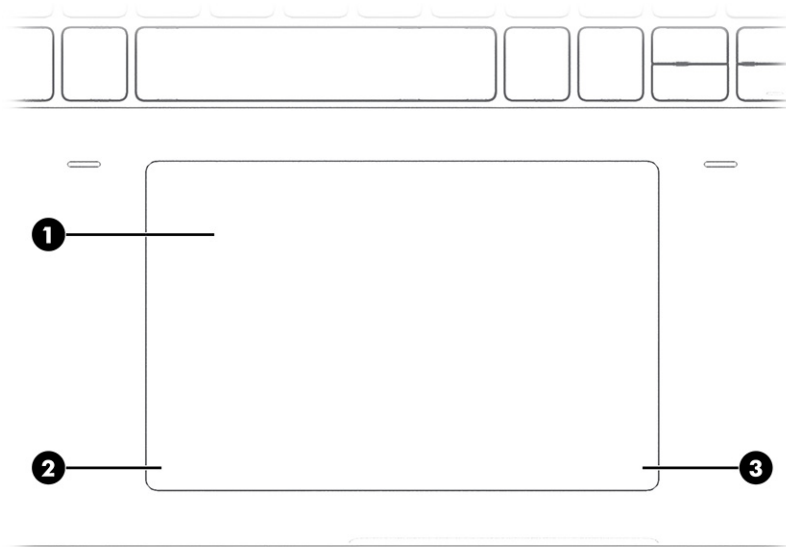


Table 2-4 Touchpad components and their descriptions

	Component	Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Use this illustration and table to identify the lights on the computer.

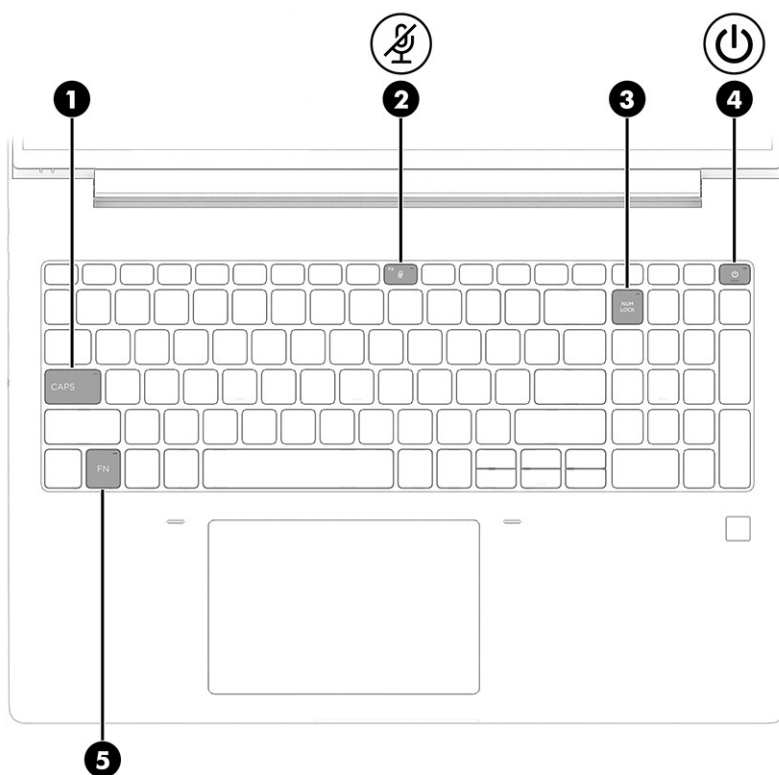


Table 2-5 Lights and their descriptions

	Component	Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Microphone mute light	- On: Microphone is off. - Off: Microphone is on.
(3)	 Num lock light	On: Num lock is on.
(4)	 Power light	- On: The computer is on. - Blinking (select products only): The computer is in the sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. - Off: Depending on your computer model, the computer is off, in hibernation, or in sleep. Hibernation is the power-saving state that uses the least amount of power.
(5)	Fn lock light	On: The fn key is locked.

Fingerprint reader

Fingerprint readers can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

 **IMPORTANT:** To verify that your computer supports fingerprint reader sign-in, select the **Search** icon in the taskbar, type `Sign-in options` in the search box, and then select the **Sign-on options** app. If **Fingerprint recognition** is not listed as an option, then your notebook does not include a fingerprint reader.

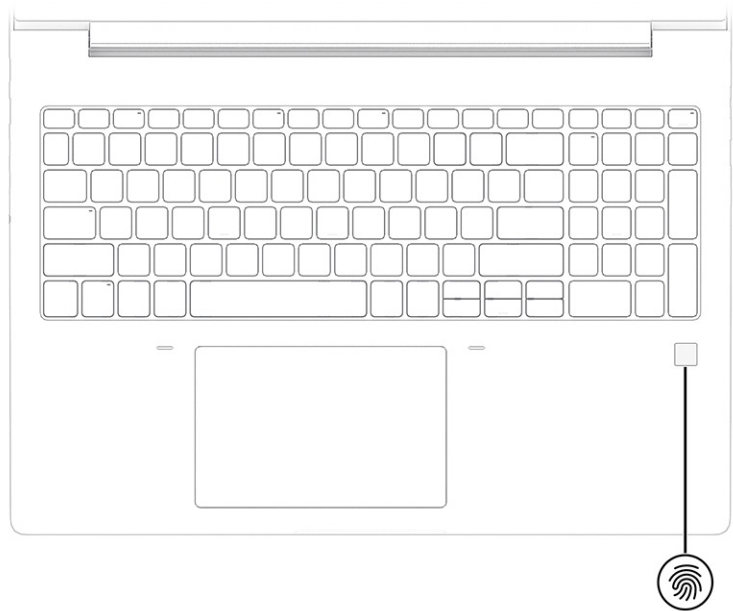


Table 2-6 Fingerprint reader and its description

Component		Description
(1)	 Fingerprint reader	Allows a fingerprint logon to Windows, instead of a password logon. ■ Swipe down across the fingerprint reader. IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.

Special keys

Use this illustration and table to identify the special keys.

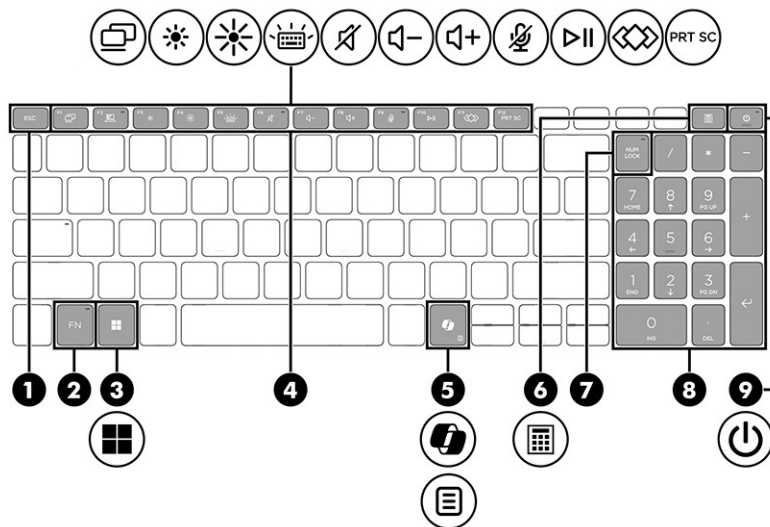


Table 2-7 Special keys and their descriptions

	Component	Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .
(3)	Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4)	Action keys	Execute frequently used system functions.
(5)	 Windows Copilot key	Opens Windows Copilot (select products only). NOTE: Copilot in Windows (select products only) requires Windows 11. Some features require a neural processing unit (NPU). The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. When the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See http://aka.ms/WindowsAIFeatures .
(5)	 Windows application key	Displays options for a selected object.
(6)	Calculator key	Opens the Calculator app.
(7)	num lk key	Performs one of the following functions: • Turns the embedded numeric keypad on and off when pressed in combination with the fn key. • Turns the embedded numeric keypad on and off. • Alternates between the navigational and numeric functions on the integrated numeric keypad.

Table 2-7 Special keys and their descriptions (continued)

	Component	Description
(8)	Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When num lk is pressed, the integrated keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.
(9)	 Power key	• When the computer is off, press the key briefly to turn on the computer. • When the computer is on, press the key briefly to initiate sleep. • When the computer is in the sleep state, press the key briefly to exit sleep (select products only). • When the computer is in hibernation, press the key briefly to exit hibernation. IMPORTANT: Pressing and holding down the power key results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power key for at least 10 seconds to turn off the computer. To learn more about your power settings, use the Power icon. ■ Right-click the Power icon , and then select Power and sleep settings.

Bottom

Use this illustration and table to identify the bottom components.

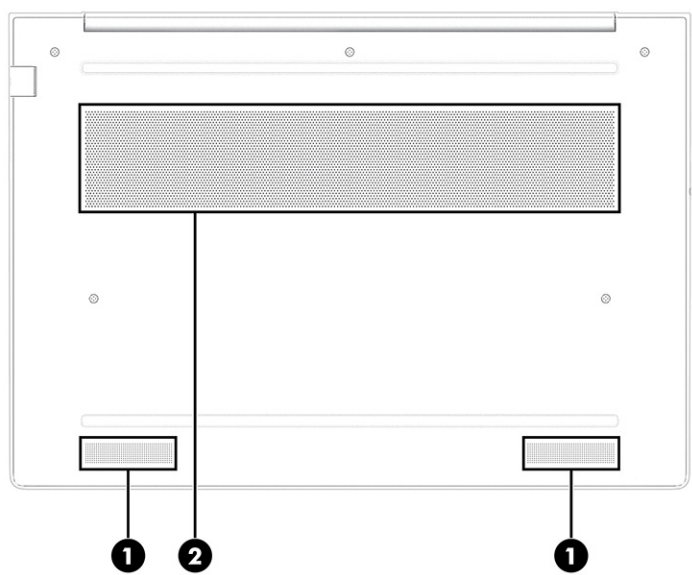


Table 2-8 Bottom components and their descriptions

	Component	Description
(1)	Speakers (2)	Produce sound.
(2)	Vent	Enables airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels


The labels affixed to the computer provide information you might need when you troubleshoot system problems or travel internationally with the computer. Labels might be in paper form or imprinted on the product.



IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.

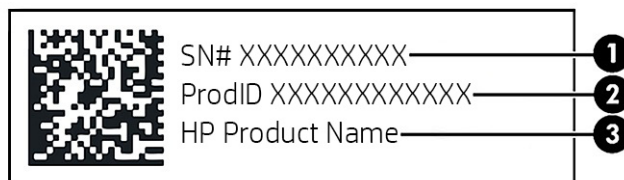**Table 2-9 Service label components**

	Component
(1)	Serial number
(2)	Product ID
(3)	HP product name

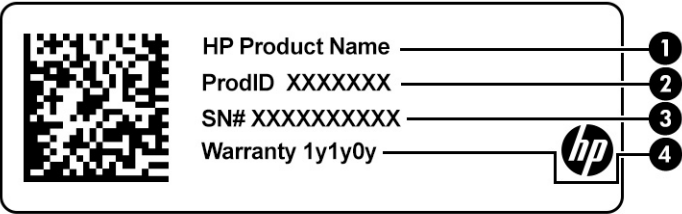


Table 2-10 Service label components

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

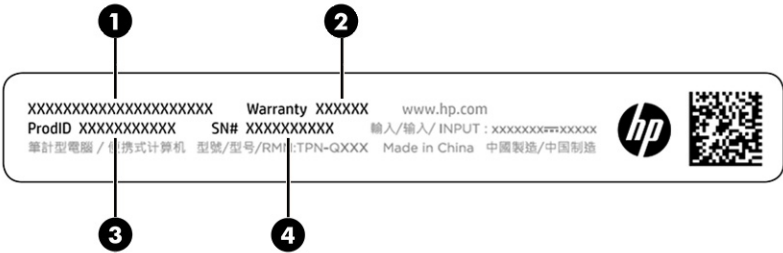


Table 2-11 Service label components

Component	
(1)	HP product name
(2)	Warranty period
(3)	Product ID
(4)	Serial number



Takes you to serial-number-specific information to assist with setting up and using the product as well as provides you with access to support information.

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

Use this illustration and table to identify the computer major components.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

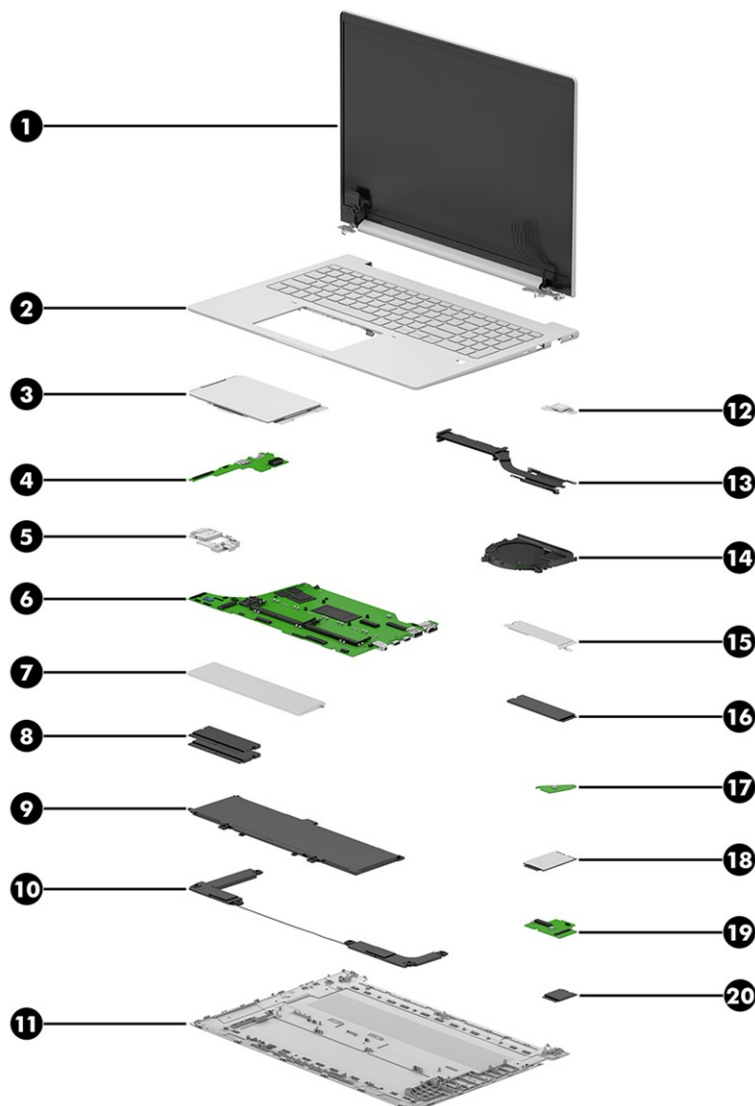


Table 3-1 Computer major component descriptions and part numbers

Item	Component	CSR category*	Spare part number
(1)	Display assembly NOTE: Display spare parts are available only as subcomponents. For spare part information, see Display assembly subcomponents on page 21 .		not available as a spare part
(2)	Top cover with keyboard (backlit) NOTE: For a detailed list of country codes, see Top cover with keyboard on page 70 .		
	Backlit, aluminum models	N	Q03476-xx1
	Backlit, plastic models	N	Q03477-xx1
(3)	Touchpad (includes cable) NOTE: The touchpad cable is also available in the Cable Kit as spare part number N96922-001.	N	P99759-001
(4)	I/O board NOTE: The I/O board cables are available in the Cable Kit as spare part number N96922-001. The RJ-45 door is available as spare part number N96462-001 for plastic models and N96461-001 for metal models.		
	For use in models with only WLAN	N	P39185-001
	For use in models with WLAN and WWAN	N	P39186-001
(5)	System board I/O bracket (available in the Rubber Kit)	N	Q00161-001
(6)	System board (includes integrated processor)		
	AMD Ryzen AI 7 H 450 processor	N	Q00357-601
	AMD Ryzen AI 7 450 processor	N	Q00356-601
	AMD Ryzen AI 7 445 processor, models without WWAN	N	Q00354-601
	AMD Ryzen AI 5 445 processor, models with WWAN	N	Q00355-601
	AMD Ryzen AI 5 435 processor, models without WWAN	N	Q00352-601
	AMD Ryzen AI 5 435 processor, models with WWAN	N	Q00353-601
	AMD Ryzen AI 5 430 processor	N	Q00351-601
(7)	Memory cover	A	not available as a spare part
(8)	Memory modules (DDR5, PC-5600)		
	32 GB	A	N77400-001
	24 GB	A	P55196-001
	16 GB	A	N77399-001
	8 GB	A	N77398-001
(9)	Battery NOTE: The battery cable is available as spare part number P98015-001.		

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	CSR category*	Spare part number
	3 cell, 68 Whr	A	P98013-001
	3 cell, 56 Whr	A	N70706-001
(10)	Speakers	N	P98601-001
(11)	Bottom cover		
	Plastic	A	P99465-001
	Metal	A	P99464-001
(12)	Fingerprint reader	N	P98599-001
	NOTE: The fingerprint reader cable is available in the Cable Kit as spare part number N96922-001. The fingerprint reader bracket is available in the Bracket Kit as spare part number P98600-001. The fingerprint reader insert (for use in models without a fingerprint reader) is available in the Rubber Kit as spare part number Q00161-001		
(13)	Heat sink (15 W models)	N	N96443-001
	Heat sink (28 W models)	N	P98014-001
(14)	Fan (15 W models)	B	N96441-001
	Fan (28 W models)	B	N96442-001
(15)	SSD cover (Included in the SSD Support Kit)	N	P37723-001
(16)	SSD (PCIe-4 × 4, M.2 2280)		
	NOTE: The SSD support kit is available as spare part number P37723-001.		
	1 TB	A	N77394-001
	512 GB	A	N77392-001
	256 GB	A	N77391-001
	SSD (secondary) (PCIe-4 × 4, M.2 2230)		
	256 GB	A	N77397-001
(17)	SSD board	A	not available in this model
(18)	WWAN module		
	HP R15 5G Solution	A	P40772-002
	HP R15 5G Go Solution	A	P41680-002
	HP RW220-GL LTE (CAT-1bis)	A	P47161-002
(19)	WWAN board (includes cable)	N	not available in this model
(20)	WLAN module		
	MediaTek MT7922 Wi-Fi 6E + Bluetooth 5.2 WW WLAN	A	N64647-002
	MediaTek RZ616 Wi-Fi 6E + Bluetooth 5.3 AIM-T WLAN	A	N22541-002

Table 3-2 CSR part categories*

Category	Description	Replacement responsibility
CSR A	Self-service parts	Customers can replace these easily replaceable parts. Replacement by trained technicians might incur additional cost.
CSR B/C	Optional self-service parts	Skilled customers can replace these parts. Warranty replacement available via trained technicians.
CSR N	Non-self-service parts	Only trained service technicians should replace these complex parts.

Display assembly subcomponents

Use this illustration and table to identify the display assembly subcomponents.

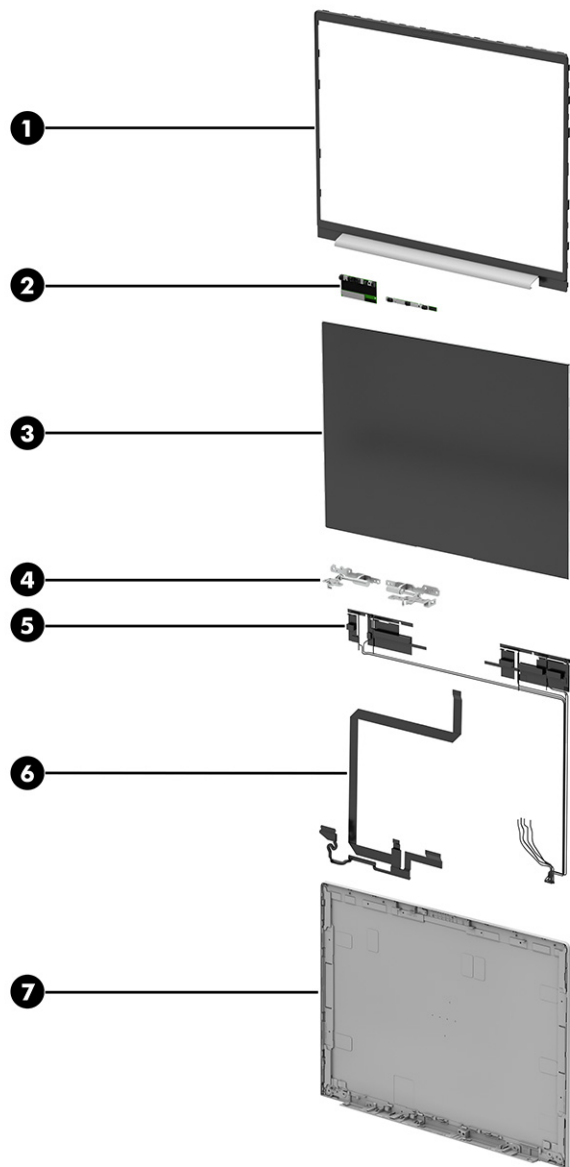


Table 3-3 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display bezel	
	For use in non-OLED models with an FHD camera	P98621-001
	For use in non-OLED models with a 5 MP + IR camera	P98622-001
	For use in OLED models with an FHD camera	P98623-001
	For use in OLED models with a 5 MP + IR camera	P98624-001
(2)	Camera module (includes cable, panel adhesives, and bezel adhesives)	
	5 MP + IR camera	P98629-001
	FHD camera	P98628-001
(3)	Display panel (includes cable, panel adhesives, and bezel adhesives)	
	NOTE: Display panel tape is available in the Tape Kit as spare part number P01184-001.	
	WUXGA, 300 nits, nontouch	Q02355-001
	2.5 K, 400 nits	Q02356-001
	WUXGA, 300 nits, touch screen	Q02357-001
	WUXGA, 400 nits, nontouch	Q02358-001
(4)	Hinges (includes left and right hinges, panel adhesives, and bezel adhesives)	
	Models with WLAN, no WWAN	P98630-001
	Models with WLAN and WWAN	P98631-001
(5)	Wireless antennas and cables (includes WLAN antennas, WWAN antennas, panel adhesives, and bezel adhesive)	P98619-001
(6)	Display/camera cable kit (includes panel adhesives, and bezel adhesives)	P98627-001
(7)	Display back cover (includes wireless antennas, panel adhesives, and bezel adhesives)	
	Models with a 300 nit touch panel, FHD camera, WLAN, no WWAN	P98603-001
	Models with a 300 nit touch panel, 5 MP + IR camera, WLAN, no WWAN	P98604-001
	Models with a 400 nit panel, FHD camera, WLAN, no WWAN	P98605-001
	Models with a 400 nit panel, 5 MP + IR camera, WLAN, no WWAN	P98606-001
	Models with a QHD panel, 5 MP + IR camera, WLAN, no WWAN	P98607-001
	Models with a OLED panel, FHD camera, WLAN, no WWAN	P98608-001
	Models with a OLED panel, 5 MP + IR camera, WLAN, no WWAN	P98609-001
	Models with a 300 nit touch panel, FHD camera, WLAN and WWAN	P98610-001
	Models with a 300 nit touch panel, 5 MP + IR camera, WLAN and WWAN	P98611-001
	LCD support kit (not illustrated)	P98618-001

Miscellaneous parts

Use this table to identify the miscellaneous parts.

Table 3-4 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapters	
330 W, PFC, smart, 4.5 mm, 3 pin	N80119-001
230 W, PFC, smart, 4.5 mm, 3 pin	N84766-001
120 W, PFC, 4.5 mm	M95377-001
100 W, USB-C, GaN, 2 pin, wall mount, 2.0 m (6.5 ft), FD	P58631-001
100 W, USB-C, GaN, 2 pin, wall mount, 2.0 m (6.5 ft), FX	P58632-001
65 W, USB-C, GaN, 2 pin, wall mount, 2.0 m (6.5 ft), FX	P58629-001
65 W, USB-C, GaN, 2 pin, wall mount, 2.0 m (6.5 ft), FD	P58630-001
65 W, USB-C, standard, straight	P38779-001
65 W, USB-C	P49363-001
USB-C-to-VGA adapter	831751-001
USB-C to USB-A Hub	916838-001
HDMI-to-VGA adapter	701943-001
HP USB-C-to-DisplayPort adapter	N81435-001
USB-C-to-HDMI 2.0 adapter	935325-001
USB BT700 USB-C adapter	N46131-001
Multiport USB-C Travel Hub. G3	N60372-001
Multiport USB-C Universal Hub	M96882-001
HP Portable USB-C-to-HDMI Hub	P52720-001
Poly Voyager 4320 USB-A Headset	N57159-001
Blackwire 3325 BW3325 USB-A Headset	N45998-001
Blackwire 5220 USB-A Headset	N46012-001
VY 60UC USB-C Headset with touchscreen	N73088-001
HP Business 17.3 Laptop Backpack	M55004-001
HP Business 17.3 Laptop Case	M55005-001
HP Everyday 16 Laptop Bag	P04345-001
HP Everyday 16 Laptop Backpack	P04346-001
HP 15-16 Laptop Sleeve	P64776-001
Screw Kit (for use in product component removal and replacement)	P98040-001
Bracket Kit (includes WWAN bracket and fingerprint reader bracket)	P98600-001
SSD Parts Kit (includes center hook, SSD bracket, and SSD support frame)	P37723-001
Cable Kit (includes I/O board cable, touchpad cable, fingerprint reader cable, nano SIM cable, WWAN cable, and adhesive support kit)	N96922-001

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Misc Parts Kit (includes WWAN gaskets with conductive tape, WWAN module protective tape, WLAN module protective tape, fingerprint reader conductive tape, nano SIM card insert, camera sponge, IR camera rubber, camera shutter, and left and right bezel trim protective tape)	P98598-001
Rubber Kit (includes I/O holder, nano SIM card insert, fingerprint reader insert, and battery frame)	Q00161-001
USB mouse	L95713-001
HP 125 Laser Wired Mouse	M27884-001
HP 128 Laser Wired Mouse	M27885-001
HP 435 Wireless Mouse	M62277-001
HP 235 Wireless Mouse	M86086-001
HP 510/515 Rechargeable Mouse	N86885-001
HP 320K Wired Keyboard	P24877-001
Nano lock	918431-001
External optical drive	747080-001
HP Thunderbolt™ 4 100 W G6 Dock (with cable)	P34015-001
Bottom case for use with G6 docking station	P34055-001
Top cover for use with G6 docking station	P34054-001
Cable Kit (100 W/180 W) for use with G6 docking station	P34060-001
PCA board for use with G6 docking station	P34056-001
Power button for use with Thunderbolt 4 G6 docking station	P34106-001
Power button for use with USB-C G6 docking station	P62170-001
Fan for use with G6 docking station	P34059-001
Fan for use with Thunderbolt 4 180 W/280 W G6 docking station	P34058-001
Cable Kit for use with USB-C 100 W USB-C G6 docking station	P62172-001
Cable Kit for use with Thunderbolt 4 280 W G6 docking station	P34061-001
Screw Kit for use with G6 docking station	P34017-001
HP Thunderbolt 4 180 W G6 Dock (with WLAN)	P34009-001
HP Thunderbolt 4 280 W G6 Dock (with WLAN)	P34012-001
HP USB-C 100 W G6 dock	P62168-001
Power adapter, duckhead	
Japan	L33157-001
Power cord (C13, premium, 1.0 m [3.3 ft])	
Thailand bundle	M85413-001
Power cord (C5, conventional, red, 1.83 m [6.0 ft])	P79415-001
Power cord (C13, conventional, red, 1.83 m [6.0 ft])	P79414-001
Power cord (C5, conventional, 1.0 m [3.3 ft])	

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Argentina	L19357-001
Australia	L19358-001
Brazil	L19359-001
Denmark	L19360-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-001
India	L19363-001
Israel	L19362-001
Italy	L19364-001
Japan	L19365-001
North America	L19367-001
PRC	L19368-001
South Africa	L19369-001
South Korea	L19366-001
Switzerland	L19370-001
Taiwan	L19372-001
Thailand	L19371-001
Thailand (ADP + cord)	M85418-001
The United Kingdom	L19373-001
Power cord (C13, 1.8 m [6.0 ft], straight, premium)	
For use in Argentina	L22104-001
For use in Australia	L22339-001
For use in Brazil	L57198-001
For use in Denmark	L22334-001
For use in Europe	L22333-001
For use in India	L22343-001
For use in Israel	L22335-001
For use in Italy	L22103-001
For use in Japan	L22344-001
For use in North America	L22331-001
For use in South Africa	L22337-001
For use in South Korea	L22340-001
For use in Switzerland	L22336-001
For use in Taiwan	L22342-001
For use in Thailand	L22338-001

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in Thailand (bundle)	M85413-001
For use in the United Kingdom	L22332-001
Duckhead power cord (non-standard, halogen free)	
Argentina	P57788-001
Australia	P57784-001
Brazil	P57789-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	P57782-001
India	P57790-001
Japan	L33157-001
PRC	P57787-001
South Korea	P57785-001
Thailand	P57786-001
United Kingdom	P57783-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures.

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 29](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	55% relative humidity	40% relative humidity	10% relative humidity
Walking across carpet	7500 V	15,000 V	35,000 V
Walking across vinyl floor	3000 V	5000 V	12,000 V
Motions of bench worker	400 V	800 V	6000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2000 V
Removing DIPs from vinyl tray	2000 V	4000 V	11,500 V
Removing DIPs from polystyrene foam	3500 V	5000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5000 V	11,000 V	21,000 V



NOTE: Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of 1 M Ω $\pm$ 10% resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of 1 M Ω $\pm$ 10% resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Method	Voltage
Antistatic plastic	1500
Carbon-loaded plastic	7500
Metalized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - Select the **HP Easy Clean** icon in the taskbar.
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 31](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 32](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 33](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 32](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 31](#), [Caring for wood veneer \(select products only\) on page 33](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.



CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.



CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 31](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 32](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

Use this information to find the HP support that you need.

Table 4-3 Support information locations

Service consideration	Path to access information
Records of reported failure incidents stored on the computer	Windows: Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log: 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility. 3. Press f10 to enter the BIOS setup. 4. Complete one of these tasks: • (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. • (On consumer products) Under the Main tab, select System Log. Post-operating system failures are logged in the Event Viewer. 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. ChromeOS™: 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins and alerts	To find technical bulletins, alerts, guides, and whitepapers: 1. Go to www.hp.com/support. 2. Follow the instructions to find your product. 3. Select Bulletins and Alerts to view technical bulletins.
Repair professionals	To locate repair professionals: 1. Go to www.hp.com. 2. Select Authorized service providers. 3. Select your location.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: 1. Go to http://www.hp.com/go/techcenter/pcdiags. 2. Select the issue you want to diagnose.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use these procedures to remove and replace computer components.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

Use these procedures to remove and replace computer components.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 27](#).

1. Turn off the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

Use this procedure and illustrations to remove the bottom cover.


Table 5-1 Bottom cover descriptions and part numbers

Description	Spare part number
Plastic	P99465-001
NOTE: Does not support the 68 Wh battery.	
Metal	P99464-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).

Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface with the front toward you.
2. Loosen the five captive Phillips screws that secure the bottom cover to the computer.

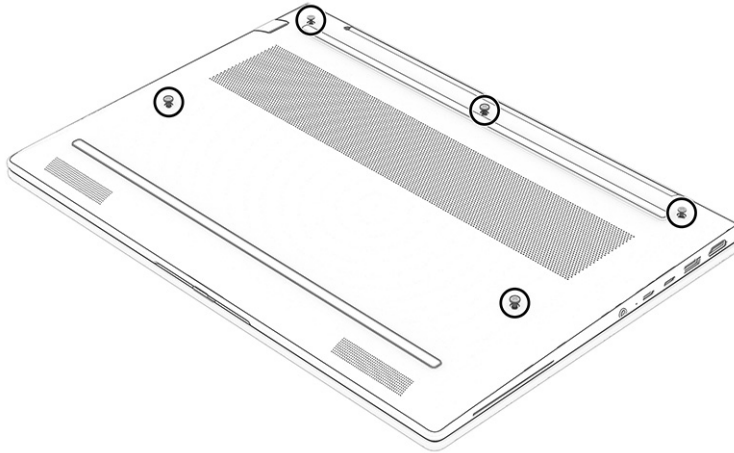

3. Insert a nonmarking, nonconductive tool **(1)** into the seam in the top middle of the computer, and then release the bottom cover **(2)** from the computer.
4. Remove the bottom cover **(3)**.

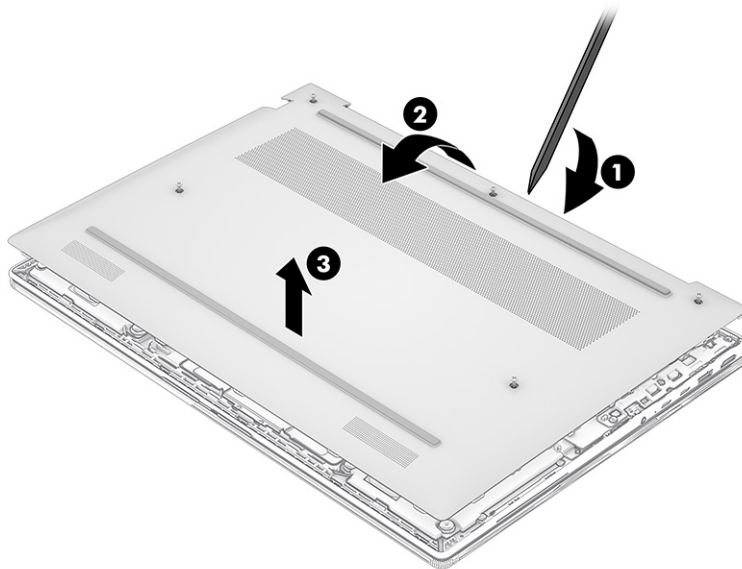

Reverse the removal procedures to replace the bottom cover.

When replacing the bottom cover:

- Remove the Feature Byte label from the inside of the old bottom cover and place it on the inside of the new bottom cover.

- Remove the service tag label from the inside of the old bottom cover and place it on the outside of the new bottom cover.

Be sure to keep these labels with the computer, as the label is required for any future repairs.

Service tag and Feature Byte labels


 **NOTE:** Label appearance might vary.

 HP Long Model Name ProdID AA1234V SN# CNJ1234567 Warranty 1y1y0y	↔ Service Tag label ↔	 HP Fortis Flip G11 11 ProdID B2PQ4E5A8BN SN# SC0509483R Warranty 1y1y0y
Build ID: XXXXXXXXXXXXX21BYTES Build  Feature Byte: XXXXXXXXXX11112222AAAAAAAAAXX XXXXXXXXXX11112222AAAAAAAAAXX XXXXXXXXXX11112222AAAAAAAAAXX XXXXXXXXXX11112222AAAAAAAAAXX  Keyboard Type:	↔ Feature Byte label ↔	Feature Byte: 4TUaST5T1N7R7W7m8aBaQispqsuweVdW eMeXPGuk8mEmvN7mVngOpLpnppnNkXz.Ti  Keyboard Type:0 Host Based Mac Address: See Label on System Board


New bottom cover label locations

Inside of bottom cover (place Feature Byte label here)

 **NOTE:** Bottom cover appearance might vary.

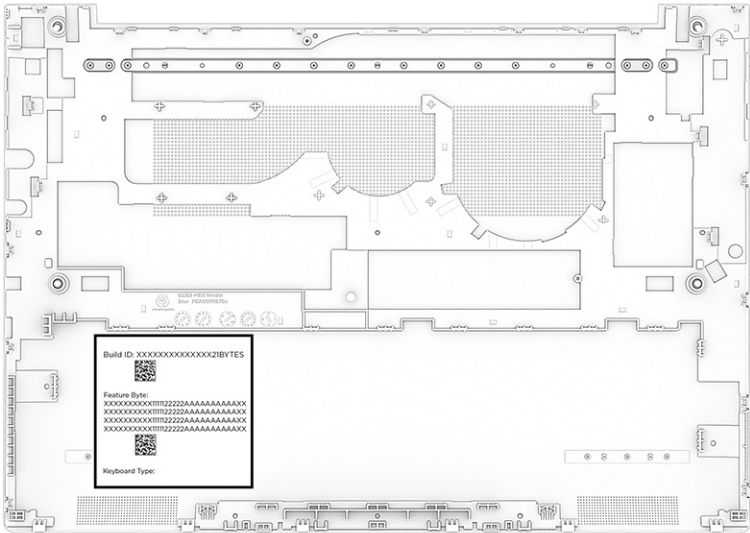

Outside of bottom cover (place service tag label here)

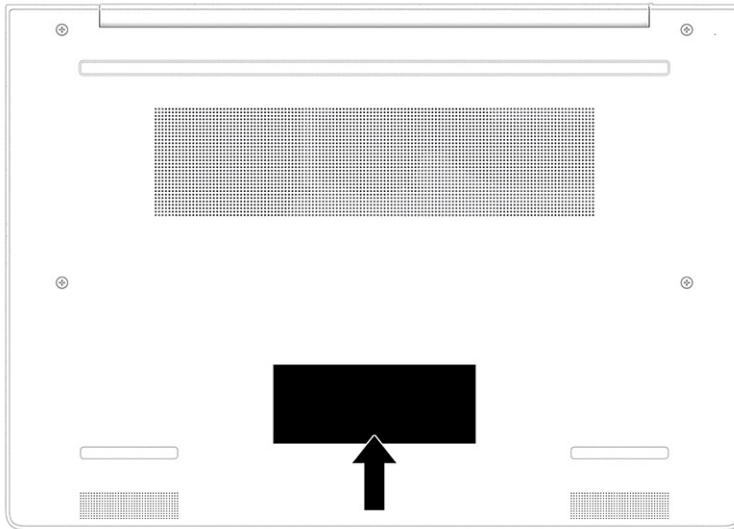

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Removing and reinstalling the same battery on page 38](#).
- To install a new battery, see [Installing a new battery on page 40](#).

Removing and reinstalling the same battery

To remove the battery and reinstall it, use this procedure and illustration.

⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
 - Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
 - Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
 - Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
 - Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.
-

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).

2. Remove the bottom cover (see [Bottom cover on page 35](#)).

WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.


Remove the battery:

NOTE: When replacing the battery or reconnecting the battery cable, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

NOTE: The battery cable is available as spare part number P98015-001.

1. Disconnect the battery cable **(1)** from the system board.
2. Press the release latch **(2)**, and then slide the battery **(3)** to the left.
3. Lift the battery **(4)** out of the computer.

NOTE: Component appearance might vary.

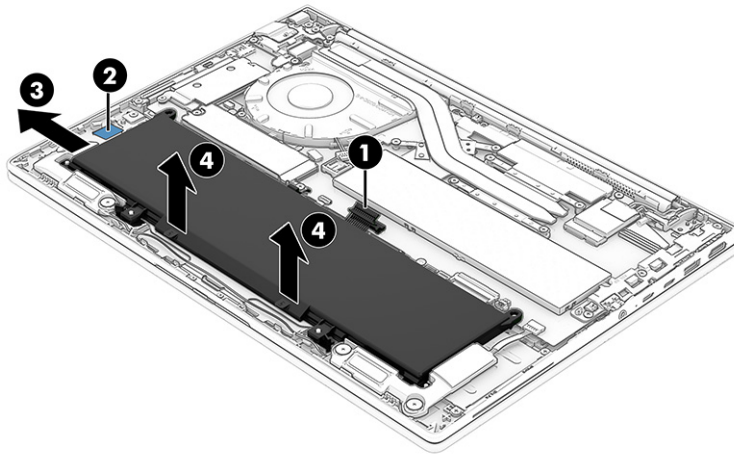


To reinstall the battery, reverse the removal procedures.

NOTE: When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

To install a battery, position the battery **(1)** so the left edge covers the release lever. Slide the battery **(2)** to the right until it clicks into place. Connect the battery cable **(3)** to the system board.

NOTE: Component appearance might vary.

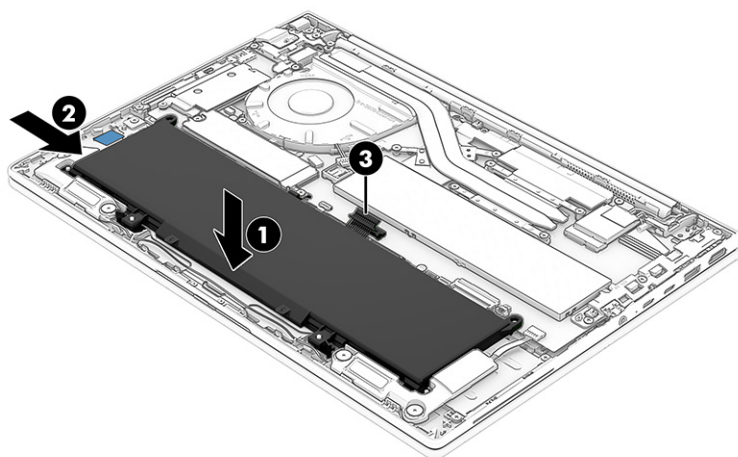

Installing a new battery

Use these procedures and illustrations to install a battery. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-2 Battery descriptions and part numbers

Description	Spare part number
3 cell, 68 Whr	P98013-001
3 cell, 56 Whr	N70706-001

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire extinguisher for use in an emergency.

⚠ WARNING! This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

📝 NOTE: Latch locations and internal components might vary.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

📝 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

1. Remove the battery using the revive kit:
 - a. Disconnect the battery cable (1) from the system board.
 - b. Press the release lever (2), and then slide the battery (3) to the left.


📝 NOTE: Component appearance might vary.

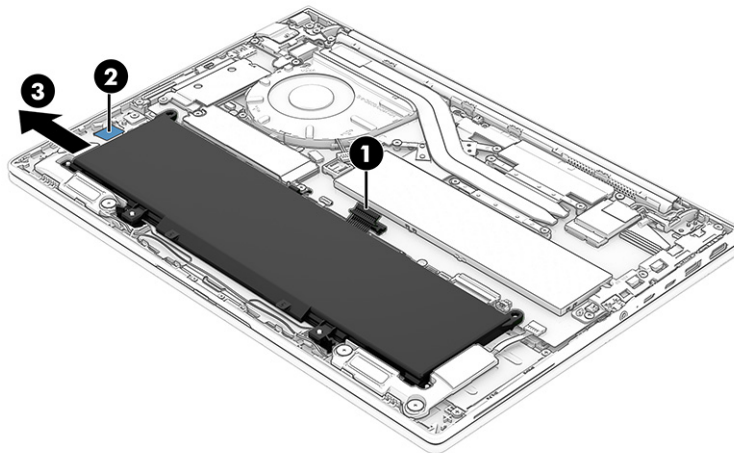


- c. Open the empty battery containment tray.




- d. Remove the paper backing layer from the adhesive on the tray.

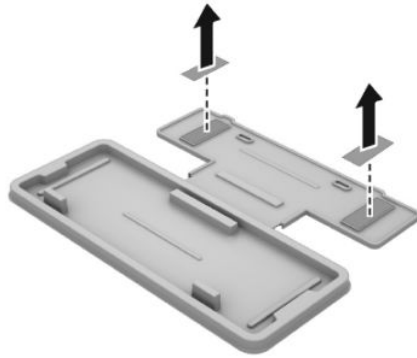


- e. Turn the tray **(1)** over so that the adhesive is facing down.
- f. Place the tray **(2)** centered on the battery.
- g. Press down on the indentations on the tray **(3)** to adhere it to the battery.

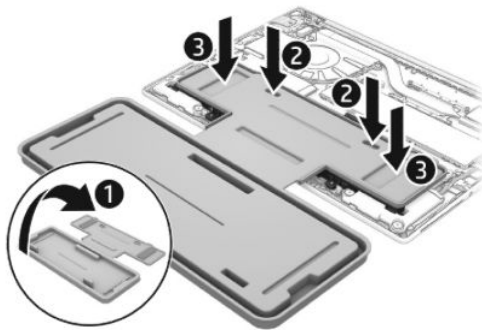

- h. Lift the top of the tray to remove the battery from the computer.

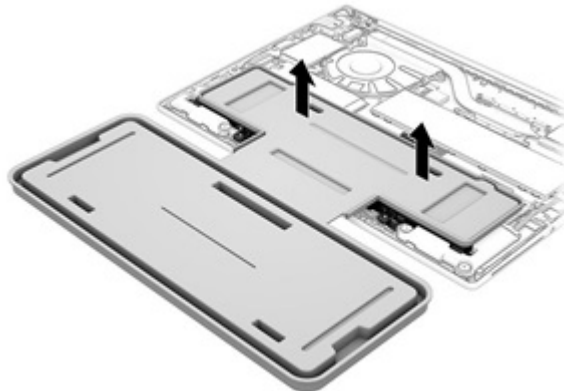


- i. Rotate the battery up and over into the cavity of the containment tray.

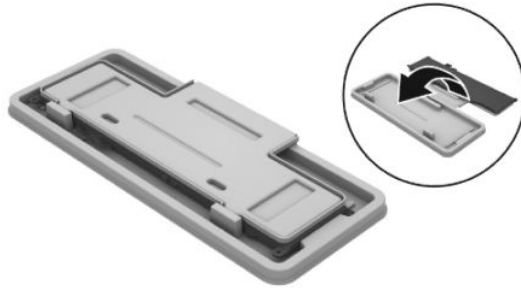


NOTE: Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

2. Install the battery using the revive kit:
 - a. Open the containment tray that includes the new battery.
 - b. Turn the tray **(1)** over so the battery is facing downward, and then insert the battery **(2)** into the computer. Adhesive secures the battery to the tray.

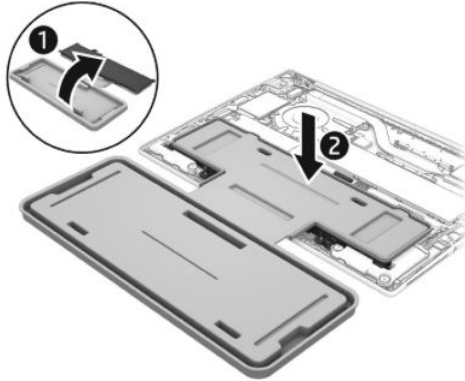

- c. Slide the containment tray **(1)** to the right until the enclosed battery clicks into place.

- d. Lift the containment tray (2) off the battery.

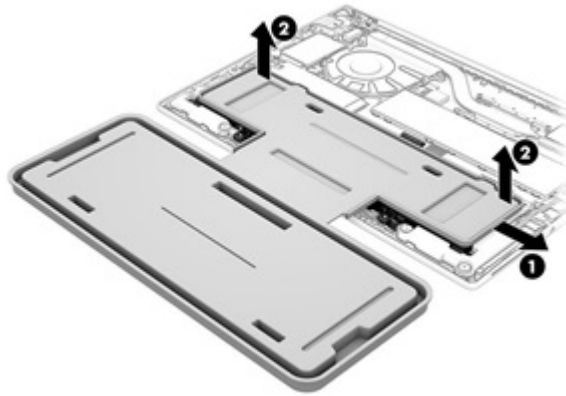

- e. Connect the battery cable to the system board.



NOTE: When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Memory modules

Use this procedure and illustration to remove the memory modules.

Table 5-3 Memory module descriptions and part numbers


Description	Spare part number
32 GB	N77400-001
24 GB	P55196-001
16 GB	N77399-001
8 GB	N77398-001

Before removing the memory, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the memory module:

1. Use the tab **(1)** near the bottom left corner of the cover to lift it **(2)** off the memory modules. The cover is secured to the system board by clips **(3)** on all sides of the cover.

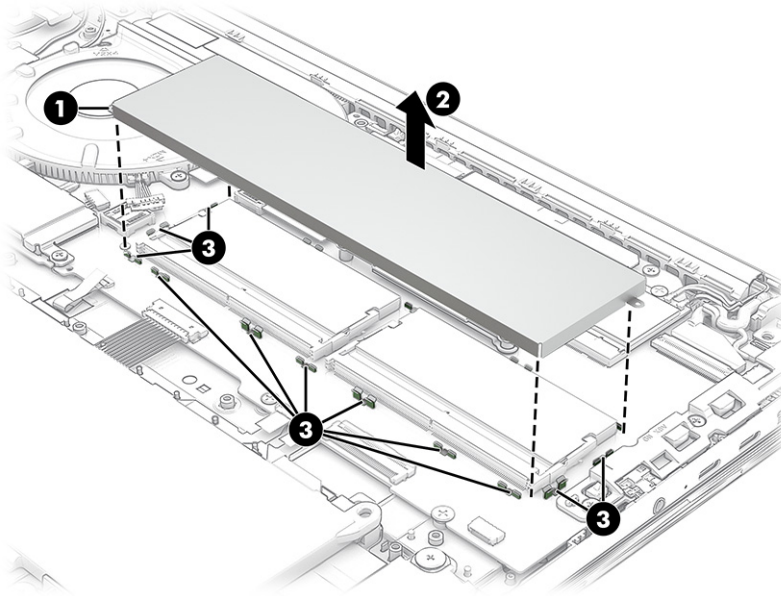

2. Spread the two retention clips outward **(1)** until the memory module tilts up at a 45° angle, and then remove the module **(2)**. Use the same procedure to remove all memory modules.

To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

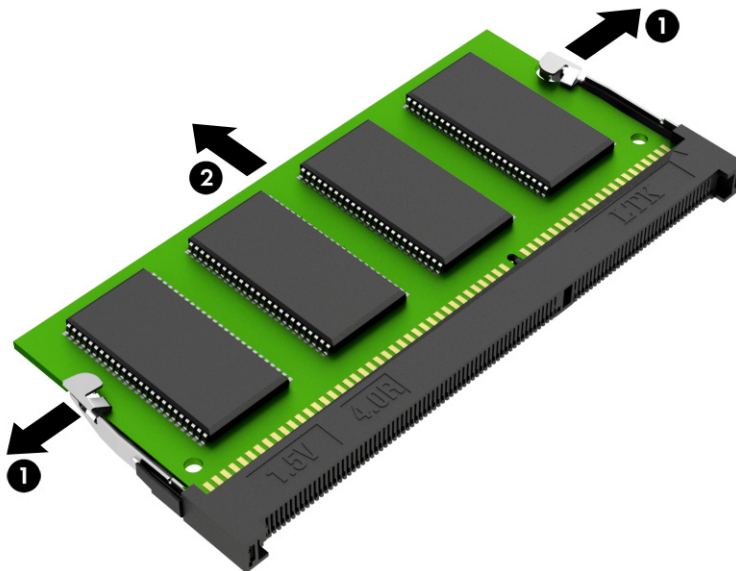

Reverse the removal procedures to install a memory module.

Solid-state drive

Use this procedure and illustration to remove the SSD.

Table 5-4 Solid-state drive descriptions and part numbers


Description	Spare part number
1 TB	N77394-001
512 GB	N77392-001
256 GB	N77391-001
SSD support kit	P37723-001

Before removing the SSD, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the SSD:

1. Remove the Phillips M2.0 × 4.0 screw **(1)** from the drive assembly.
2. Remove the Phillips M2.0 × 2.5 screw **(2)** from the drive assembly.
3. Remove the shield **(3)** from the drive, and then pull the drive **(4)** out of the slot.

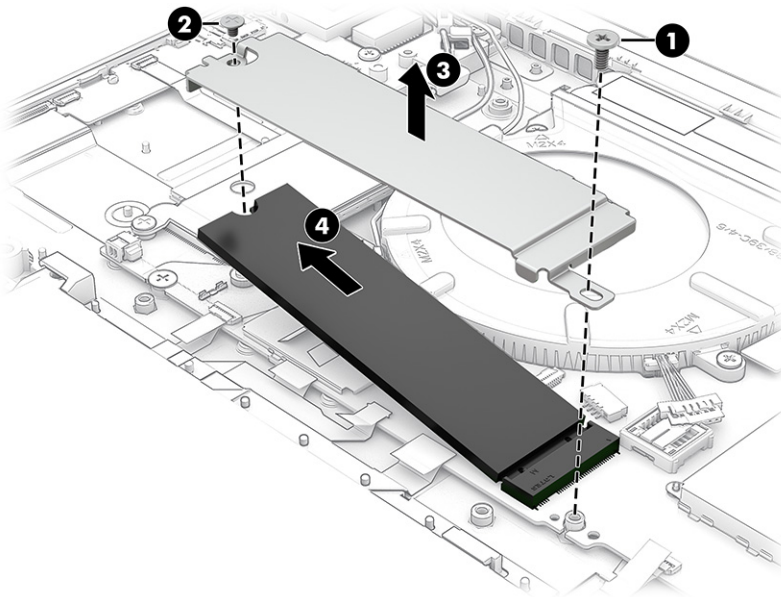

4. When installing an SSD, be sure a thermal pad is installed on the bottom of the drive bracket as shown in the following illustration.



Reverse the removal procedures to install the SSD.



NOTE: SSDs are designed with a notch to prevent incorrect insertion.

Second solid-state drive (M.2 2230) (select products only)

Use this procedure and illustration to remove the second solid-state drive (SSD).

You can install only one of the following modules in the computer, because they share the same slot on the system board:

- Second SSD (M.2 2230)
- WWAN module

Table 5-5 Solid-state drive description and part number


Description	Spare part number
256 GB	N77397-001

Before removing the second SSD, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove an M.2 2230 SSD:

1. Peel the tape only off the SSD. You can leave the other end of the tape connected to the computer.
2. Remove the Phillips M2.0 × 2.5 screw **(1)** that secures the SSD to the computer, and then pull the SSD **(2)** out of the connector to remove it.

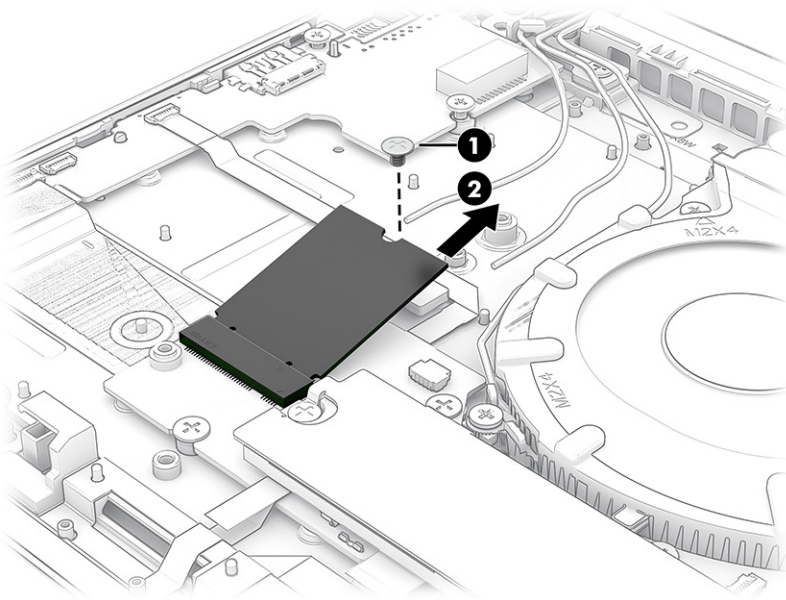


Install an M.2 2230 SSD:

1. Use screw hole (1) to secure an M.2 2230 SSD.

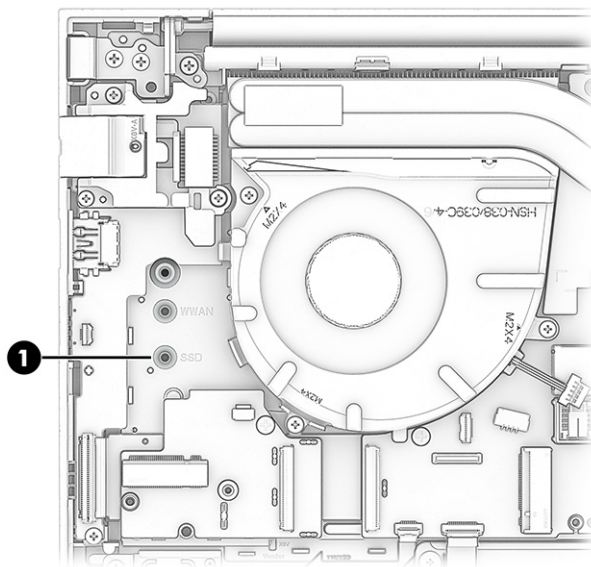

2. If a spacer is not installed, place a spacer onto the screw hole.

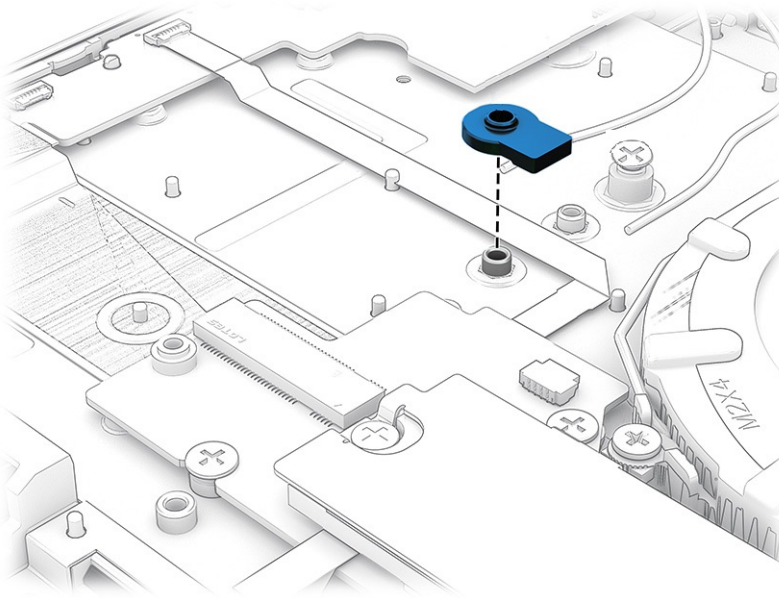

3. Insert the SSD into the socket, and then install a Phillips M2.0 × 2.5 screw.



NOTE: Solid-state drives are designed with a notch to prevent incorrect insertion.

WLAN module

Use this procedure and illustration to remove the WLAN module.

Table 5-6 WLAN module descriptions and part numbers

Description	Spare part number
MediaTek MT7922 Wi-Fi 6E + Bluetooth 5.2 WW WLAN	N64647-002
MediaTek RZ616 Wi-Fi 6E + Bluetooth 5.3 AIM-T WLAN	N22541-002



IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the WLAN module:


1. Remove the plastic protector (1) that covers the antennas.

- 2. Carefully disconnect the antenna cables (2) from the module.
- 3. Remove the Phillips M2.0 × 2.5 screw (3), and then pull the WLAN module (4) out of the socket.

 **NOTE:** The #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

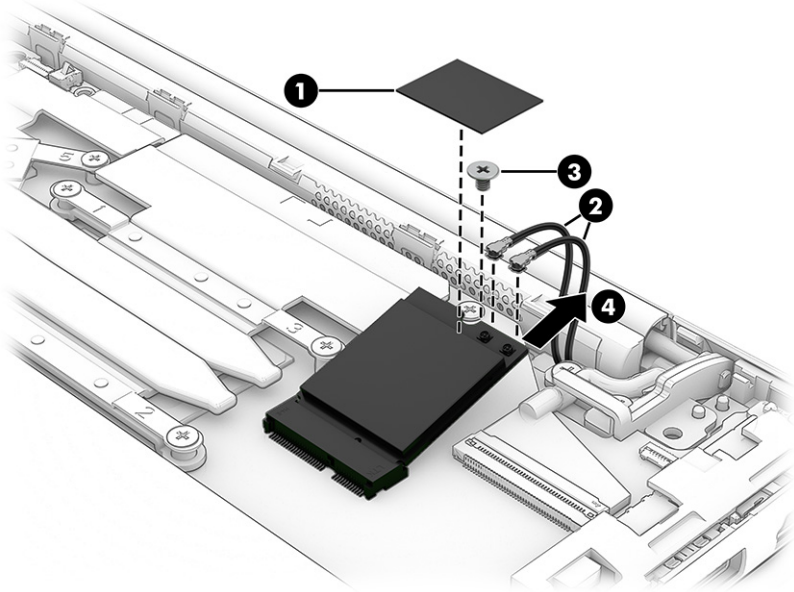

- 4. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

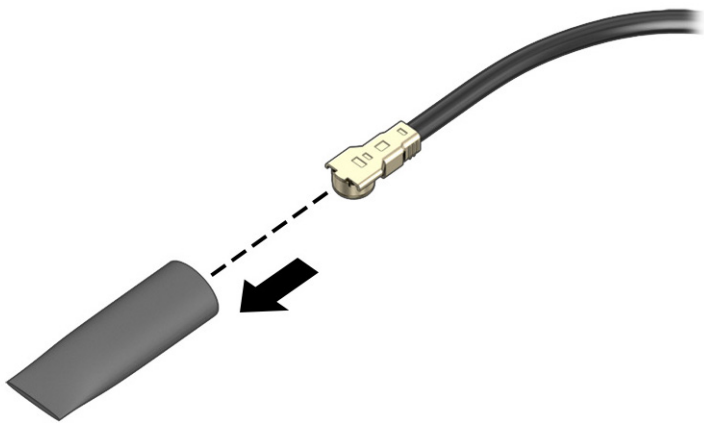

Reverse this procedure to install the WLAN module.

WWAN module

Use this procedure and illustration to remove the WWAN module.

Table 5-7 WWAN module descriptions and part numbers

Description	Spare part number
HP R15 5G Solution	P40772-002

Table 5-7 WWAN module descriptions and part numbers (continued)

Description	Spare part number
HP R15 5G Go Solution	P41680-002
HP RW220-GL LTE (CAT-1bis)	P47161-002


 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WWAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the WWAN module:

1. Peel the tape **(1)** off the bracket.
2. Remove two Phillips M2.0 × 2.5 screws **(2)** that secure the bracket.
3. Remove the bracket **(3)** from the module.

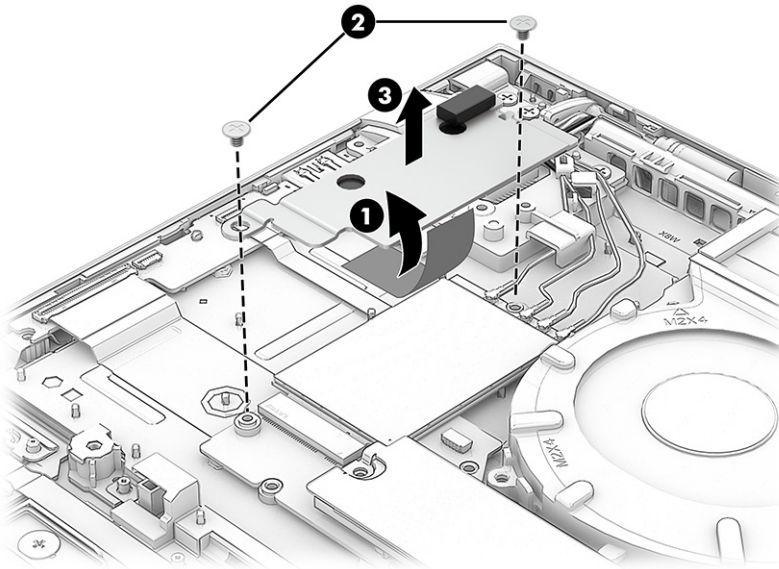


4. Disconnect the antenna cables **(1)** from the terminals on the module. The number of antenna cables can vary.


5. Remove the module (2) by pulling it away from the slot at an angle.



NOTE: Antenna cable colors might vary. Be sure to match the number on the cable with the number next to the connector on the module.

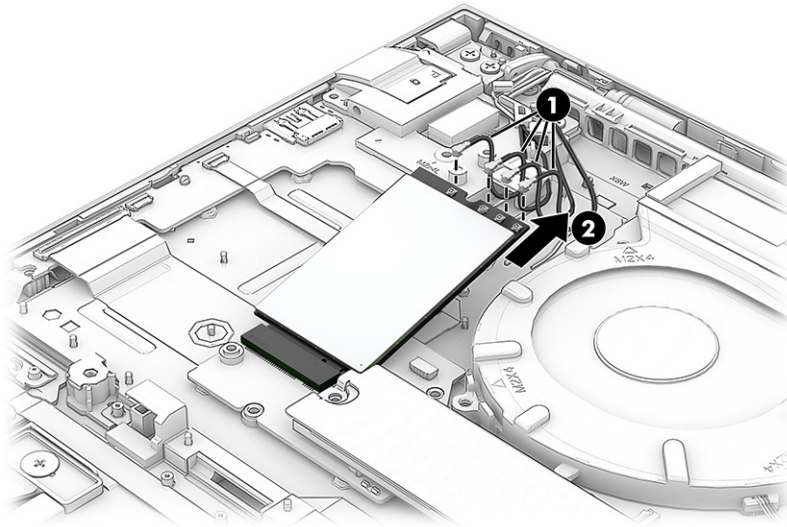

6. If the WWAN antenna is not connected to the terminal on the WWAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.

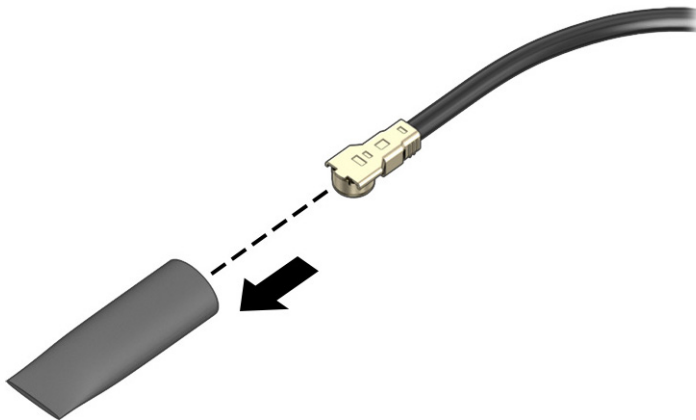

Reverse the removal procedures to install a WWAN module.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

-  **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.
-  **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.
-  **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use the procedures described in this section to remove and replace computer components.

-  **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Speakers

Use this procedure and illustration to remove the speakers.

Table 6-1 Speakers description and part number

Description	Spare part number
Speakers	P98601-001

Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the speakers:

1. Disconnect the speaker cable from the system board connector **(1)**.
2. Remove the cable from the clips **(2)** between the speakers.
3. Remove the six Phillips M2.0 × 2.0 screws **(3)** that secure the speakers to the computer.

4. Remove the speakers (4).



NOTE: When removing the speakers, make note of the location of the rubber isolators (5) in the screw holes. The absence of or damage to these isolators can result in degraded speaker performance.

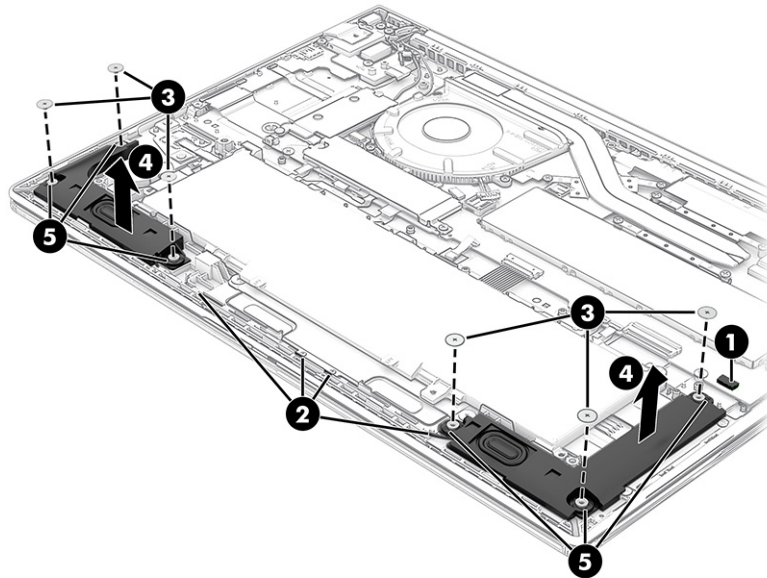

Reverse this procedure to install the speakers.

Fingerprint reader board

Use this procedure and illustration to remove the fingerprint reader board.

Table 6-2 Fingerprint reader board descriptions and part numbers

Description	Spare part number
Fingerprint reader board	P98599-001
Fingerprint reader board cable (included in the Cable Kit)	N96922-001
Fingerprint reader insert (included in the Rubber Kit)	Q00161-001
Fingerprint reader bracket (included in the Bracket Kit)	P98600-001


Before removing the fingerprint reader board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).


Remove the fingerprint reader board:

1. Disconnect the cable from the ZIF connector (1) on the fingerprint reader.

2. Remove the two Phillips M2.0 × 2.5 screws (2) that secure the fingerprint reader bracket to the computer, and then remove the bracket (3).
3. Remove the fingerprint reader board (4) from the computer.

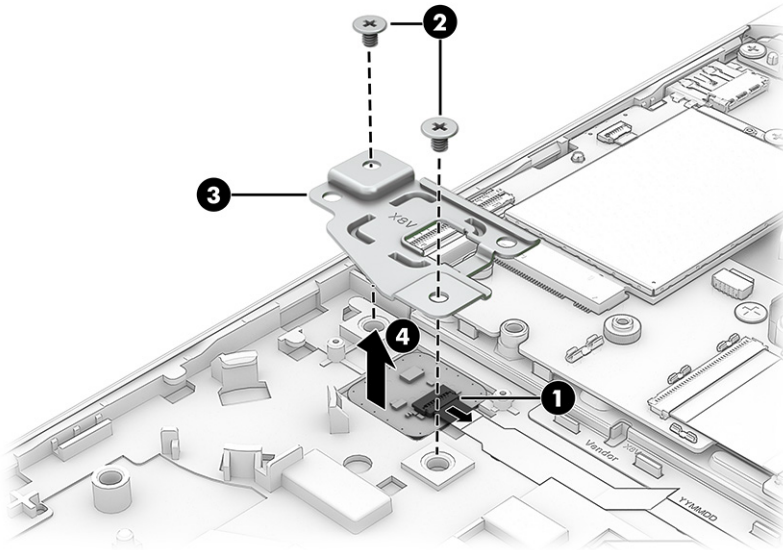

4. To remove the fingerprint reader board cable, disconnect the cable from the ZIF connector (1) on the fingerprint reader and the ZIF connector (2) on the system board.
5. Remove the cable (3) from the computer.

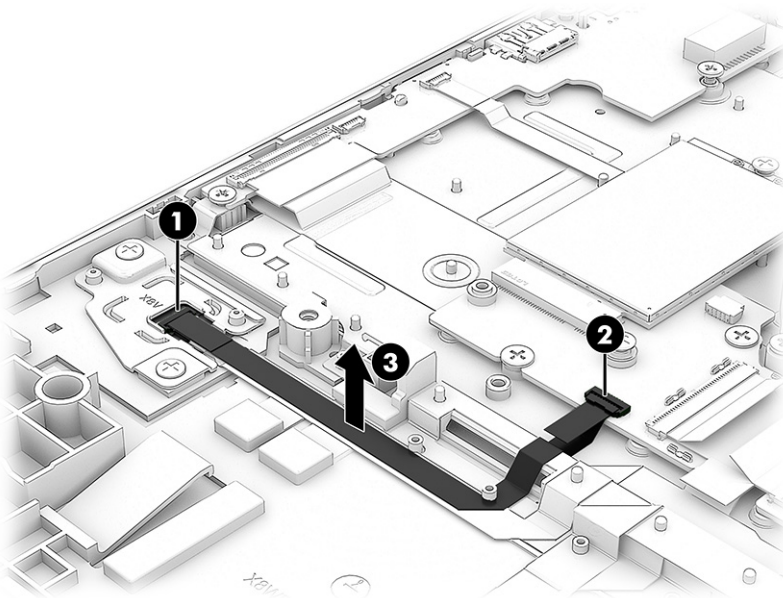

Reverse this procedure to install the fingerprint reader board.

Fan

Use this procedure and illustration to remove the fan.

Table 6-3 Fan descriptions and part numbers


Description	Spare part number
Fan (15 W models)	N96441-001
Fan (28 W models)	N96442-001

Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the fan assembly:

1. Disconnect the fan cable from the system board connector **(1)**.
2. Remove the three Phillips 2.0 × 4.0 screws **(2)** that secure the fan to the computer.
3. Remove the fan **(3)** from the computer.

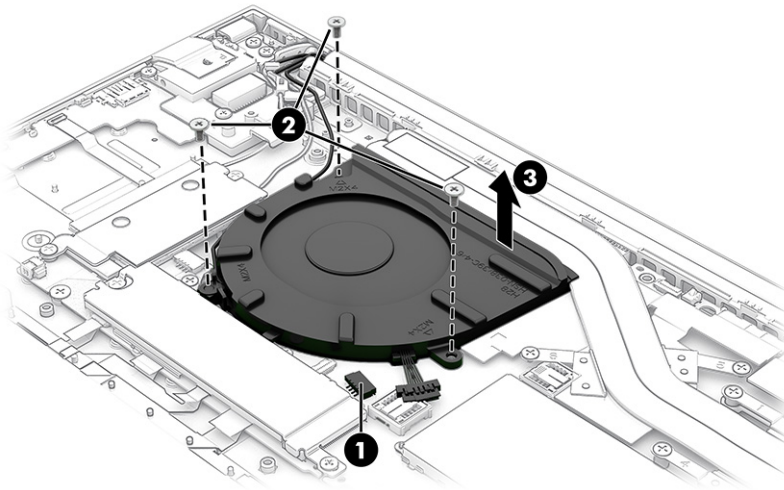

Reverse this procedure to install the fan.

I/O board

Use this procedure and illustration to remove the I/O board.

Table 6-4 I/O board descriptions and part numbers

Description	Spare part number
I/O board for use in models with only WLAN	P39185-001
I/O board for use in models with WLAN and WWAN	P39186-001
I/O board cables (included in Cable Kit)	N96922-001
RJ-45 (network) jack door for use in metal models	N96461-001

Table 6-4 I/O board descriptions and part numbers (continued)


Description	Spare part number
RJ-45 (network) jack door for use in plastic models	N96462-001

Before removing the I/O board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).
4. If installed, remove either the WWAN module or Cat-M wireless module (see [WWAN module on page 50](#)).

Remove the I/O board:

1. Disconnect the cables from the smaller ZIF connector **(1)** (select products only) and larger ZIF connector **(2)** on the I/O board.
2. Remove the four Phillips M2.0 × 4.0 screws **(3)** that secure the board to the computer, and then remove the network jack door **(4)** from the board.
3. Lift the front of the board **(5)** up, and then pull the board **(6)** into the computer to remove it.

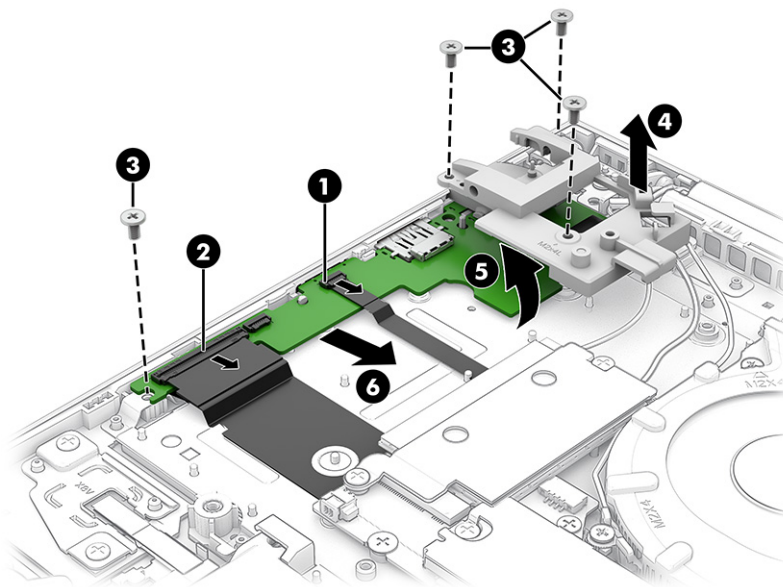

Reverse this procedure to install the I/O board.

Touchpad

Use this procedure and illustration to remove the touchpad.

Table 6-5 Touchpad descriptions and part numbers


Description	Spare part number
Touchpad (includes cable)	P99759-001
Touchpad cable (included in Cable Kit)	N96922-001

Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 38](#)).

Remove the touchpad:

1. Move the speaker cable **(1)** from the clips below the touchpad.
2. Disconnect the system board cable from the ZIF connector **(2)** on the touchpad.
3. Remove the conductive tape **(3)** from the top of the touchpad.
4. Remove the four Phillips M2.0 × 2.0 screws **(4)** that secure the touchpad to the computer.
5. Remove the three Phillips M1.6 × 2.0 screws **(5)** that secure the touchpad to the computer.
6. Remove the touchpad **(6)** from the computer.

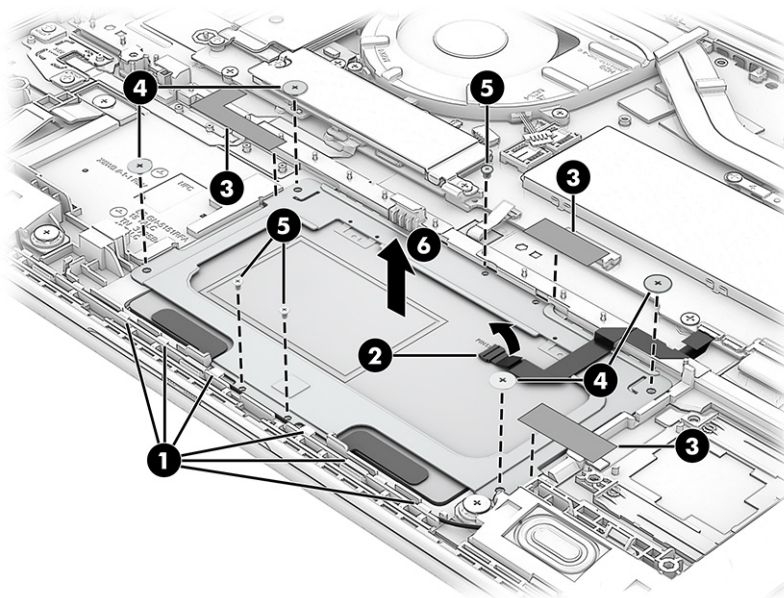

Reverse this procedure to install the touchpad.

Heat sink

Use these procedures and illustrations to remove the heat sink.

Table 6-6 Heat sink descriptions and part numbers


Description	Spare part number
Heat sink (28 W models)	P98014-001
Heat sink (15 W models)	N96443-001

Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the heat sink:

1. In the order indicated on the heat sink, remove the four Phillips M2.0 × 2.5 screws (**1**) that secure the heat sink to the computer.
2. Remove the heat sink (**2**) from the computer.

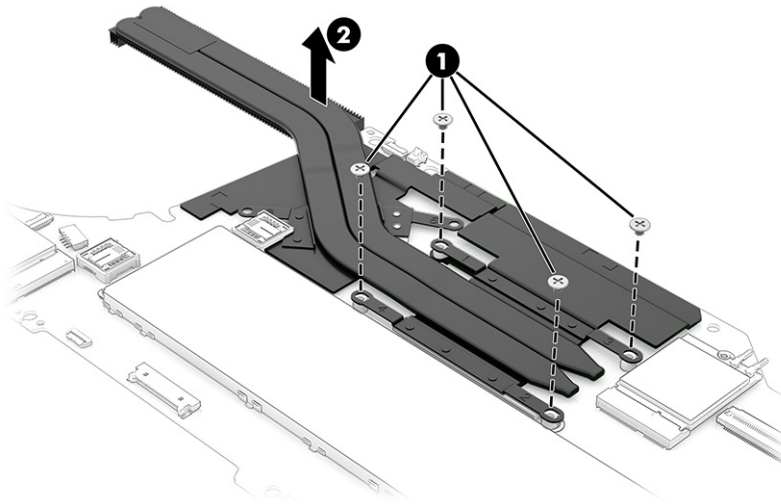

3. Thoroughly clean the thermal grease from the surfaces of the heat sink and the system board components each time the heat sink is removed. Install gray thermal grease on the heat sink.

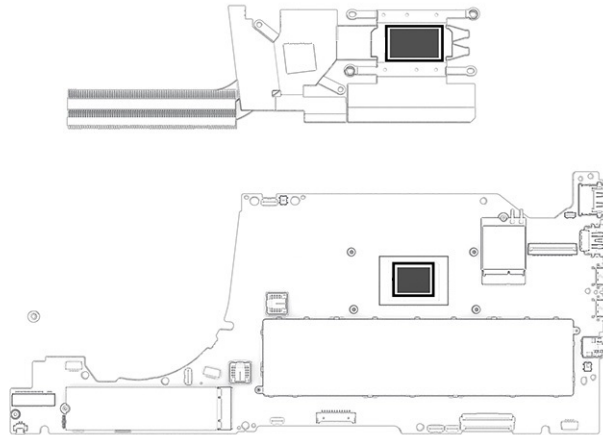

Reverse this procedure to install the heat sink.

System board

Use these procedures and illustrations to remove the system board.

Table 6-7 System board descriptions and part numbers

Description	Spare part number
System board (includes integrated processor)	
AMD Ryzen AI 7 H 450 processor	Q00357-601
AMD Ryzen AI 7 450 processor	Q00356-601
AMD Ryzen AI 7 445 processor, models without WWAN	Q00354-601
AMD Ryzen AI 5 445 processor, models with WWAN	Q00355-601
AMD Ryzen AI 5 435 processor, models without WWAN	Q00352-601
AMD Ryzen AI 5 435 processor, models with WWAN	Q00353-601
AMD Ryzen AI 5 430 processor	Q00351-601

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).
2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 38](#)).
4. Remove the fan (see [Fan on page 55](#)).


 **NOTE:** You do not have to remove the heat sink to remove the system board.

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- Memory modules (see [Memory module on page 44](#)).
- SSD (see [Solid-state drive on page 45](#)).
- WLAN module (see [WLAN module on page 49](#)).
- WWAN module (see [WWAN module on page 50](#)).
- Heat sink (see [Heat sink on page 58](#)).


Remove the system board:

1. Disconnect the following cables from the system board:
 - Remove the antenna cover from the WLAN module (select products only) **(1)**
 - Antenna cables from the WLAN module (select products only) **(2)**
 - Display cable (ZIF) **(3)**
 - Speaker cable **(4)**
 - Keyboard cable (reverse ZIF) **(5)**
 - Touchpad cable (ZIF) **(6)**
 - Keyboard backlight cable (ZIF) (select products only) **(7)**
 - Fingerprint reader cable (ZIF) (select products only) **(8)**
 - I/O board cable (reverse ZIF) from I/O board **(9)**

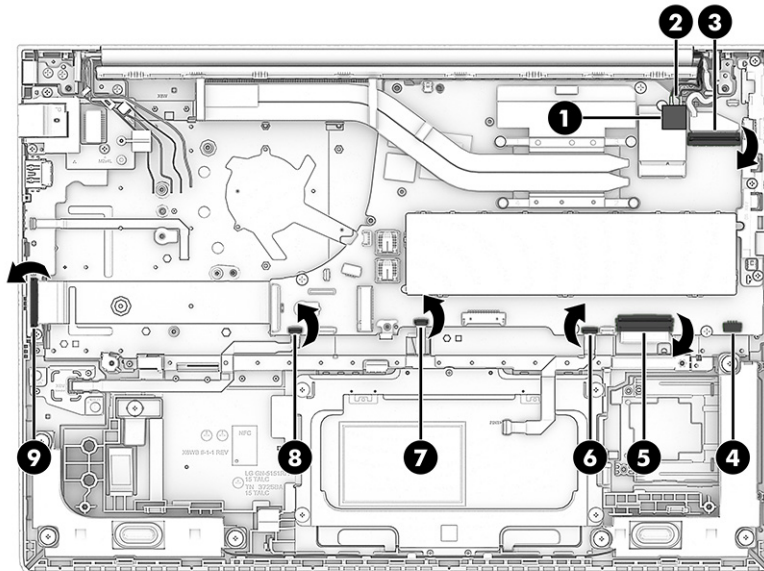


2. Remove the four Phillips M2.0 × 1.8 screws **(1)** from the system board.
3. Remove the three Phillips M2.0 × 4.0 screws **(2)** from the plastic I/O bracket.

4. Remove the bracket **(3)** from the right edge of the board.

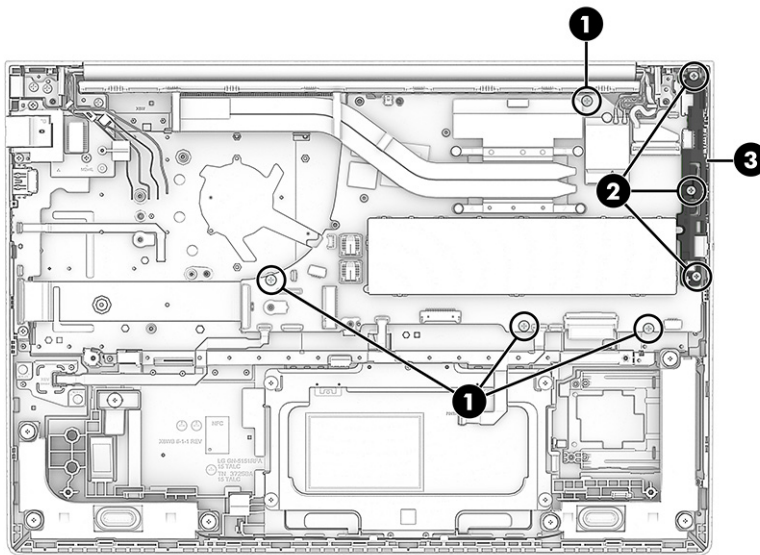

5. Lift the side of the system board **(1)** upward, and then pull the system board **(2)** away from the connectors on the side of the computer to remove it.

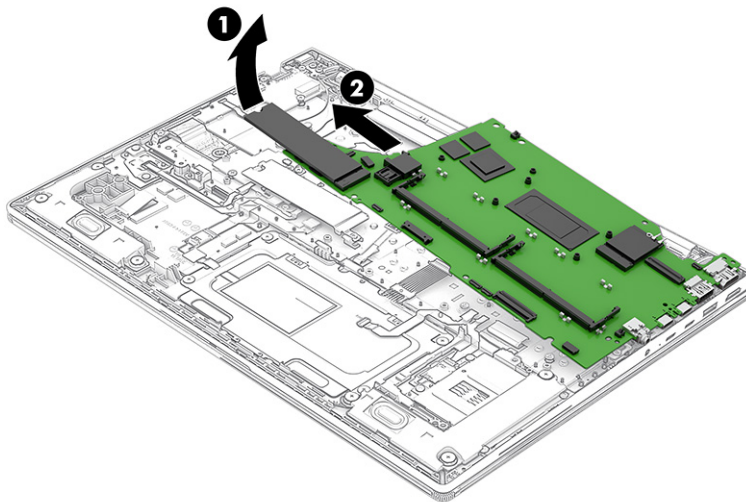

Reverse this procedure to install the system board.

Display assembly

Use these procedures and illustrations to remove and disassemble the display assembly.

Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.


Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 35](#)).


2. Remove the bottom cover (see [Bottom cover on page 35](#)).
3. Disconnect the battery cable from the system board (see [Removing and reinstalling the same battery on page 38](#)).

Remove the display assembly:


1. (Select models only) Disconnect the antenna cables **(1)** from the WWAN module.
2. (Select models only) Disconnect the WWAN cable from the system board connector **(2)**.
3. (Select models only) Remove the WWAN cable and antenna cables from the routing channel **(3)** in the RJ-45 door bracket.
4. Disconnect the antenna cables **(4)** from the WLAN module.
5. Disconnect the display cable **(5)** from the system board ZIF connector.
6. Remove the display cable and WLAN antenna cables from the metal clip **(6)** at the bottom of the hinge.

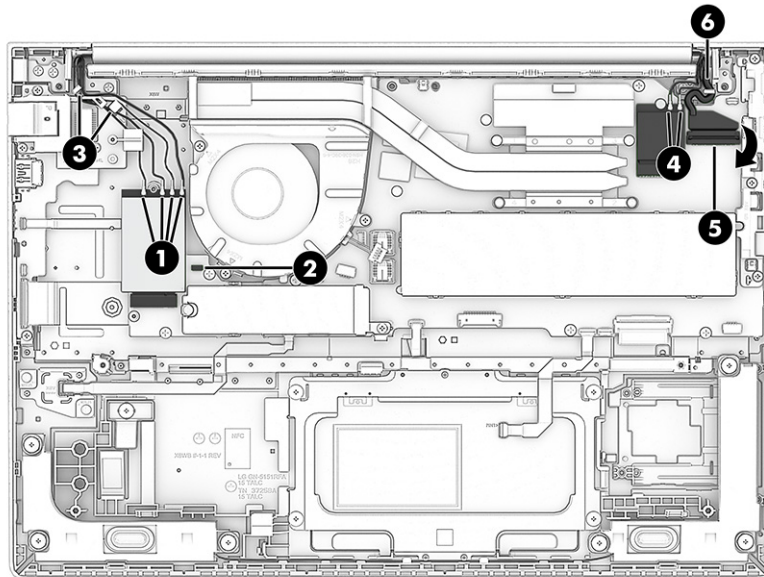

7. Remove the seven Phillips M2.5 × 4.0 screws that secure the display assembly to the computer.

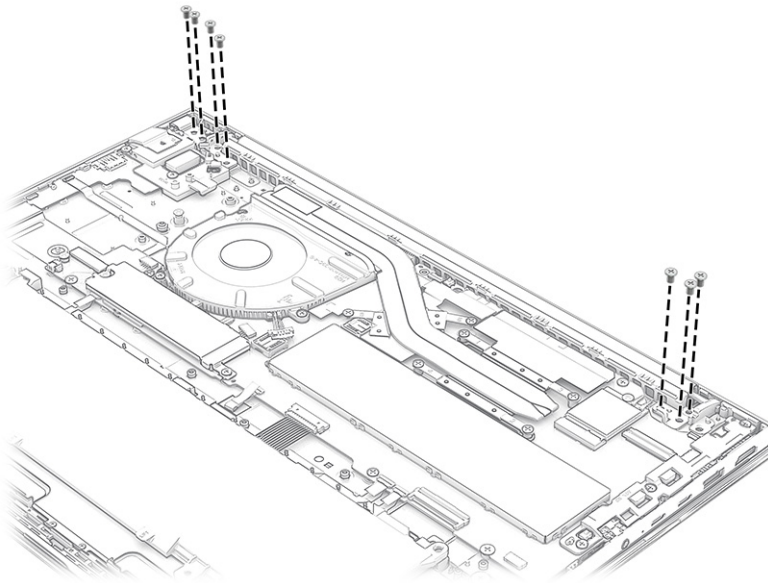


8. Open the display (1).
9. Rotate the hinges (2) up.
10. Separate the display assembly (3) from the computer.

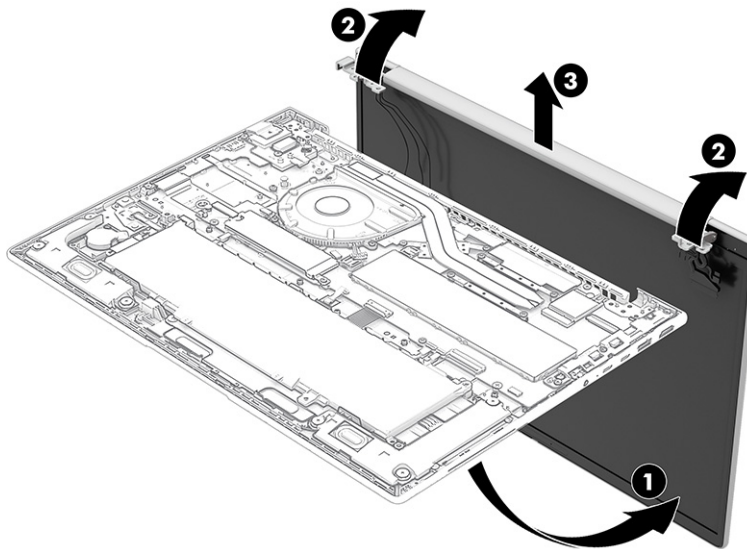

11. To remove the bezel:
 - a. Use a thin plastic tool (1), such as a case utility tool, to separate the outside edges of the display bezel from the display assembly.
 - b. In the following sequence, release the top (2), left and right (3), and bottom (4) edges of the display bezel from the display assembly.


- c. Remove the bezel (5) from the display.

 **NOTE:** To avoid damaging the panel, do not use a tool to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

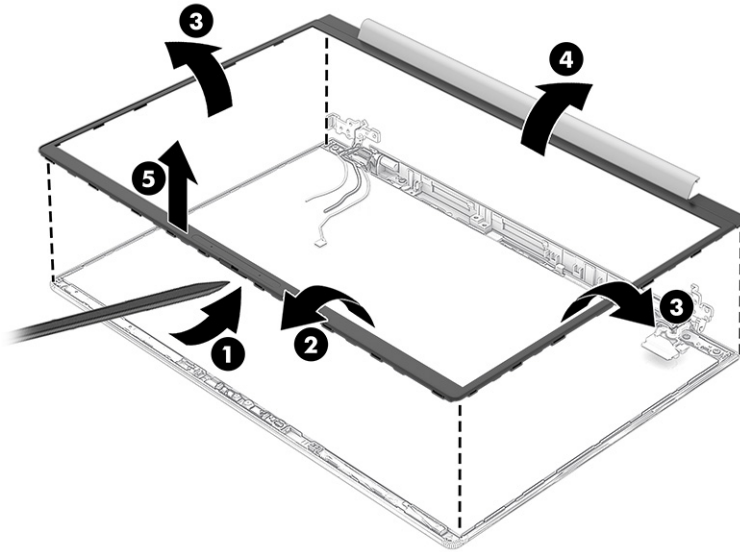


12. To remove the display panel:


- a. The display panel is secured to the display enclosure with tape that is installed under the sides of the panel. To remove the panel from all four corners (1), use tweezers (2) to pull the end of the tape out from behind the panel. Use tweezers or your fingers to pull the tape (3) out from behind the display panel. You must pull the tape multiple times before it is completely removed.
- b. Rotate the display panel over and place it next to the display enclosure.

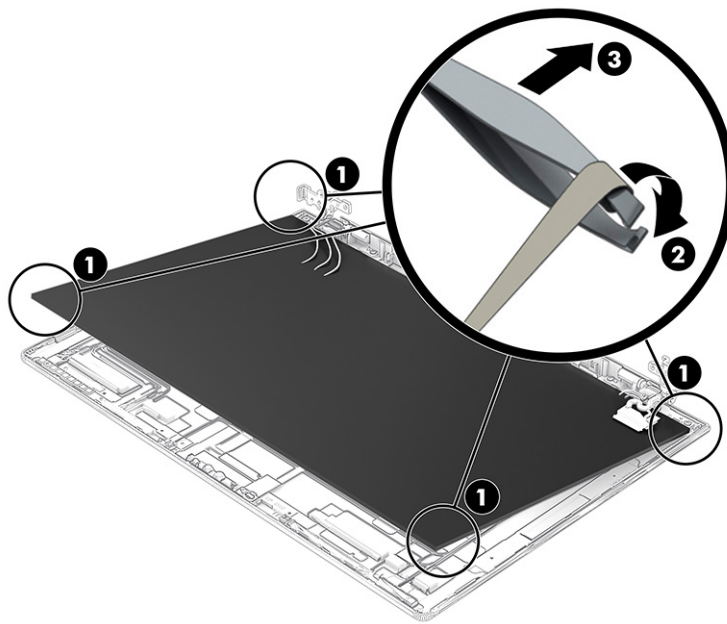

- c. Lift the tape **(1)** and the locking arm **(2)** from the connector on the display panel, and then disconnect the cable **(3)** from the panel.

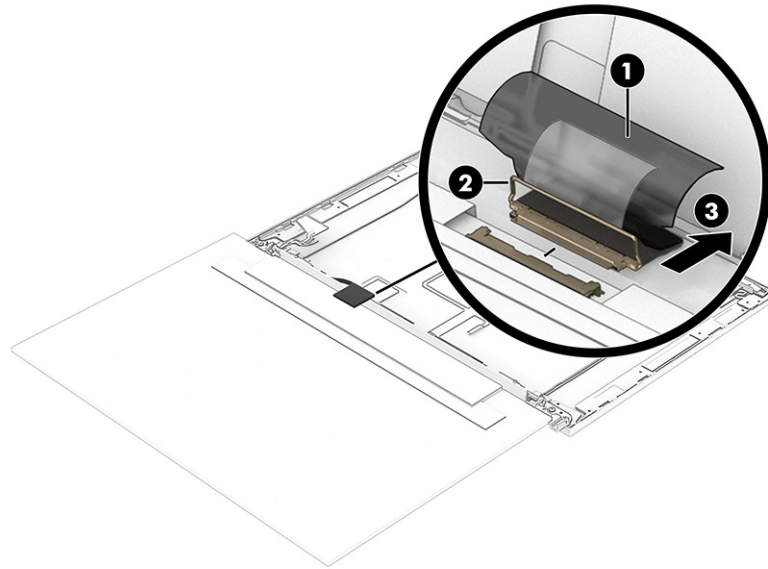


- d. When installing a display panel, use the following illustration to determine tape installation locations on the inside of the display rear cover.

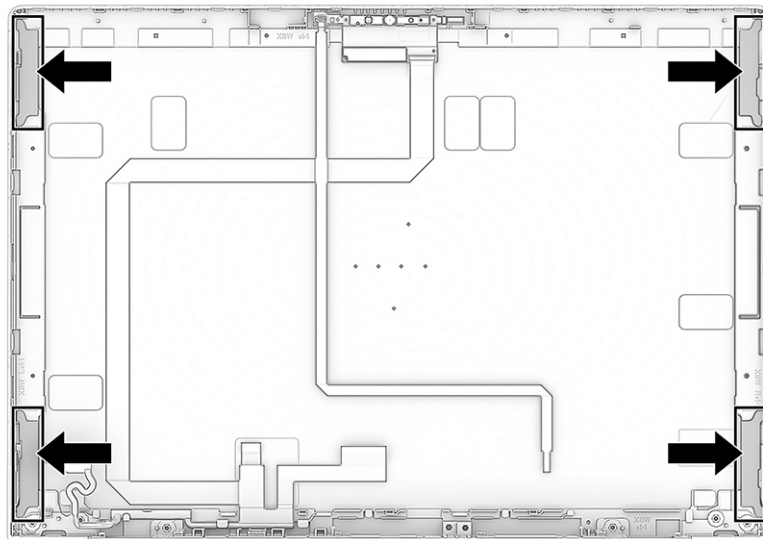

13. To remove an IR camera module:

- a. Disconnect the cable from the ZIF connector **(1)** on the module. Starting on the left side of the module, use a tool **(2)** to release the module, and then remove the module **(3)**.

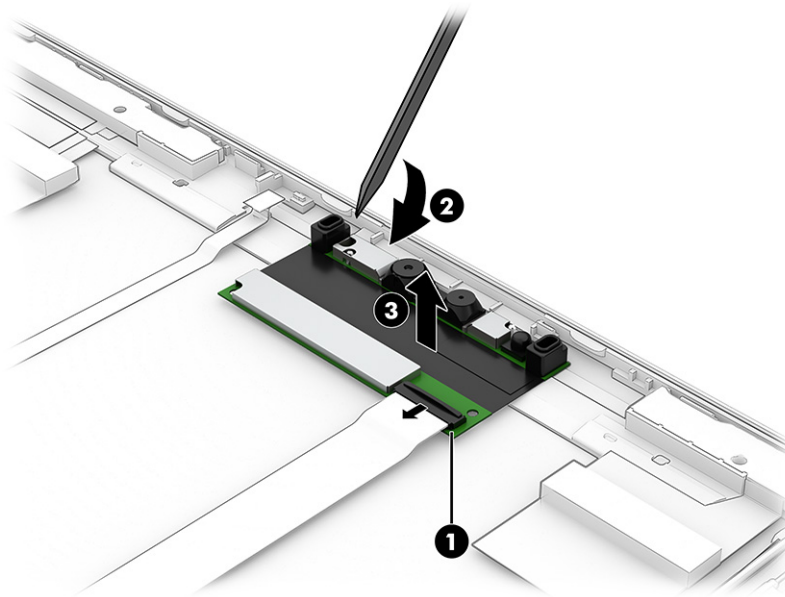


- b. IR cameras use different black protective tape depending on the panel. When installing a new IR camera, be sure to add new tape that matches the shape of the tape on the old camera.

14. To remove an FHD camera module:

- Starting on the left side of the module, use a tool **(1)** to release the module. Lift the module **(2)** up, and then disconnect the cable from the reverse ZIF connector **(3)** on the module.



NOTE: During installation, note that the cable routes under the camera module before it connects to the module. Insert the bottom side of the module first when installing the camera.

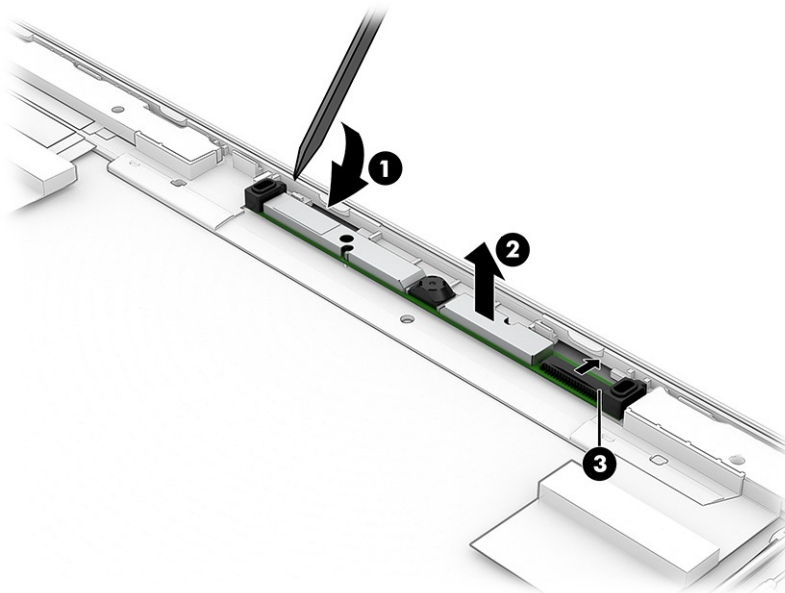


15. To remove the display panel/camera cable:


- a. Disconnect the cable from the camera module **(1)**.
- b. Release the display panel cable from the retention clips **(2)** and routing channel built into the bottom edge of the display back cover.
- c. Carefully detach the cable **(3)** from the display back cover.



NOTE: The following illustration shows the IR camera module.

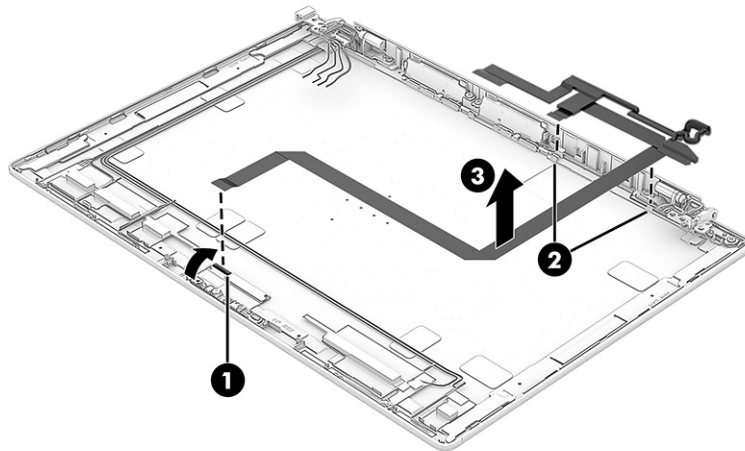


- d. Disconnect the cable from the camera module.
- 16.** To remove the wireless antennas and cables:
- a. Release the adhesive tabs **(1)** that secure the wireless antenna cables to the display back cover.
 - b. Detach the wireless antennas **(2)** from the display back cover. The antennas are attached with double-sided adhesive.

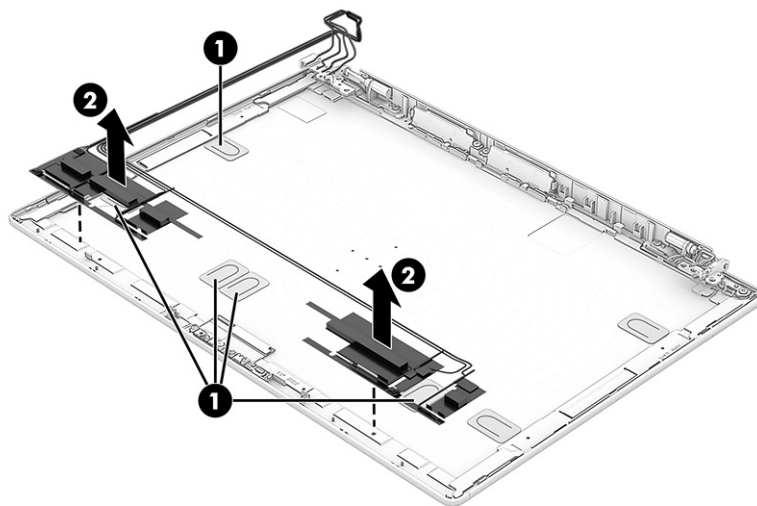

- 17.** To remove the WCA antennas (used with 5G WWAN):


- a. Remove the two screws **(1)** that secure the antennas.
- b. Lift the tape **(2)** that secures the cable to the display.
- c. Remove the cable from the clips **(3)**.
- d. Rotate the top of the antennas **(4)** downward, and then remove the antennas **(5)**.

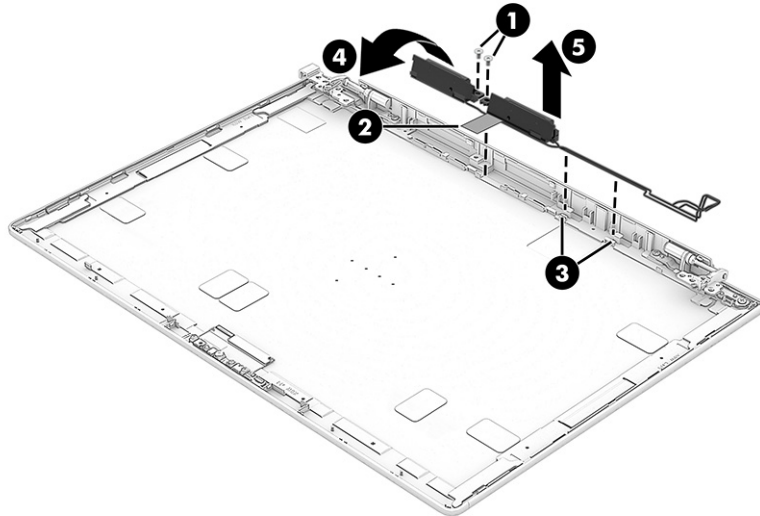

18. To remove the hinges from the display enclosure:

 **NOTE:** You do not have to remove the display panel to remove the hinges.

- a. Remove any cables that route around the hinges.
- b. Remove the three Phillips M2.0 × 4.0 screws **(1)** from each hinge.
- c. Remove the hinges **(2)** from the display.

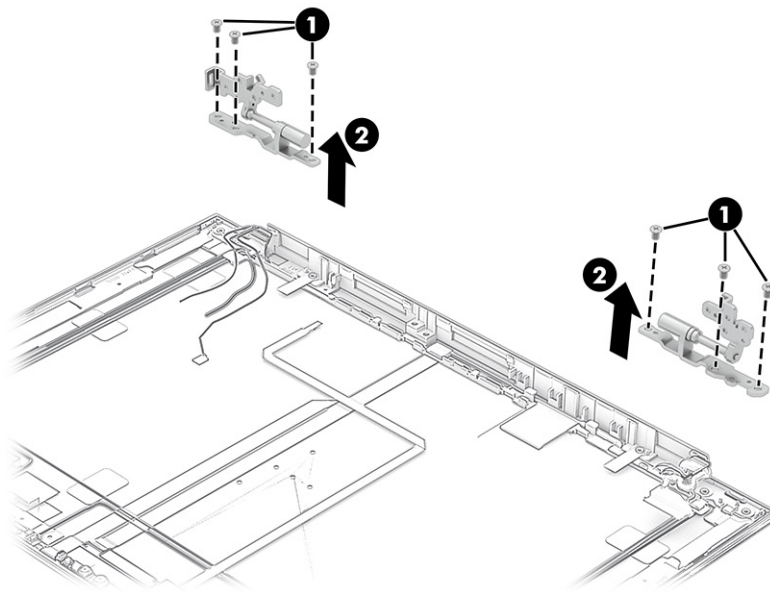

Reverse these procedures to reassemble and replace the display assembly.

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers with keyboards. The second table provides the country codes.

Table 6-8 Top cover with keyboard descriptions and part numbers

Description	Spare part number
Backlit, aluminum models	Q03476-xx1
Backlit, plastic models	Q03477-xx1

Table 6-9 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Hungary	-211	Saudi Arabia	-171
Brazil	-201	Iceland	-DD1	Slovenia	-BA1
Bulgaria	-261	India	-D61	South Korea	-AD1
Chile	-161	Israel	-BB1	Spain	-071
Czech Republic/Slovakia	-FL1	Italy	-061	Switzerland	-BG1
Denmark	-081	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
Finland/Sweden	-B71	Norway	-091	Turkey-F	-541
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001

7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.

 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 72](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 72](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see [Recovering using the HP Recovery USB flash drive on page 72](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using the HP Recovery USB flash drive

You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive \(select products only\) on page 71](#).



NOTE: In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 72](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
 - Volume up
 - Volume down

Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the OS
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

8 Computer Setup (BIOS), TPM, and HP Sure Start

HP provides several tools to help set up and protect your computer.

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as hard drives, display, keyboard, mouse, and printer). Computer Setup includes settings for types of devices installed, the startup sequence of the computer, and amount of system and extended memory.



NOTE: Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

To start Computer Setup, turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

You can navigate and select in Computer Setup using one or more methods.

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **enter**.

- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.



NOTE: If you are using arrow keys to highlight your choice, you must then press **enter**.

Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps.



NOTE: Restoring defaults will not change the hard drive mode.

1. Start Computer Setup. See [Using Computer Setup on page 74](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

If you are already in Windows, you can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing **fn+esc** (select products only). Or you can use Computer Setup.

1. Start Computer Setup. See [Using Computer Setup on page 74](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 75](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to the following types of reliable external power:

- The HP AC adapter provided with the computer (select products only)
 - A replacement AC adapter provided by HP
 - An AC adapter with the power rating specified on the product label
-

Do not download or install a BIOS update while the computer is operating under these circumstances:

- Running on battery power

- Docked in an optional docking device
- Connected to an optional docking power source

During the download and installation, follow these instructions:

- Do not disconnect power on the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon (select products only) in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps.

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

TPM BIOS settings (select products only)

Trusted Platform Module (TPM) provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).



IMPORTANT: Before enabling TPM functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation or usage of TPM that violates the previously mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.



NOTE: If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Using Computer Setup on page 74](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 79](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.

2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP PC Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 81](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.

2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 82](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable Fast Boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable Fast Boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	359.4 mm	14.15 in
Depth	251.0 mm	9.88 in
Height (front)	11.0 mm - 11.5 mm	0.43 in - 0.45 in
Height (rear)	17.0 mm - 17.5 mm	0.67 in - 0.69 in
Height (maximum)	19.9 mm - 20.4 mm	0.78 in - 0.80 in
Weight (with 56 Whr battery)	1.74 kg	3.83 lbs
Input power		
Operating voltage and current	5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 5 A / 20 V DC @ 5 A - 100 W USB-C 5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 4.33 A / 20 V DC @ 3.25 A - 65 W USB-C 5 V DC @ 3 A / 9 V DC @ 3 A / 10 V DC @ 5 A / 12 V DC @ 5 A / 15 V DC @ 4.33 A / 20 V DC @ 3.25 A - 65 W USB-C	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft

Table 10-1 Computer specifications (continued)

	Metric	U.S.
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft



NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	40.6 cm	16.0 in
Resolution	2560 × 1600 (2.5 K)	
	1920 × 1200 (WUXGA)	
Surface treatment	Antiglare	
Brightness	300 nits	
	400 nits	
Viewing angle	UWVA	
Backlight	LED	
	WLED	
	OLED	
Display panel interface	eDP	

11 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



NOTE: If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then quickly press **esc**.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.
- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Restart the system. If the system has a TPM, fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following tasks:
- Remove and retain the storage drive.
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Finish by completing one of these tasks:
 - Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
 - Clear the contents of the drive using the following Disk Sanitizer commands steps:
 - i. Turn on or restart the computer, and then quickly press **esc**.
 - ii. Select the **Security** menu and scroll down to the **Utilities** menu.
 - iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



NOTE: The amount of time it takes for Disk Sanitizer to run can be several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 11-1 Troubleshooting information for nonvolatile memory usage

Description	Volatility description	Storage user data	How to erase
Primary storage device, holds the OS, applications, and application settings	Nonvolatile, 8-256 GB of eMMC or NVMe SSD storage, removable	Yes ¹	See Current BIOS steps on page 86 for information about erasing the primary storage device.
System memory (RAM), holds transient data during system operation	Volatile, SODIMM socket. Removable (4 GB/8 GB/16 GB)	Yes	Unplug unit from power.
Permanent system BIOS settings	Nonvolatile, 16 KB, stored	No ²	See Current BIOS steps on page 86 for information about clearing BIOS settings.
System boot ROM (BIOS)	Nonvolatile memory, 128 Mbit (16 MB) socketed, removable	No	Download the latest BIOS for your model from the HP website and follow the instructions to flash the BIOS that are on the website.
RTC (CMOS) RAM	Volatile memory, 256 bytes located in AMD embedded System on Chip (SoC)	No	Desktop computers with a CMOS button: Unplug unit from main power, remove top cover and press the Clear CMOS button. Notebook and desktop computers without a CMOS button: 1. Press and hold power button for 12 seconds. 2. Press Windows key + V, and then press power button.
Keyboard/mouse (ROM)	Nonvolatile, 2 KB embedded in the super I/O controller (SIO2)	Yes	N/A
Keyboard/mouse (RAM)	Volatile, 256 bytes embedded in the super I/O controller (SIO2)	No	Unplug unit from main power.
LOM EEPROM	Nonvolatile, 2 MB embedded in LAN controller	No	N/A
TPM	Nonvolatile, 51 KB ROM for firmware and 38 KB system parametric data	No ³	See Current BIOS steps on page 86 for information about clearing TPM.

¹ Under typical operation, the only user data stored on the primary storage device are preferences for device configuration and settings for connections. However, the administrator can configure the system to allow users to store data locally.

² The only user data potentially stored in BIOS Settings are the ownership and asset tags, administrator password, and startup password.

³ The TPM might contain encrypted passwords or certificates generated from user or administrator input.

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Apply Factory Defaults and Exit**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older legacy BIOS architecture.

The UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a GUI. In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?

 **IMPORTANT:** Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

12 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 12-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

Table 12-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a 2-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a 2-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type HO5VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

13 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about lithium-ion batteries and the factors that can accelerate battery swelling, see https://support.hp.com/us-en/document/ish_6824662-6824706-16.

Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact <https://www.hp.com/go/contacthp> to understand what battery replacement options are available.

Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

Adaptive Battery Optimizer (consumer notebooks)

Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling Adaptive Battery Optimizer on your HP notebook, see https://support.hp.com/us-en/document/ish_9908083-9908127-16.

HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see https://support.hp.com/us-en/document/ish_4449597-3519507-16.

14 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

AC adapters, spare part
numbers 23
audio-out (headphone)/audio-in
(microphone) combo jack,
identifying 7
audio, product description 2

B

backup, creating 71
backups 71
battery
illustrated 19
spare part number 19
battery light 6
battery swelling 94
BIOS
determining version 75
downloading an update 76
preparing for an update 75
updating 75
Bluetooth label 15
boot order
changing using the f9
prompt 77
boot order, changing 73
bottom cover
illustrated 20
removal 35
spare part number 20, 35
buttons
left touchpad 10
right touchpad 10

C

camera 8
identifying 8
camera light, identifying 8
camera privacy cover,
identifying 8
caps lock light, identifying 11
caring for your computer 31
cautions
electrostatic discharge 27, 28
cleaning your computer 31
caring for wood veneer 33
disinfecting 32

HP Easy Clean 31
removing dirt and debris 31
components
bottom 14
display 7
keyboard area 9
left side 5
right side 5
computer major components 18
Computer Setup
navigating and selecting 74
restoring factory settings 74
starting 74
computer specifications 84

D

display
specifications 84, 85
display assembly
subcomponents 21
display back cover
illustrated 22
spare part number 22
display bezel
illustrated 22
spare part number 22
display cable
illustrated 22
spare part number 22
display components 7
display panel
illustrated 22
product description 1
spare part number 22

E

electrostatic discharge (ESD) 27,
28
preventing damage 27-29
esc key, identifying 13

F

fan
illustrated 20
removal 55
spare part number 20, 55

fingerprint reader
illustrated 20
spare part number 20
fingerprint reader board
removal 54
spare part numbers 54
fingerprint reader, identifying 12
fn key, identifying 13
fn lock light, identifying 11

G

grounding methods 27-29
guidelines
packaging 27, 33
transporting 27, 33
workstation 27

H

hard drive
product description 2
specifications 84
HDMI port, identifying 6
heat sink
removal 58
spare part numbers 58
hinge
illustrated 22
spare part number 22
HP PC Hardware Diagnostics UEFI
downloading 81
failure ID code 80
HP Hotkey Support
software 81
starting 80, 81
using 80
HP PC Hardware Diagnostics
Windows
accessing 78, 79
downloading 79
failure ID code 78
installing 80
using 78
HP Recovery media
recovery 72
HP Sure Recover 73
HP Sure Start 86

I

I/O board
 illustrated 19
 removal 56
 spare part number 19, 56
illustrated parts catalog 18
integrated numeric keypad,
 identifying 14
internal microphones,
 identifying 8

J

jacks
 audio-out (headphone)/audio-in
 (microphone) combo 7
 network 5
 RJ-45 (network) 5

K

keyboard
 product description 3
keypad
 integrated numeric 14
keys
 esc 13
 fn 13
 num lk 13
 power 14
 Windows 13
 Windows application 13

L

labels
 Bluetooth 15
 regulatory 15
 serial number 15
 service 15
 wireless certification 15
 WLAN 15
left side components 5
lights
 AC adapter and battery 6
 battery 6
 camera 8
 caps lock 11
 fn lock 11
 microphone mute 11
 num lk 11
 power 11
 RJ-45 (network) 5
lights, num lk 11
low blue light mode 7

M

memory
 nonvolatile 86
 volatile 86
memory module
 illustrated 19
 product description 1
 spare part number 19
memory modules
 removal 44
 spare part numbers 44
microphone
 product description 2
microphone mute light,
 identifying 11
model name 1

N

NanoSIM tray, identifying 5
network jack, identifying 5
nonvolatile memory 86
num lk light 11
num lk light, identifying 11

O

operating system, product
 description 3

P

packaging guidelines 27, 33
pointing device, product
 description 3
ports
 HDMI 6
 product description 2
 USB SuperSpeed 5, 6
 USB Type-C with HP Sleep and
 Charge 6
power cord
 requirements for all
 countries 91
 requirements for specific
 countries and regions 91
 set requirements 91
 spare part numbers 25
power key, identifying 14
power lights 11
power requirements, product
 description 3
primary storage
 product description 2
processor
 product description 1

product description
 audio 2
 display panel 1
 hard drive 2
 keyboard 3
 memory module 1
 microphone 2
 operating system 3
 pointing device 3
 ports 2
 power requirements 3
 primary storage 2
 processors 1
 product name 1
 RJ-45 (network) jack 2
 security 3
 sensors 3
 serviceability 4
 solid-state drive 2
 video 2
 wireless 2
product name 1
product name and number,
 computer 15

R

recovery 71
 discs 72
 media 72
 USB flash drive 72
recovery media 71
 creating using HP Cloud
 Recovery Download
 Tool 71
 creating using Windows
 tools 71
regulatory information
 regulatory label 15
 wireless certification labels 15
Remote HP PC Hardware
 Diagnostics UEFI settings
 customizing 83
 using 82
removal and replacement
 procedures 35, 53
 solid-state drive 45
 solid-state drive, M.2 2230 47
removing personal data from
 volatile system memory 86
restoring 71
restoring and recovery
 methods 72
right side components 5
RJ-45 (network) jack, identifying 5

RJ-45 (network) jack, product description 2
RJ-45 (network) lights, identifying 5

S

security cable slot, identifying 5
security, product description 3
sensors
 product description 3
serial number, computer 15
service labels, locating 15
serviceability, product description 4
setup utility
 navigating and selecting 74
 restoring factory settings 74
slots
 security cable 5
solid-state drive
 illustrated 20
 product description 2
 removal and replacement 45
 spare part number 20
solid-state drive, M.2 2230
 removal and replacement 47
spare part country codes 70
speaker
 illustrated 20
 spare part number 20
speakers
 removal 53
 spare part numbers 53
speakers, identifying 15
special keys, using 12
specifications
 computer 84
 display 84, 85
 hard drive 84
SSD board
 illustrated 20
 spare part number 20
static electricity 27, 28
support information 33
Sure Start
 using 77
swelling or deformation of notebook battery 94
system board
 illustrated 19
 removal 60
 spare part number 19
 spare part numbers 60

system memory, removing personal data from volatile 86
system restore 72
system restore point, creating 71

T

top cover with keyboard
 illustrated 19
 spare part numbers 19, 70
touchpad
 illustrated 19
 removal 57
 settings 9
 spare part number 19, 57
touchpad buttons
 identifying 10
touchpad zone, identifying 10
TPM settings 77
transporting guidelines 27, 33
traveling with the computer 15

U

USB port, identifying 5, 6
USB Type-C port with HP Sleep and Charge, identifying 6

V

vent, identifying 15
video, product description 2

W

Windows
 backup 71
 recovery media 71
 system restore point 71
Windows application key, identifying 13
Windows key, identifying 13
Windows tools, using 71
wireless antennas
 illustrated 22
 spare part number 22
wireless antennas, identifying 8
wireless certification label 15
wireless, product description 2
WLAN antennas, identifying 8
WLAN device 15
WLAN label 15
WLAN module
 illustrated 20
 removal 49
 spare part number 20
 spare part numbers 49

workstation guidelines 27
WWAN board
 illustrated 20
 spare part number 20
WWAN module
 removal 50
 spare part numbers 50