



设置和参考指南


Setup and Reference Guide



HP LaserJet Pro
P1106 plus / P1108 plus


打印机设置

1

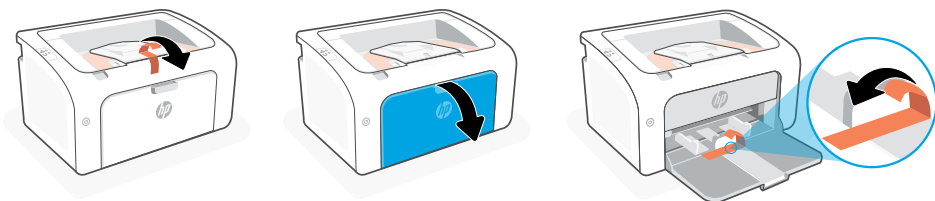

从打印机上撕下所有橙色胶带。


2

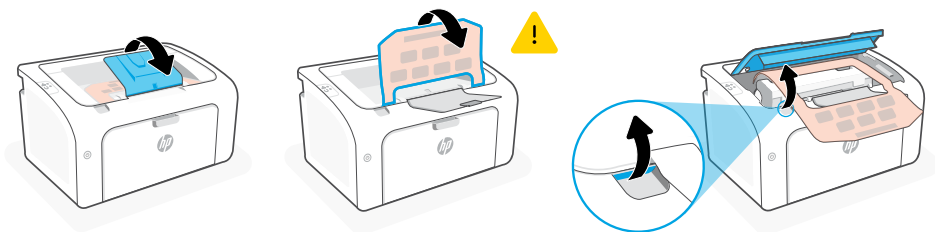

展开出纸盘，将说明页向下翻折，然后打开硒鼓检修门。

 为避免撕坏说明书，在这一步中**请勿**将其从打印机中拉出。


3

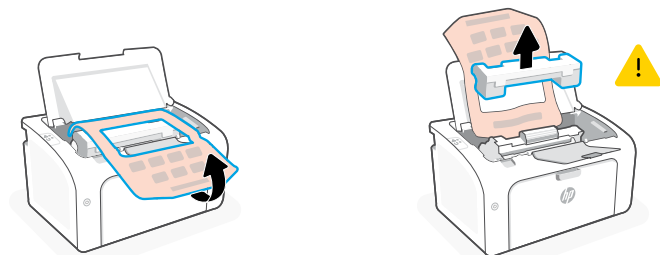

将挡盖上的说明书向上翻折，然后取下泡沫。


 为避免撕坏说明书，在这一步中**请勿**将其从打印机中拉出。

4

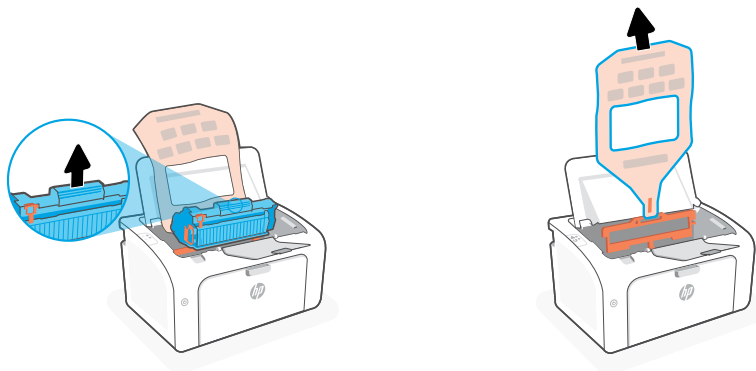

先从打印机中取出硒鼓，然后再取出说明书。

 
5

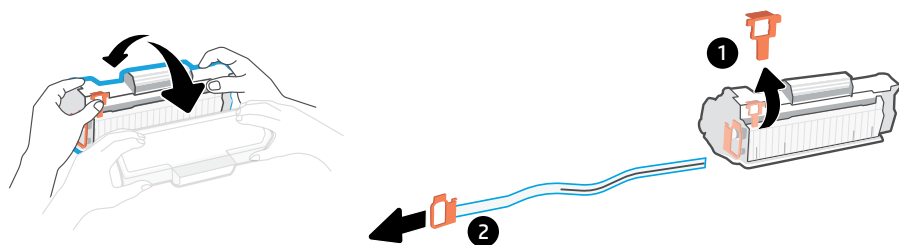

摇晃打印机硒鼓，使碳粉均匀分布。



取下橙色导板 (1) 并拉出橙色耳片 (2)，从而**完全**取下硒鼓的保护膜。

6

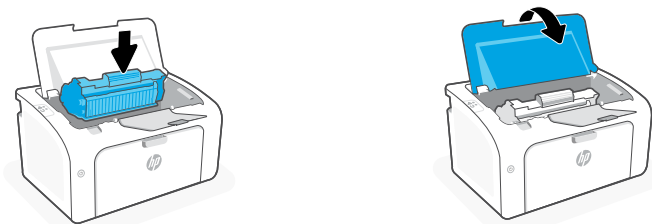

重新插入硒鼓并关闭检修门。

7

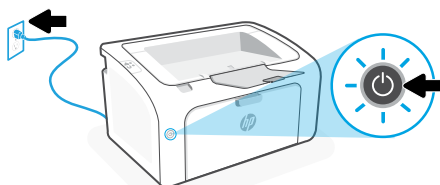
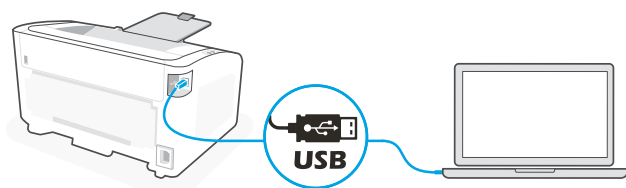


使用 USB 连接线将打印机连接到计算机，然后插入电源线并打开打印机。




请参阅**打印机参考**，了解 USB 连接和故障排除提示。

8

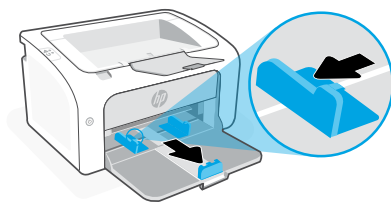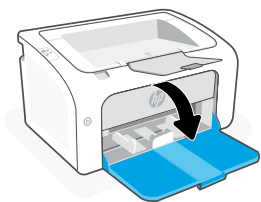


打开进纸盘，然后滑出导板。

9

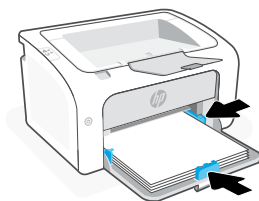

装入纸张并调整导板。

10

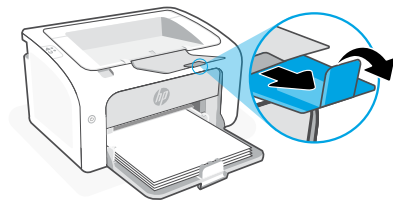

拉开出纸盘延伸板。

11



123.hp.com

访问 123.hp.com 并安装 HP 软件以完成安装设置。



hp.com/support/printer-setup

 


开始使用时遇到问题？ 在线查找设置信息和视频。

打印机参考

打印机功能

简体中文

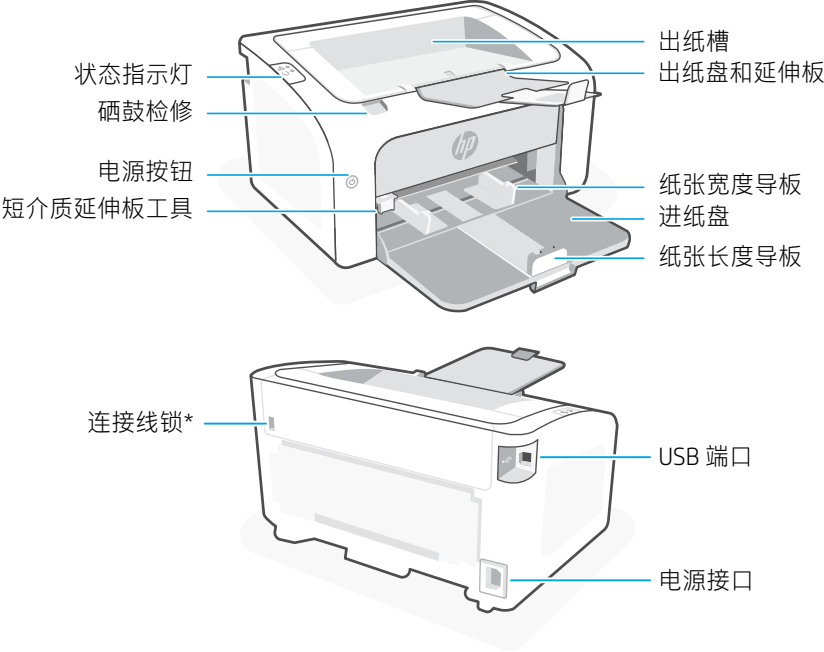

*安全电缆连接点。

状态指示灯和行为




- 打印准备就绪 (Ready for printing)
- 正在处理 (Processing)
- 硒鼓中的碳粉严重不足 (Toner level is critically low)
- 需要用户注意 (未完成碳粉安装、手动双面打印、缺纸或其他问题)。(User attention required (toner installation not completed, manual double-sided printing, paper shortage, or other issues).)
- 正在初始化、正在清洁或固件更新 (Initializing, cleaning, or firmware update)


有关指示灯模式的完整列表，请参阅 hp.com/support 上的用户指南。

针对短介质进行纸盒调整


要在长度不到 185 毫米（7.28 英寸）的介质上打印，请使用短介质延伸板调整进纸盘。

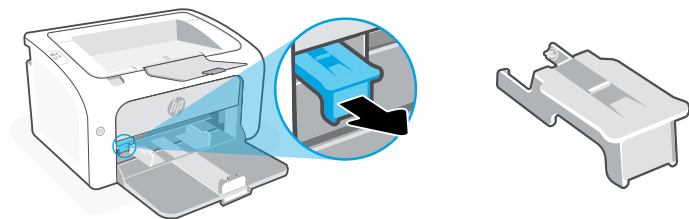

1. 从介质进入区域左侧的储存插槽中取出短介质延伸板。

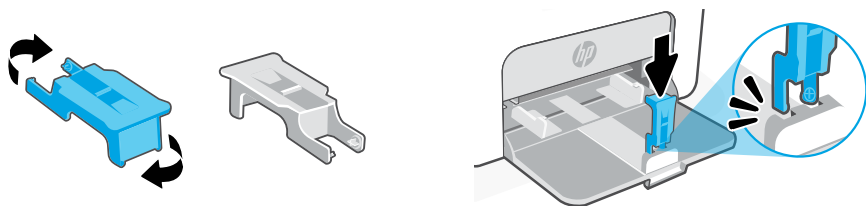

2. 旋转该工具并将其连接到可调节的介质导板上。导板正确安装时会听到咔哒声。

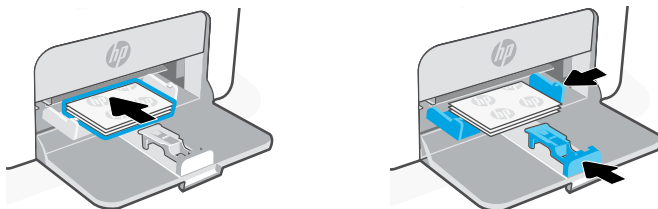

3. 将介质装入纸盒，然后调整导板，使其紧贴介质。



关于软件设置的帮助和提示

如果软件找不到打印机，请检查以下条件以解决该问题。

潜在问题

解决方案

HP 软件找不到打印机

请尝试以下操作：

1. 如果您已经通过 USB 连接线将打印机连接到计算机，请断开连接。
2. 从 Windows 电脑上删除打印机：
搜索并打开**打印机和扫描仪**。
从列表中选择打印机的名称。
依次点击**删除设备**、**是**，然后重新启动计算机。
3. 访问 123.hp.com 重新运行 HP 软件，并按照说明操作。

如果问题仍然存在，请尝试下列步骤：

1. 转至**设备管理器**。在**通用串行总线控制器**下，右键单击“USB 根集线器”，然后选择**更新驱动程序**。
2. 确保计算机操作系统为最新版。如果有可用的更新，请安装最新版本。
如果更新首选项已关闭，请开启计算机更新功能。
旧版本的操作系统可能需要更长的时间来安装驱动程序。
您可能需要在更新后重新启动计算机。
3. 更新後，從 123.hp.com 重新運行 HP 軟件並按照說明進行操作。

与睡眠模式相关的帮助与提示

如果打印机在启动打印时无法从睡眠模式开机，请按照以下步骤解决问题。

潜在问题

打印机无法从睡眠模式恢复

解决方案

1. 按住**电源**按钮，重新启动打印机。
2. 在计算机上找到打印机软件，然后点击 **维护打印机 > 打印机报告** 选项卡。
3. 选中“打印状态报告”部分下的复选框以生成报告。如果报告在“文件名称”下显示“ukernelAres.cpp”，请执行如下操作：
 - 转至 hp.com/support，下载固件更新。
 - 如果固件更新不可用或更新固件后问题仍然存在，请转至步骤 4。
4. 在打印机软件中，转至“节能设置”选项卡，将“睡眠时间间隔”值增加至 1 小时。

如果问题仍然存在，请联系 HP 支持人员。



帮助和支持

如需打印机信息、故障排除方法和视频，请访问打印机支持网站。输入您的型号名称以查找打印机。



 
hp.com/support

本文所含信息如有更改，恕不另行通知。




Printer Setup

1

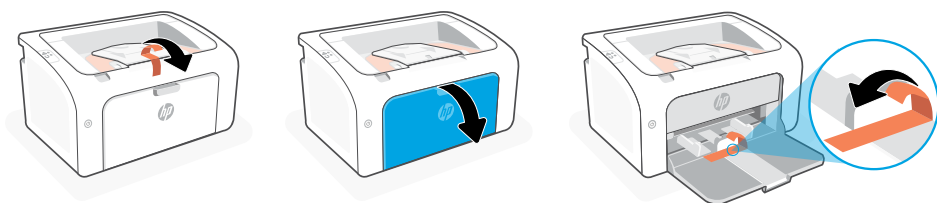

Remove all orange tape from the printer.

 
2

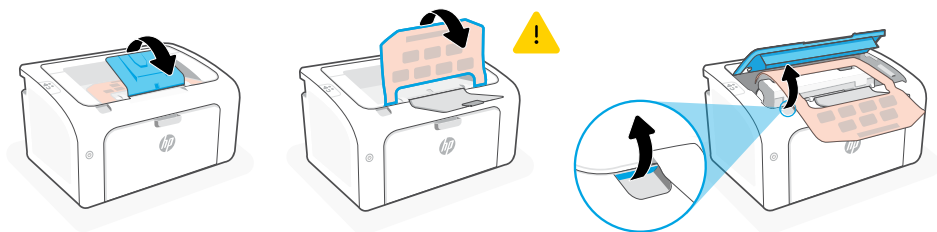

Extend output tray, flip the instruction sheet, and open cartridge access door.

 To avoid tearing the instruction sheet, **do not** pull it from the printer in this step.


3

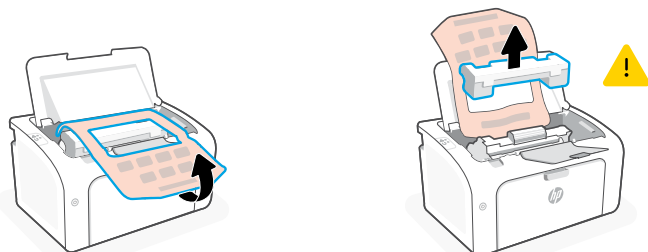

Flip the instruction sheet over the door and remove the foam.


 To avoid tearing the instruction sheet, **do not** pull it from the printer in this step.

4

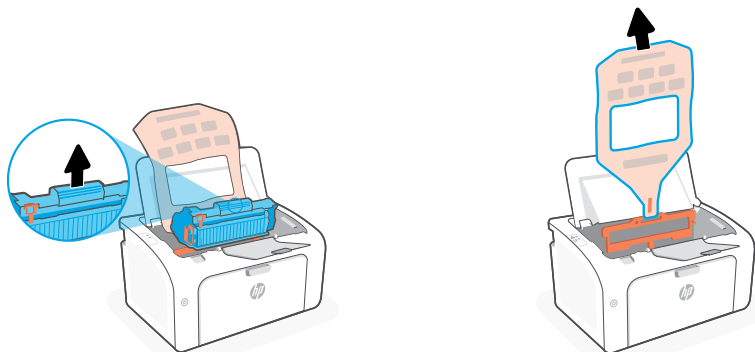

First remove the cartridge from the printer, then remove the instruction sheet.

 
5

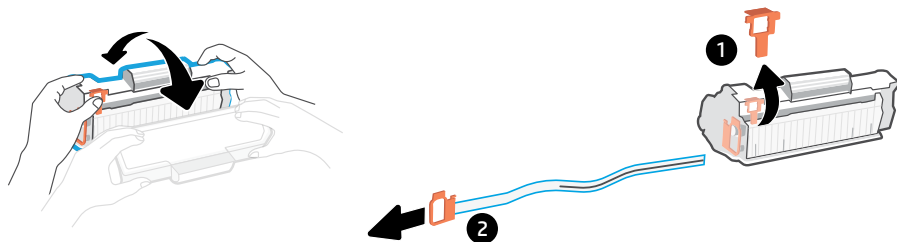

Shake the printer cartridge to distribute the toner evenly.



Remove the orange guide (1) and pull the orange tab (2) to remove the protective film **completely** from the cartridge.

6

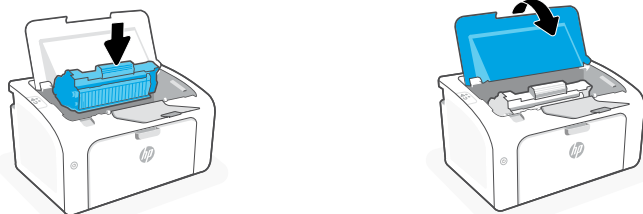

Reinsert the cartridge and close the door.

7

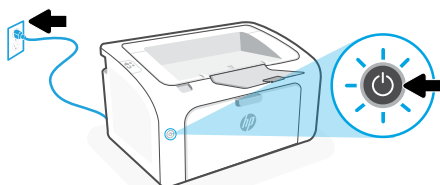
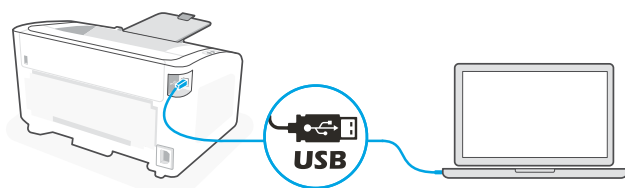


Connect the printer to a computer using a USB cable, then plug in and turn on the printer.



See **Printer Reference** for USB connection and troubleshooting tips.

8

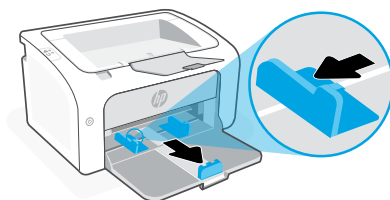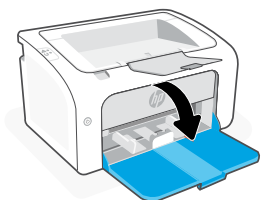


Open the input tray and slide out the guides.

9



Load paper and adjust the guides.

10

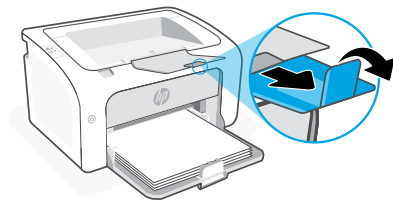

Pull open the tray extender on the output tray.

11



123.hp.com

Go to **123.hp.com** and install HP software to complete setup.



hp.com/support/printer-setup

 


Trouble getting started? Find setup information and videos online.



Printer Reference

Printer features

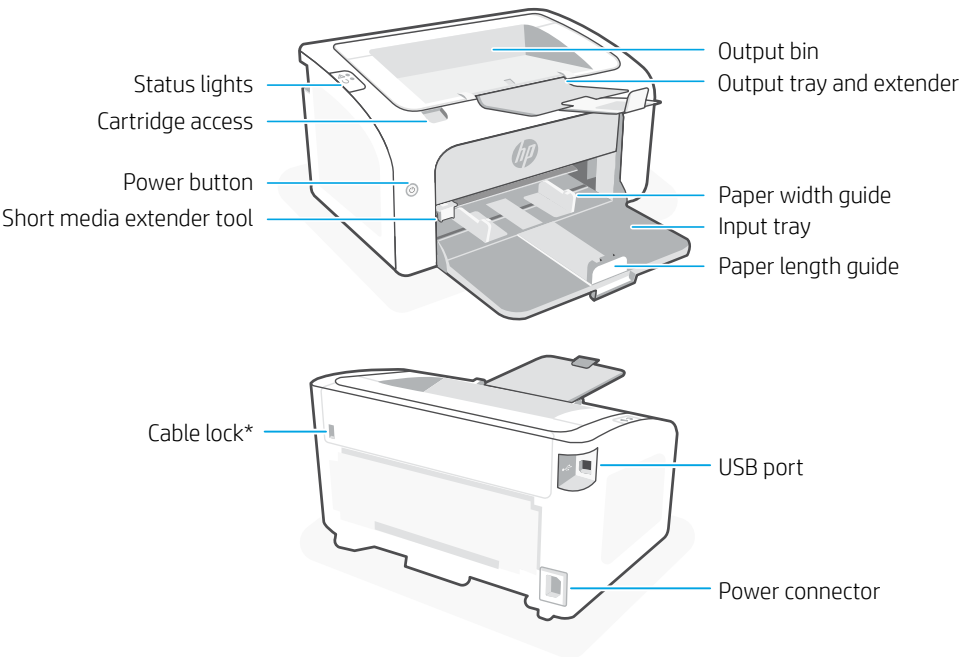

*Attachment point for security cable.

Status lights and behavior



Attention light



Ready light



Ready to print



Processing



Cartridge very low



Requires user attention (toner setup incomplete, manual duplex, out of paper, or other issues).




Initializing, cleaning, or firmware update




For a complete list of light patterns, refer to userguide on: hp.com/support.

Tray adjustment for short media


To print on media shorter than 185 mm (7.28 in), use the short media extender to adjust the input tray.

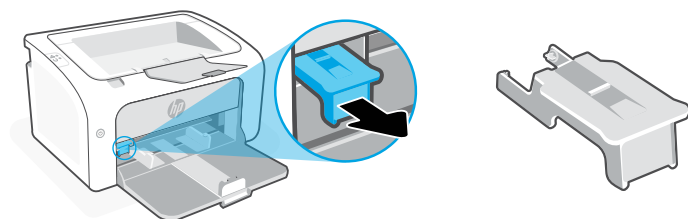

1. Remove the short media extender from the storage slot on the left side of the media input area.

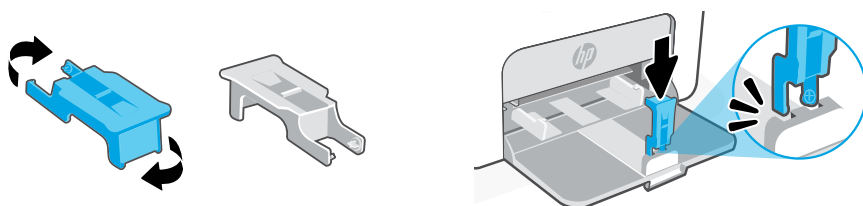

2. Rotate and attach the tool to the adjustable media guide. You will hear a click once the guide is properly installed.

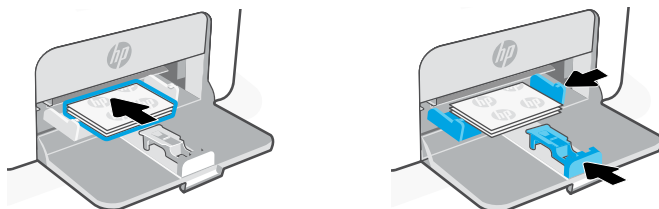

3. Load the media into the tray, then adjust the guides until they are snug against media.



Help and tips for software setup

If the software is unable to find the printer, check the following conditions to resolve the issue.

Potential Issue	Solution
HP software is unable to find the printer	Try the following: 1. If you already connected the printer with USB cable to your computer, disconnect it. 2. Remove the printer from your Windows PC: • Search for and open Printers & scanners. • Select the name of your printer from the list. • Click Remove device, click Yes, and then restart the computer. 3. Rerun HP software from 123.hp.com and follow the instructions. If the problem persists, try these steps next: 1. Go to Device Manager. Under Universal Serial Bus Controllers, right-click USB root hub and select Update driver. 2. Make sure the computer operating system is current. If an update is available, install the latest version. • If your update preference is turned off, turn on computer updates. • An older version of the operating system may take longer to install drivers. • You may need to restart the computer after the update. 3. After the update, rerun the HP software from 123.hp.com and follow the instructions.

Help and tips for sleep mode

If the printer is unable to power on from sleep mode while initiating a print, then follow these steps to resolve the issue.

Potential Issue	Solution
Printer is unable to recover from sleep mode	1. Press and hold the Power button to reboot the printer. 2. On the computer, locate the printer software, click Maintain your Printer > Printer Reports tab. 3. Select the check box under the Print Status Report section to generate the report. If the report shows “ukernelAres.cpp” under the File Name, do the following: • Go to hp.com/support to download a firmware update. • If a firmware update is not available or if the problem persists after the firmware has been updated, go to Step 4. 4. In the printer software, go to the Energy Settings tab and increase the Sleep After value to 1 hour. If the problem still persists, contact HP support.



Help and Support

For printer information, troubleshooting, and videos, visit the printer support website. Enter your model name to find the printer.



hp.com/support

The information contained herein is subject to change without notice.



Microsoft is a registered trademark of Microsoft Corporation in the United States and/or other countries.
All third party trademarks are the property of their respective owners.

Printed in [XXXXX]
Printed in [XXXXX]

ZHCN

EN



© Copyright 2023 HP Development Company, L.P.

53P40-90014