




POLY STUDIO P15

ENGLISH Poly Studio P15 Product Specifications


Power: 12V/3A
Camera resolution: 2160p, 4K UHD
Camera type: Single-lens
Video rate: 30 fps
Speaker: 84 dB SPL @ 1000 Hz @ 1 meter at maximum volume
Frequency response: 50 Hz–14 kHz
Operating temperature: 32 to 104° F
Diagonal field of view (dFoV): 90°

BAHASA INDONESIA Spesifikasi Produk Poly Studio P15

Daya: 12V/3A
Resolusi kamera: 2160p, 4K UHD
Jenis kamera: Lensa-tunggal
Kecepatan video: 30 fps
Speaker (Pengeras Suara): 84 dB SPL @ 1000 Hz @ 1 meter pada volume maksimum
Respon frekuensi: 50 Hz–14 kHz
Suhu pengoperasian: 0 hingga 40°C
Bidang pandang diagonal (dFoV): 90°

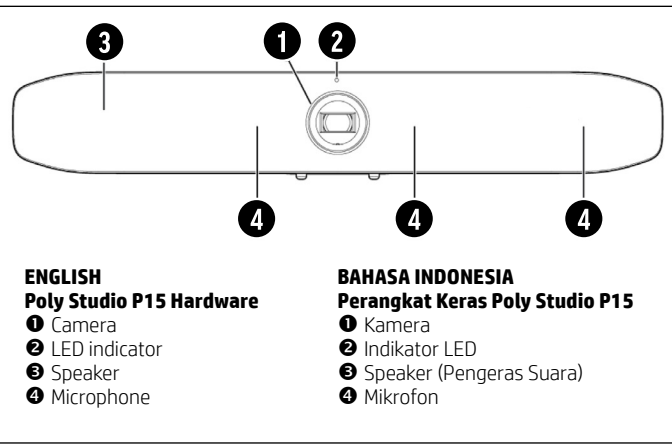

- ENGLISH**
Poly Studio P15 Hardware
1 Camera
2 LED indicator
3 Speaker
4 Microphone
- BAHASA INDONESIA**
Perangkat Keras Poly Studio P15
1 Kamera
2 Indikator LED
3 Speaker (Pengeras Suara)
4 Mikrofon

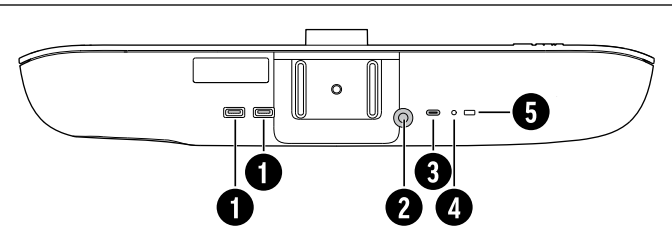

- ENGLISH**
Poly Studio P15 Ports
1 USB-A ports
2 Power cord port
3 USB-C port (for connecting to your computer)
4 Factory restore pinhole
5 Security lock
- BAHASA INDONESIA**
Port Poly Studio P15
1 Port USB-A
2 Port kabel daya
3 Port USB-C (untuk menghubungkan ke komputer Anda)
4 Lubang jarum pemulihan pabrik
5 Security Lock (Kunci Pengaman)

ENGLISH Instructions for Use

Set Device as the Default Audio and Video Device
When you use the Poly Studio P15 personal video bar with a supported application for video calls, you may need to set the device as the default audio and video device of your application.
1. Go to your conferencing application's Settings.
2. Find Audio Device and Video Device.
3. Choose your Poly device as the device for each category.

BAHASA INDONESIA Petunjuk Penggunaan

Tetapkan Perangkat sebagai Perangkat Audio dan Video Default
Saat Anda menggunakan bilah video pribadi Poly Studio P15 dengan aplikasi yang didukung untuk panggilan video, Anda mungkin perlu mengatur perangkat sebagai perangkat audio dan video default aplikasi Anda.
1. Buka Pengaturan aplikasi konferensi.
2. Temukan Perangkat Audio dan Perangkat Video.
3. Pilih perangkat Poly Anda sebagai perangkat untuk setiap kategori.

ENGLISH LED Status Indicators

Solid white - Powered on and ready; out of a call and idle; attached to a system in a call, but the camera and microphone are idle
Pulsing white - Boot initialization in progress
Pulsing amber - Firmware update in progress
Solid green - Microphone in use during a call; camera is active
Green blinking twice - Muted video
Solid dim green - Speaker is outside the range of Acoustic Fence with Beam Shaping
Solid red - Muted microphone
Red blinking two times - Muted audio but speaking voice detected

BAHASA INDONESIA
Indikator Status LED
Putih solid - Dinyalakan dan siaga; keluar dari panggilan dan diam; terpasang ke sistem dalam panggilan, namun kamera dan mikrofon tidak digunakan
Bergetar putih - Inisialisasi booting sedang berlangsung
Bergetar kuning - Pembaruan firmware sedang berlangsung
Hijau solid - Mikrofon digunakan selama panggilan; kamera aktif
Hijau berkedip dua kali - Video dimatikan
Hijau redup solid - Speaker (pengeras suara) berada di luar jangkauan Acoustic Fence dengan Pembentuk Sinar
Merah solid - Mikrofon dimatikan
Merah berkedip dua kali - Audio tidak bersuara tetapi nada suara berbicara terdeteksi

support.hp.com/poly



Nomor Registrasi di
Kementerian Perdagangan: IMKG.205.01.2024
Importir: PT. Hewlett-Packard Indonesia
Alamat: Gedung Perkantoran Prudential Centre,Kota Kasablanka Lantai 9, J.L. Casablanca Kav. 88 Menteng Dalam, Tebet .12870 Jakarta Selatan, Indonesia

© 2024 Poly. All trademarks are the property of their respective owners.



P00117-001A 01.24
RMN/型号/型号: Poly Studio P15

ENGLISH Maintenance Instructions

- Unplug all cables from the device.
- Spray a medicinal isopropyl alcohol and water solution of 70:30 onto a clean, dry, microfiber cloth, making sure to not oversaturate the cloth.
- Gently wipe the fabric and surrounding areas.
- Let the fabric and surrounding areas air-dry completely before reconnecting any cables.

BAHASA INDONESIA Petunjuk Pemeliharaan

- Lepaskan semua kabel dari perangkat.
- Semprotkan larutan obat isopropil alkohol dan air dengan perbandingan 70:30 pada kain mikrofiber yang bersih dan kering, pastikan kain tidak terlalu basah.
- Seka kain dan area sekitarnya dengan lembut.
- Biarkan kain dan area sekitarnya benar-benar kering sebelum menyambungkan kembali semua kabel.