




1



2





3



hp.com/start/dj6100e

4

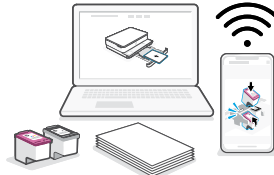


714M1-90007

EN

1. Remove and discard all packaging and tape. Place the printer on a hard, flat surface. Plug in to automatically turn on the printer.
2. On the display, select your language and country or region.
- 3 **Go to the digital setup guide**
Scan the QR code using a mobile device or visit hp.com/start/envy6100e on a computer.
- 4 **Use the digital setup guide to install ink, paper, and HP software**
The HP software will connect the printer to your Wi-Fi network.

ZHTW

1. 取下並丟棄所有包材及膠帶。將印表機放置在堅固平整的平面上。插上電源即會自動開啟印表機。
2. 在顯示器上，選擇您的語言及國家或地區。
- 3 **移至數位設定指南**
使用行動裝置掃描 QR 碼，或是使用電腦造訪 hp.com/start/envy6100e。
- 4 **使用數位設定指南來安裝墨水、紙張，以及 HP 軟體**
HP 軟體會將印表機連接至您的 Wi-Fi 網路。

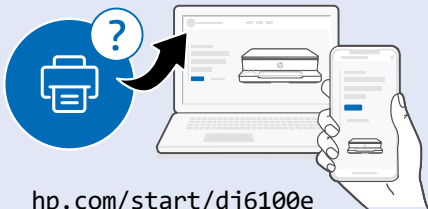

hp.com/start/dj6100e

EN

Go to hp.com/start/dj6100e for more information on setup, printer features, and printer troubleshooting.

ZHTW

請移至 hp.com/start/envy6100e 以取得關於設定、印表機功能，以及印表機疑難排解的更多資訊。



EN

Printer features

- 1 Status center
Touch to display printer status.
- 2 Back, Home, Help buttons
- 3 Scanner
- 4 Cartridge access door
- 5 Power light and Wi-Fi light
- 6 Paper guide
- 7 Letter or A4 paper
- 8 Input tray
- 9 Output tray
- 10 Output tray extender
- 11 Power button
- 12 USB port

Help for Wi-Fi setup

During initial setup, reset setup mode:

If the blue Wi-Fi light is not blinking, the printer might not be in Wi-Fi setup mode. Check the control panel and select "Resume Setup", if prompted.

During printer use, reset Wi-Fi:

1. On the control panel, touch Menu > Settings > Network. Scroll to Restore Network Settings and touch Restore.
2. Wait for printer to scan for Wi-Fi networks. Choose your network, enter the password, and connect.
3. If applicable, open HP software and add the printer again.

ZHTW

印表機功能

- 1 狀態中心
輕觸以顯示印表機狀態。
- 2 「返回」、「首頁」、「說明」按鈕
- 3 掃描器
- 4 墨水匣存取擋門
- 5 電源指示燈和 Wi-Fi 指示燈
- 6 紙張導板
- 7 Letter 或 A4 紙張
- 8 進紙匣
- 9 出紙匣
- 10 出紙匣延伸架
- 11 電源按鈕
- 12 USB 連接埠

Wi-Fi 設定說明

在初始設定期間，重設設定模式：

如果藍色 Wi-Fi 指示燈並未閃爍，則印表機可能並未處於 Wi-Fi 設定模式。檢查控制台，並在出現提示時選擇「繼續設定」。

在使用印表機期間，重設 Wi-Fi：

1. 在控制台中，輕觸「功能表」>「設定」>「網路」。捲動至「還原網路設定」，然後輕觸「還原」。
2. 等待印表機掃描 Wi-Fi 網路。選擇您的網路並輸入密碼，然後連接。
3. 如果適用，請開啟 HP 軟體並重新新增印表機。

Ink Information

Firmly push to insert the cartridges. You will hear a snap and feel the cartridge lock into place. Use the cartridges included with this printer for initial setup.

墨水資訊

牢固地插入墨水匣。您會聽到墨水匣卡入的聲響，且感覺到其已鎖定到位。使用本印表機隨附的墨水匣進行初始設定。