Maintenance and Service Guide

HyperX OMEN 16 inch Gaming Laptop PC

Model number: 16-am2xxx

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2026 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. ChromeOS is a trademark of Google LLC. Intel, Core, and vPro are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVIDIA, GeForce RTX, and Optimus are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. USB Type-C, USB-C, and the USB 5 Gbps, and USB 10 Gbps port logos are trademarks or registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2026

Document Part Number: Q15102-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See http://www.microsoft.com. **If your product ships with Windows in S Mode:** Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to http://www.hp.com/support, and follow the instructions to find your product. Then select **Setup & User Guides**.

To help us improve this document, please send any suggestions, comments, or errors to mailto:hp.doc.feedback@hp.com. Include the document part number when submitting your feedback.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the mobile computer, do not place the mobile computer directly on your lap or obstruct the computer air vents. Use the mobile computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer; or a soft surface, such as pillows, rugs, or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows, rugs or clothing, during operation. The computer and AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed only by an authorized service provider.

IMPORTANT: See Removal and replacement procedures for Customer Self-Repair parts on page 36 for details.

Accessing parts described in Removal and replacement procedures for authorized service provider parts on page 49 can damage the computer or void your warranty.

Table of contents

1 Product description 1

2 Components 5

Locating hardware 5

Locating software 5

Right side 5

Left side 6

Rear 7

Display 8

Low blue light mode (select products only) 8

IMAX Enhanced Mode (select products only) 8

Wake-on-voice (select products only) 8

Keyboard area 10

Touchpad settings and components 10

Touchpad settings 10

Adjusting touchpad settings 10

Turning on the touchpad 10

Touchpad components 10

Lights 11

Special keys 12

Action keys 14

HP OMEN Gaming Hub 16

OMEN Gaming Hub graphics mode (select products only) 17

Bottom 17

Labels 18

3 Illustrated parts catalog 19

Computer major components 19

Display assembly subcomponents 24

Cables 26

Miscellaneous parts 26

4 Removal and replacement procedures preliminary requirements 28

Tools required 28

Service considerations 28

Plastic parts 28

Cables and connectors 28

Drive handling 28

Electrostatic discharge information 29

Generating static electricity 29

Preventing electrostatic damage to equipment 30
Personal grounding methods and equipment 30
Grounding the work area 31
Recommended materials and equipment 31
Cleaning your computer 32
Enabling HP Easy Clean (select products only) 32
Removing dirt and debris from your computer 32
Cleaning your computer with a disinfectant 33
Caring for wood veneer (select products only) 34
Packaging and transporting guidelines 34
Accessing support information 34
5 Removal and replacement procedures for Customer Self-Repair parts 36
Component replacement procedures 36
Preparation for disassembly 36
Bottom cover 36
Battery 39
Removing and reinstalling the same battery 39
Installing a new battery 40
Memory modules 46
Solid-state drive 47
6 Removal and replacement procedures for authorized service provider parts 49
Component replacement procedures 49
Speakers 49
Audio board 50
Touchpad 51
Heat sink 53
Fan 56
WLAN module 57
USB board (left) 59
USB board (right) 60
System board 61
Infrared board 67
Display assembly 68
Keyboard with top cover 74
7 Using Setup Utility (BIOS) 76
Starting Setup Utility (BIOS) 76
Updating Setup Utility (BIOS) 76
Determining the BIOS version 76
Preparing for a BIOS update 77
Downloading a BIOS update 77
Installing a BIOS update 78
8 Backing up, restoring, and recovering 79
Backing up information and creating recovery media 79
Using Windows tools for backing up 79

Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only) 79
Restoring and recovering your system 79
Creating a system restore 80
Restoring and recovery methods 80
Recovering using the HP Recovery USB flash drive 80
Changing the computer boot order 81
Using HP Sure Recover (select products only) 81
9 Using HP PC Hardware Diagnostics 82
Using HP PC Hardware Diagnostics Windows (select products only) 82
Using an HP PC Hardware Diagnostics Windows hardware failure ID code 82
Accessing HP PC Hardware Diagnostics Windows 82
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only) 82
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only) 83
Downloading HP PC Hardware Diagnostics Windows 83
Downloading the latest HP PC Hardware Diagnostics Windows version from HP 83
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store 83
Downloading HP Hardware Diagnostics Windows by product name or number (select products only) 84
Installing HP PC Hardware Diagnostics Windows 84
Using HP PC Hardware Diagnostics UEFI 84
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code 84
Starting HP PC Hardware Diagnostics UEFI 84
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only) 85
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive 85
Downloading the latest HP PC Hardware Diagnostics UEFI version 86
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only) 86
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only) 86
Downloading Remote HP PC Hardware Diagnostics UEFI 86
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version 86
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number 87
Customizing Remote HP PC Hardware Diagnostics UEFI settings 87
10 Specifications 88
Computer specifications 88
Display specifications 89
Solid-state drive specifications 89
11 Power cord set requirements 91
Requirements for all countries 91
Requirements for specific countries and regions 91
12 Swelling or deformation of notebook battery 94
Swollen notebook batteries 94

Swollen battery is not a safety issue 94
Discontinue using a swollen battery 94
Replace a swollen battery 94
Minimize battery swelling 94
Adaptive Battery Optimizer (consumer notebooks) 95
HP Battery Health Manager (commercial notebooks) 95
13 Recycling 96
Index 97

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HyperX OMEN 16 inch Gaming Laptop PC
	Model number: 16-am2xxx
Processors	**13th and 14th Generation Intel® Core™ processors**
	Intel Core i9-14900HX (5.80 GHz), 36 MB, 24 core, 55 W
	Intel Core Ultra9 386H (vPro) Enterprise (4.90 Ghz), 18 MB 16 core, 65 W
	Intel Core Ultra9 290HX PLUS (5.50 Ghz), 36 MB 24 core, 55 W
	Intel Core Ultra9 275HX (5.4 Ghz), 36 MB, 24 core, 55 W
	Intel Core i7-14650HX (5.20 GHz), 30 MB, 16 core, 55 W
	Intel Core 7 356H (4.70 Ghz), 18 MB, 16 core, 65 W
	Intel Core 7 270HX PLUS, 5.30 Ghz, 30 MB, 20 core, 55 W
	Intel Core 7 255HX (5.20 Ghz), 30 MB, 20 core, 55 W
Graphics	**Internal graphics**
	NVIDIA® GeForce RTX® 5070, 8 GB
	NVIDIA GeForce RTX 5070, 12 GB
	NVIDIA GeForce RTX 5060, 8 GB
Display	**40.6 cm (16 in), antiglare, narrow bezel, ultrawide viewing angle (UWVA), flat panel, panel self-refresh (PSR)**
	2.5K (2560 × 1600), sRGB 100, low blue light (LBL), eDP 1.4 DDS, 500 nits, 240 Hz
	WQXGA (2560 × 1600) OLED BrightView +LBL, DCI-P3 100%, 500 nits, eDP 1.4+PSR, 165 Hz
	WUXGA (1920 × 1200), sRGB 62.5, eDP 1.4 + PSR2, 400 nits, 165 Hz
Memory	Two customer-accessible and customer-upgradeable memory module slots (small outline dual in-line memory modules (SODIMMs) supporting up to 32 GB of RAM
	DDR5-5600 dual-channel support
	Supports the following configurations:
	• 64 GB (32 × 2)
	• 32 GB (16 × 2)
	• 24 GB (24 × 1, 12 × 2)
	• 16 GB (8 × 2, 16 × 1)
	• 8 GB (8 × 1)
Primary storage	**PCIe, Non-Volatile Memory Express (NVMe), M.2 2280 SSDs**

Table 1-1 Product components and their descriptions (continued)

Category	Description
	• 2 TB
	• 1 TB
	• 2 × 512 GB **NOTE:** Models with RTX 5070 Ti graphics support only one SSD slot.
	• 512 GB
Audio and video	Dual speakers
	HP Audio Boost
	Support for DTS:X Ultra
	Support for HyperX
	Support for XiaoWei
	Camera: FHD fixed HDR, near field of vision (NFOV), integrated camera
	1080p by 30 frames per second
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
	Camera: FHDR fixed infrared (IR) HDR, NFOV, integrated camera
	1080p by 30 frames per second
	Supports Windows Hello
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
RJ-45 (network) jack	Integrated 10/100/1000 NIC
Wireless	**Wireless Local Area Network (WLAN)**
	Intel BE211 Wi-Fi® 7 + Bluetooth® 6 (non-vPro)
	MediaTek MT7925 Wi-Fi 7+Bluetooth 6.0
	Realtek 8852BE-VT Wi-Fi 6 Bluetooth 5.4
	Compatible with Miracast® devices
	Bluetooth audio offload
	Dynamic antenna gain, Bluetooth dynamic antenna gain
	Support for Modern Standby (connected)
	Dynamic Antenna Gain (Wi-Fi)
	Wi-Fi BIOS specific absorption rate (SAR)
	UNII-4 5 GHz channel
Ports	Hot plug/unplug and autodetect for correct output to wide-aspect vs. standard aspect video

Table 1-1 Product components and their descriptions (continued)

Category	Description
	HDMI v2.1 supporting the following modes: • 8K @ 60Hz • 4K @ 60Hz • 8K @ 30Hz
	Audio-out (headphone)/audio-in (microphone) combo jack
	USB 3.2 Gen 2 Type-C® (left side) supporting: • 100 W power delivery • Data transfer • DisplayPort™ 1.4 out up to 5K (60 Hz) • HDMI 2.1 out up to 5K (60 Hz) with HDCP 2.3 • HP Sleep & Charge
	USB 3.2 Gen 1 Type-A (left and right sides)
	USB 3.2 Gen 2 Type-A (rear side)
	RJ-45 (network) jack
	AC Smart Pin adapter plug
Keyboard/pointing devices	**Keyboard, full size, island-style**
	Ceramic white, four-zone RGB lighting
	Ceramic white, white lighting
	Shadow black, four-zone RGB lighting
	Shadow black, white lighting
	Touchpad
	Clickpad with image sensor
	Multitouch gestures enabled
	Precision touchpad support
	Support for Modern Trackpad Gestures
	Taps enabled as default
Power requirements	**Battery**
	6 cell, 83 Whr, polymer, HP Long Life
	4 cell, 70 Whr, polymer, HP Long Life
	HP Fast Charge Technology
	Smart AC adapters (4.5 mm, 3 pin)
	280 W, standard barrel
	230 W, slim barrel, PFC

Table 1-1 Product components and their descriptions (continued)

Category	Description
	230 W, 3 pin, PFC, right angle
	280 W, standard, right angle
	Power cord
	C13, 1.83 m (6 ft)
Security	Supports Trusted Platform Module (TPM) 2.0, firmware based
	Camera privacy cover
Operating system	Windows® 11 Pro 64
	Windows 11 Home 64 Single Language
	Windows 11 Home 64 Advanced
	Windows 11 Home 64 Advanced Single Language
	Windows 11 Home 64 High-end Chinese Market CPPP
	Windows 11 Home 64 Plus
	Windows 11 Home 64 Plus Single Language
	Windows 11 Home 64 Plus Single Language Africa
	Windows 11 Home 64 Plus Single Language APAC
	Windows 11 Home 64 Plus Single Language India
	Windows 11 Home 64 Plus Single Language Africa
	FreeDOS 3.0
Serviceability	**End user replaceable parts**
	AC adapter
	Bottom cover
	Battery
	Memory module
	SSD

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Locating hardware

To find out what hardware is installed on your computer, select the **Search** icon in the taskbar, type `device manager` in the search box, and then select the **Device Manager** app.

For information about system hardware components and the system BIOS version number, press fn+esc (select products only).

Locating software

To find out what software is installed on your computer, right-click the **Start** button, and then select **Installed Apps**.

Right side

Identify the components on the right side of the computer.

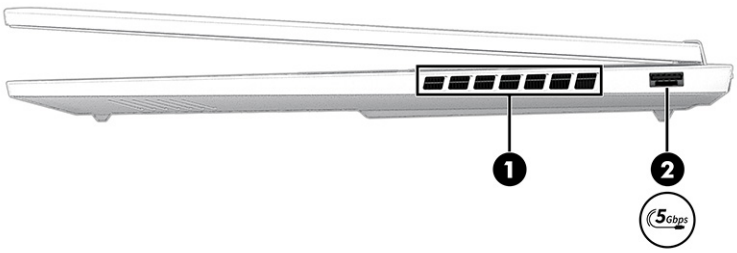


Table 2-1 Right-side components and their descriptions

	Component	Description
(1)	Vent	Enables airflow to cool internal components. **NOTE:** The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	USB 5 Gbps port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. **NOTE:** Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.

Left side

Identify the components on the left side of the computer.

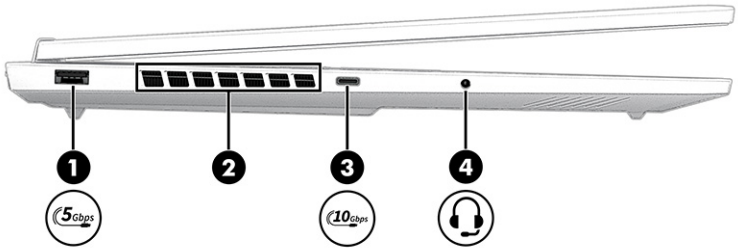


Table 2-2 Left-side components and their descriptions

		Component	Description
(1)		USB 5 Gbps port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. **NOTE:** Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(2)		Vent	Enables airflow to cool internal components. **NOTE:** The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)		USB Type-C® 100 W power connector and 10 Gbps port with HP Sleep and Charge and DisplayPort™ output	Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. – and – Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. **NOTE:** Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. – and – Connects a display device that has a USB Type-C connector, providing DisplayPort output, a DisplayPort connector, or a USB Type-C to DisplayPort adapter. **NOTE:** To ensure that your computer operates at full performance and can charge the battery when using resource-intensive applications, use the AC adapter that ships with your computer. Connect the AC adapter to the power connector on the rear of the computer. You can use an optional 100 W, 20 V USB Type-C adapter or power bank when running light-load tasks. System-off charging is supported only when you use a 20 V USB Type-C adapter or power bank.

Table 2-2 Left-side components and their descriptions (continued)

	Component	Description
(4)	Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. **WARNING!** To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide: ■ Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**. **NOTE:** When a device is connected to the jack, the computer speakers are disabled.

Rear

Identify the rear components.

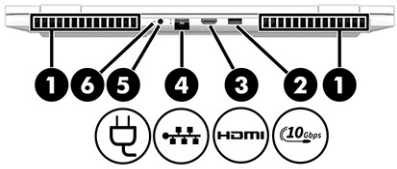


Table 2-3 Rear components and their descriptions

	Component	Description
(1)	Vents (2)	Enable airflow to cool internal components. **NOTE:** The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	USB 10 Gbps port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. **NOTE:** Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3)	HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.

Table 2-3 Rear components and their descriptions (continued)

		Component	Description
(4)		RJ-45 (network) jack/status lights	Connects a network cable. • White: The network is connected. • Amber: Activity is occurring on the network.
(5)		Power connector	Connects an AC adapter.
(6)		AC adapter and battery light	• White: The AC adapter is connected and the battery is fully charged. • Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level. • Amber: The AC adapter is connected and the battery is charging. • Off: The battery is not charging.

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ **WARNING!** To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at http://www.hp.com/ergo.

IMAX Enhanced Mode (select products only)

Select computer models are configured with IMAX Enhanced Mode, a solution built into the hardware and software to enhance the IMAX audio and video experience.

To access the latest setup documentation, go to http://www.hp.com/support, type `IMAX` in the **Search our knowledge library** search box, and then select **HP Consumer Notebook PCs - Enabling the IMAX features**.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type `XiaoWei` in the search box, and then select **XiaoWei**.

2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.

3. Follow the on-screen instructions.

NOTE: Allow the XiaoWei app to continue running on the computer.

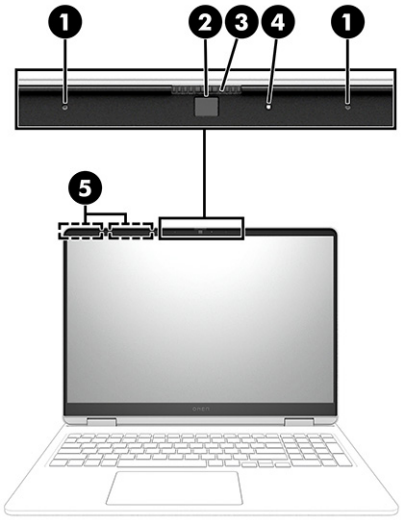


Table 2-4 Display components and their descriptions

	Component	Description
(1)	Internal microphones (2)	Record sound.
(2)	Camera(s)	Allow you to video chat, record video, and record still images. To use your camera, see *Using the camera*. Some cameras also allow a facial recognition logon to Windows®, instead of a password logon. For more information, see *Using Windows Hello (select products only)*. **NOTE:** Camera functions vary depending on the camera hardware and software installed on your product. **NOTE:** Depending on your model, your computer might have one or two cameras.
(3)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens. **NOTE:** If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.
(4)	Camera lights	On: One or more cameras are in use.
(5)	WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.

NOTE: The keyboard area, including the function keys and (select products only) power key, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press enter.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press enter.
2. Using an external mouse, click the **touchpad** button.

   If you are not using an external mouse, press the Tab key repeatedly until the pointer rests on the **touchpad** button. Then press the spacebar to select the button.

Touchpad components

Identify the touchpad components.

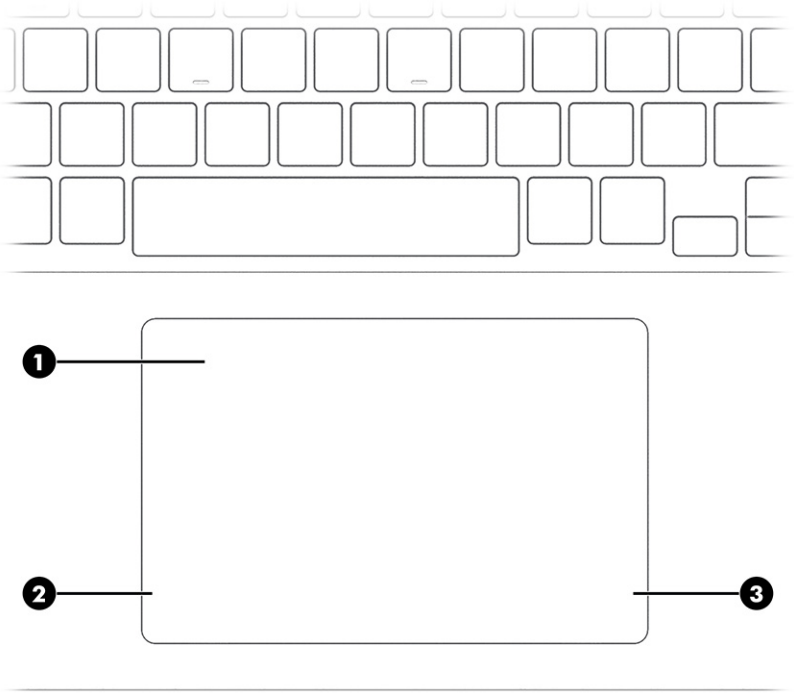


Table 2-5 Touchpad components and their descriptions

	Component	Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen. **NOTE:** For more information, see *Using touchpad and touch screen gestures*.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.

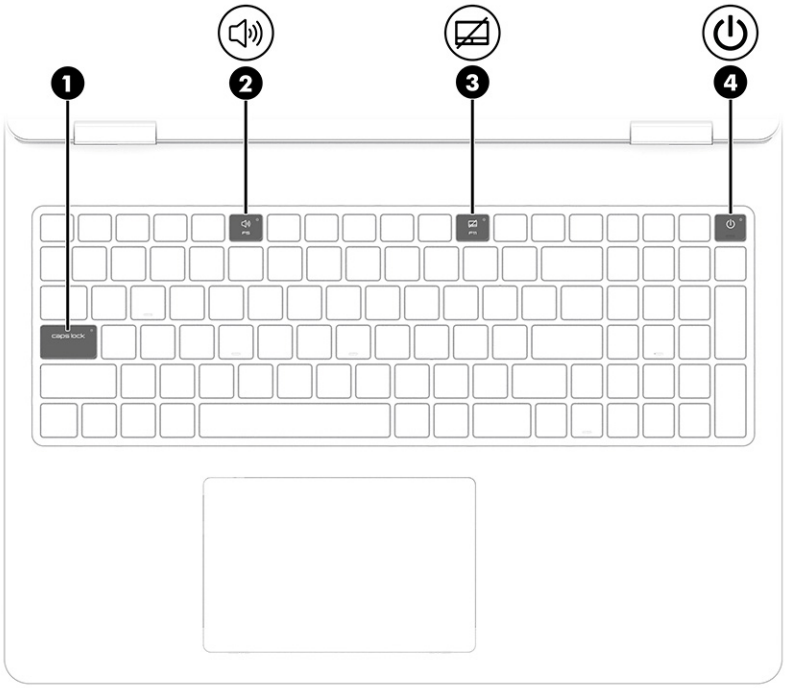


Table 2-6 Lights and their descriptions

		Component	Description
(1)		Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)		Speaker light	• On: Computer sound is off. • Off: Computer sound is on.
(3)		Touchpad light	• On: The touchpad is off. • Off: The touchpad is on.
(4)		Power light	• On: The computer is on. • Blinking (select products only): The computer is in the sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. • Off: Depending on your computer model, the computer is off, in hibernation, or in sleep. Hibernation is the power-saving state that uses the least amount of power.

Special keys

Identify the special keys.

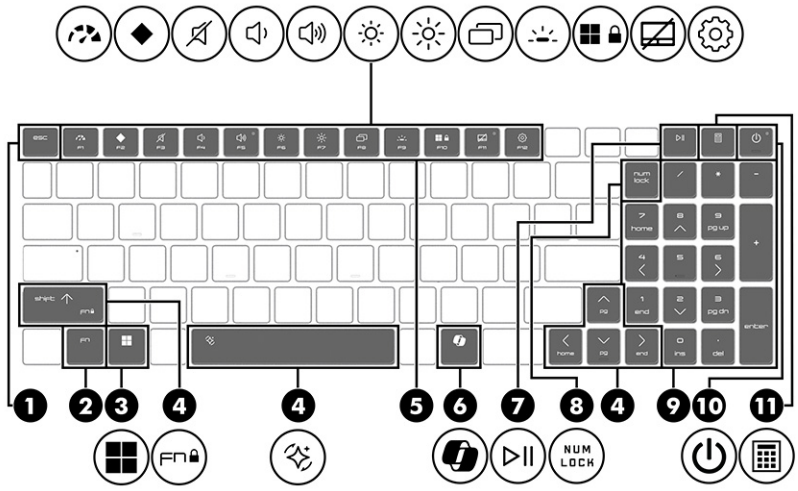


Table 2-7 Special keys and their descriptions

		Component	Description
(1)		esc key	Displays system information when pressed in combination with the fn key.
(2)		fn key	Executes specific functions when pressed in combination with another key.
(3)		Windows key	Opens the Start menu. **NOTE:** Pressing the Windows key again will close the Start menu.
(4)		Dual action keys	• Main function: Displayed in a larger font size on the key. • Secondary function: Displayed in the corner of the key in a smaller font size. Activate the secondary function by pressing the fn key at the same time. **NOTE:** FN Lock status only affects the behavior of the f1 through f12 function keys. See Action keys on page 14.
(5)		Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys. See Action keys on page 14.
(6)		Windows Copilot key	Opens Windows Copilot (select products only). **NOTE:** Copilot in Windows requires Windows 11. Some features require a neural processing unit. The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. Where the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See http://aka.ms/WindowsAIFeatures.
(7)		Play key	Starts or pauses audio and video playback.
(8)		num lock key	Alternates between the navigational and numeric functions on the integrated numeric keypad.

Table 2-7 Special keys and their descriptions (continued)

	Component	Description
(9)	Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When num lock is pressed, the keypad can be used like an external numeric keypad. **NOTE:** If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.
(10) 	Power button	• When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate sleep. • When the computer is in the sleep state, press the button briefly to exit sleep (select products only). • When the computer is in hibernation, press the button briefly to exit hibernation. **IMPORTANT:** Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer. To learn more about your power and sleep settings: ■ Right-click the **Power** icon  , and then select **Power and sleep settings**.
(11) 	Calculator key	Opens the calculator.

Action keys

Action keys execute frequently used system functions as defined by the icon symbols on f1 through f12. The action keys vary by computer.

If you do not see one of these icons on your keyboard, your computer does not include the feature associated with the icon.

■ To use an action key, press the fn key in combination with the action key.

NOTE: To lock the fn key, press the fn + shift keys to enable the fn lock feature.

Table 2-8 Action keys and their descriptions

Icon	Description
	Adjusts your computer's performance settings to prioritize gaming.

Table 2-8 Action keys and their descriptions (continued)

Icon	Description
	Switches the screen image between display devices connected to the system. For example, if a monitor is connected to the computer, repeatedly pressing this key alternates the screen image from the computer display to the monitor display to a simultaneous display on both the computer and the monitor.
	Opens the OMEN Gaming Hub software. See HP OMEN Gaming Hub on page 16 for more information.
	Decreases the screen brightness while you hold down the key.
	Increases the screen brightness while you hold down the key.
	Turns the keyboard backlight off or on and selects the duration when on. On select products, you can adjust the brightness of the keyboard backlight. Press the key repeatedly to adjust the brightness from high (when you first start up the computer), to low, to off. With the keyboard backlight on, press and hold the key to adjust the duration from 30 seconds to 3 minutes to always. A message that shows the current duration appears on the screen. After you adjust the keyboard backlight setting, the backlight reverts to that setting each time you turn on the computer. The keyboard backlight turns off after the selected duration of inactivity. To turn the keyboard backlight back on, press any key or tap the touchpad (select products only). To conserve battery power, turn off this feature.
	Mutes or restores speaker sound.
	Decreases speaker volume incrementally while you hold down the key.
	Increases speaker volume incrementally while you hold down the key.
	Plays the previous track of an audio CD or the previous section of a DVD or a Blu-ray Disc (BD).
	Starts, pauses, or resumes playback of an audio CD, a DVD, or a BD.
	Plays the next track of an audio CD or the next section of a DVD or a BD.

Table 2-8 Action keys and their descriptions (continued)

Icon	Description
	Turns the touchpad on or off.
	Turns the Windows key off and on.
	Opens the Windows settings menu.
fn + p	Switches between the different Power Modes supported by OMEN Gaming Hub's Performance Control feature.

HP OMEN Gaming Hub

HP OMEN Gaming Hub allows you to customize your computer for your specific gaming needs.

To open HP OMEN Gaming Hub, complete one of these tasks:

- Select the **Start** button, select **All apps**, select **OMEN Gaming Hub**, and then follow the on-screen instructions.
- Press the **OMEN** key  .

The HP OMEN Gaming Hub dashboard provides a central location to access and configure the following features:

NOTE: Some features are available on select products only.

- **Cam & Voice Enhancer**: Improve your streaming quality with AI-powered video and audio effects and enhancements (NVIDIA® RTX™ GPUs only).
- **System Vitals**: Monitor the computer status and performance.
- **Light Studio**: Coordinate your color scheme and easily sync your lighting effects across your OMEN devices.
- **Lighting**: Customize the keyboard lighting.
- **Network Booster**: View and adjust network priorities and settings.
- **Performance Control**: Adjust the thermal temperature and power levels of your computer to improve performance.
- **Gaming Device Lighting and Macros**: Configure the lighting and macro keys when an external supported gaming device is connected (select products only).
- **My Games**: Locate and launch games from your library.
- **Graphics Switcher**: Use graphics mode to switch between hybrid and discrete graphics.
- **Gallery**: View and change your OMEN wallpaper backgrounds.
- **Optimizer**: Boost your game and clean up the clutter on your computer to optimize performance.

- **Key Assignments**: Customize your keyboard by reassigning keys, creating macros and assigning various shortcuts to keys.
- **Help & Resources**: Access support information and various video guides for your device as well as OMEN Gaming Hub.

NOTE: To minimize the dashboard, select the arrow button **<** at the top of the dashboard.

OMEN Gaming Hub graphics mode (select products only)

You can use graphics mode in the OMEN Gaming Hub to switch between hybrid or discrete graphics.

- Hybrid—Use for both integrated and discrete graphics, depending on the app.
- Discrete—Use for gaming, media creation, and graphics-intensive tasks (select products only).
- Integrated graphics only—Use for maximum battery life to turn off discrete GPU and turn on integrated GPU.
- Advanced Optimus™—Open NVIDIA® Advanced Optimus™ to configure GPU mode automatically (select products only).

Bottom

Identify the bottom components.

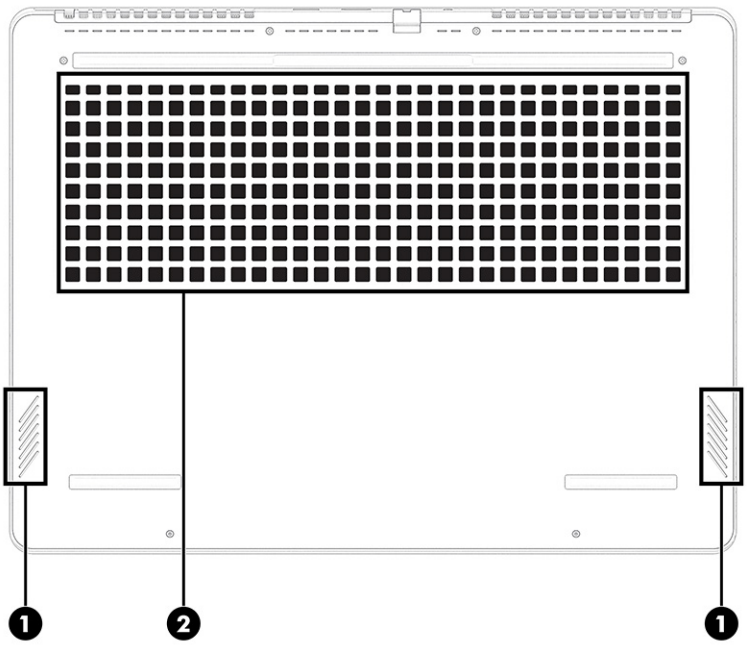


Table 2-9 Bottom components and their descriptions

	Component	Description
(1)	Speakers (2)	Produce sound.

Table 2-9 Bottom components and their descriptions (continued)

	Component	Description
(2)	Vent	Enables airflow to cool internal components. **NOTE:** The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.

IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

  Your service label will resemble the following example:



Table 2-10 Service label components

	Component
(1)	Serial number
(2)	Product ID
(3)	HP product name and model number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

Use this illustration and table to identify the computer major components.

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to https://partsurfer.hp.com, select your country or region, and then follow the on-screen instructions.

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

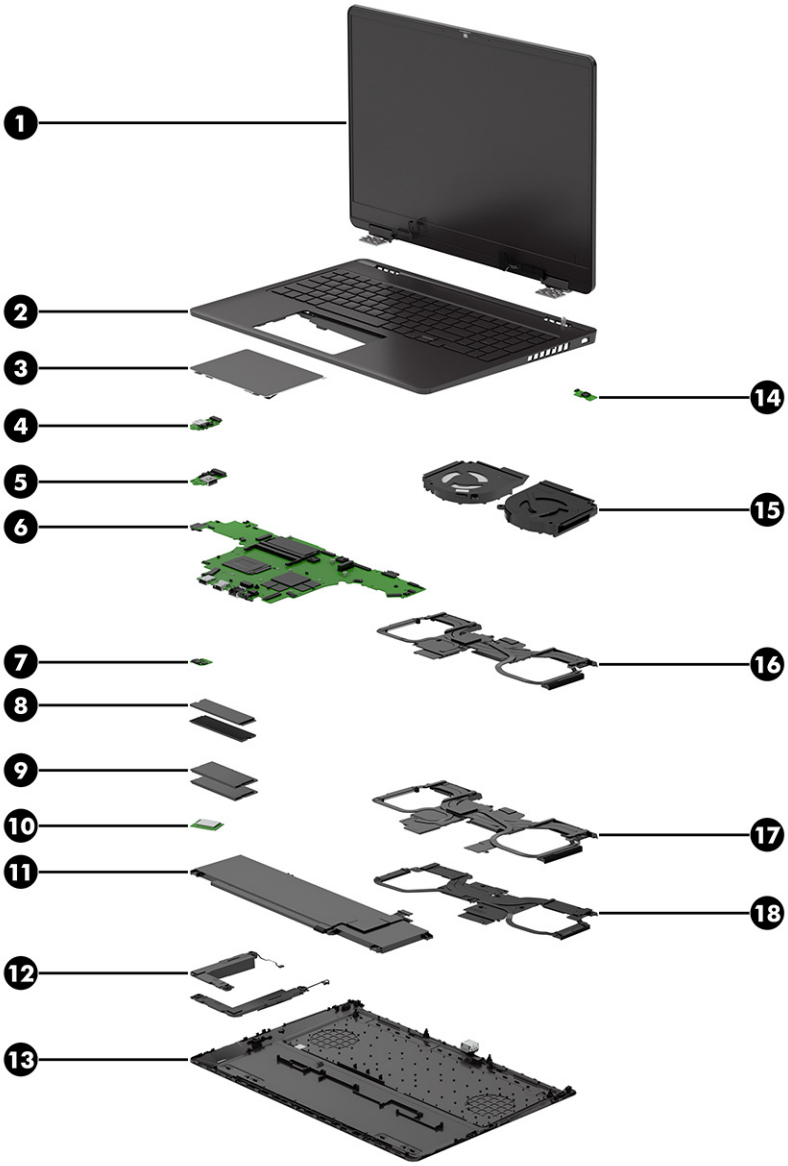


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	**Display assembly** **NOTE:** Display spare parts are available as subcomponents, not as whole units. Display subcomponent spare parts are available. For spare part information, see Display assembly subcomponents on page 24.	not available as a spare part
(2)	**Top cover/keyboard** **NOTE:** For a detailed list of country codes, see Keyboard with top cover on page 74.	
	Ceramic white, 4-zone RGB backlight	Q01903-xxx
	Ceramic white, backlight	Q01904-xxx
	Shadow black, 4-zone RGB backlight	Q01905-xxx

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Shadow black, backlight	Q01906-xxx
(3)	**Touchpad**	
	Ceramic white	P23092-001
	Shadow black	P23093-001
(4)	**USB board** (left)	
	Models with RTX 5000 series graphics	P50565-001
(5)	**USB board** (right)	
	Models with RTX 5000 series graphics	P50564-001
	OLED, with cable	Q01902-001
(6)	**System board** (includes integrated processor) **NOTE:** All system board spare part kits include replacement thermal material.	
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync)	Q08679-601
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics	Q08671-601
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync) (People's Republic of China)	Q08693-xx1
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics (PRC)	Q08685-xx1
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics	Q01831-601
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync)	Q01861-601
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics (PRC)	Q01871-601
	Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync) (PRC)	Q01879-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics	Q08670-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync)	Q08678-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics (PRC)	Q08684-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync) (PRC)	Q08692-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics	Q01830-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync)	Q01860-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics (PRC)	Q01870-601
	Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync) (PRC)	Q01878-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01827-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01843-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01847-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01855-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01857-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01865-601

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01877-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q08673-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08675-601
	Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08677-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08681-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08683-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08687-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08689-601
	Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08691-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08695-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08697-601
	Intel Core Ultra7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01842-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01826-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01846-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01854-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01864-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01856-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01876-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08672-601
	Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08676-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08674-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08686-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08694-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08696-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08688-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08680-601
	Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08690-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08682-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB	Q01833-601
	Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB	Q01835-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01839-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01841-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01845-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01849-601

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01851-601
	Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01853-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01869-601
	Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01873-601
	Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01875-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01832-601
	Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB	Q01834-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01838-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01840-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01844-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01848-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01850-601
	Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 12 GB (G-Sync) (PRC)	Q01852-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01868-601
	Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01872-601
	Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01874-601
(7)	**Audio board** (includes audio cable)	
	Models with RTX 5000 series graphics	P50566-001
(8)	**SSD** (PCIe-4 × 4, NVMe)	
	2 TB	P07215-001
	1 TB	N77394-001
	512 GB	N77392-001
(9)	**Memory modules** (DDR5-5600)	
	32 GB	N77400-001
	24 GB	P55196-001
	16 GB	N77398-001
	8 GB	N77399-001
(10)	**WLAN module**	
	Intel BE211 Wi-Fi® 7 + Bluetooth® 6 (non-vPro)	P36621-005
	MediaTek MT7925 Wi-Fi 7+Bluetooth 6.0	N64647-005
	Realtek 8852BE-VT Wi-Fi 6 Bluetooth 5.4	P06350-005
(11)	**Battery**	
	6 cell, 83 Whr	P23104-001
	4 cell, 70 Whr	P23103-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(12)	**Speakers**	P23101-001
(13)	**Bottom cover**	
	Ceramic white	Q01891-001
	Shadow black	Q01892-001
(14)	**Infrared board** (includes cable)	Q01884-001
(15)	**Fan**	Q01890-001
	Heat sink (includes replacement thermal material)	
(16)	For use in models with RTX 5000 series graphics and Intel Core HX series processors	Q01886-001
(17)	For use in models with RTX 5000 series graphics and Intel Core Ultra series 2 processors	Q01887-001
(18)	For use in models with RTX 5000 series graphics and Intel Core Ultra series 3 processors	Q01888-001

Display assembly subcomponents

Use this illustration and table to identify the display assembly subcomponents.

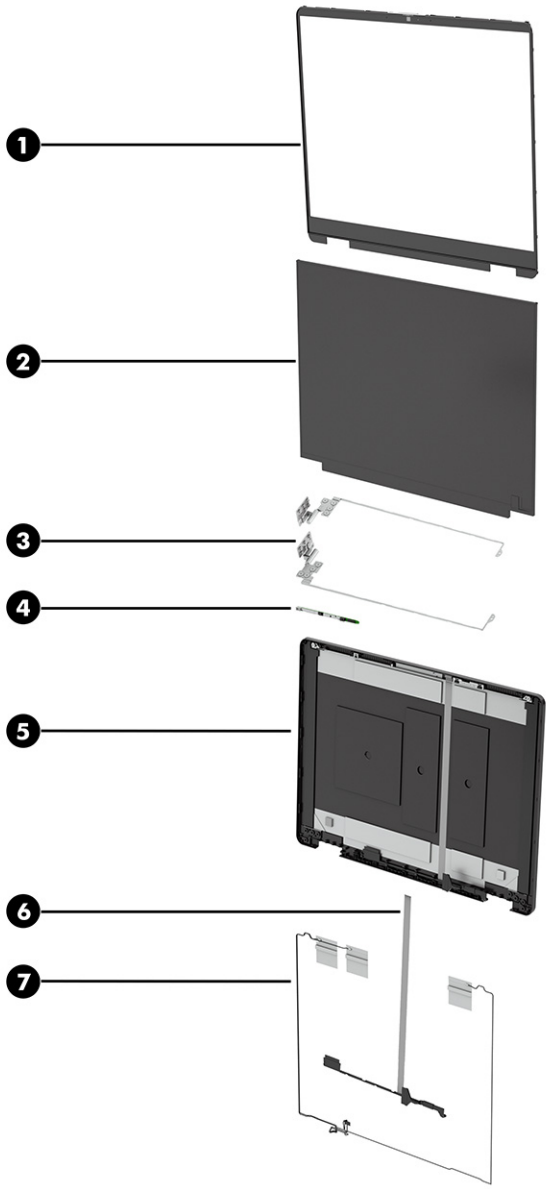


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	**Display bezel**	
	Ceramic white	Q01893-001
	Ceramic white, infrared	Q01894-001
	Shadow black (plastic)	Q01895-001
	Shadow black, infrared (plastic)	Q01896-001
	Shadow black (metal)	Q01897-001
	Shadow black, infrared (metal)	Q01898-001
(2)	**Display panel**	

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
	2.5 K, 2560 × 1600, antiglare, low blue light (LBL), UWVA, 500 nits, 240 Hz	Q01881-001
	OLED+LBL, UWVA, 500 nits, 165 Hz	Q01882-001
	LED UWVA, 400 nits, 165 Hz	Q01880-001
(3)	**Hinges and side brackets** (includes left and right display hinges)	P23119-001
	Hinge caps are available as a set as spare part numbers P23120-001 (ceramic white) and P23121-001 (shadow black).	
(4)	**Camera module** (includes camera cable and rubber shock absorber)	
	Webcam	Q02188-001
	Infrared webcam	Q02189-001
(5)	**Back cover** (with WLAN antenna)	
	Ceramic white, 2.6T	Q01943-001
	Shadow black, 2.6T	Q01944-001
	Shadow black, OLED	Q01945-001
	Ceramic white, 3.0T (plastic)	Q02253-001
	Shadow black, 2.6T (plastic)	Q02254-001
	Shadow black, 3.0T (plastic)	Q02255-001
(6)	**Cable and antenna kit**	Q01889-001
(7)	**Display panel and camera cable kit**	Q01899-001
	Panel bracket (not illustrated)	Q02187-001
	Hinges (not illustrated)	
	Hinge, shadow black (left/right)	P23121-001
	Hinge, ceramic white (left/right)	P23120-001
	Hinge, shadow black (left/right), metal	Q01901-001

Cables

Use this table to identify the cables.

Table 3-3 Cable descriptions and part numbers

Component	Spare part number
Display panel and camera cable kit	Q01899-001
Cable and antenna kit	Q01889-001

Miscellaneous parts

Use this table to identify the miscellaneous parts.

Table 3-4 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapters (Smart, PFC, slim)	
280 W	M95376-001
280 W, right angle	P55562-001
230 W	N22367-001
230 W, right angle	P55558-001
Screw Kit and Miscellaneous	Q01883-001
RJ-45 door (shadow black)	Q01885-001
Battery frame	P23102-001
Power cords (C13, 1.83 m [6.0 ft])	
Australia	M82822-001
Denmark	M82829-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	M82827-001
Greece	M82830-001
India	M82824-001
Israel	M82830-001
Italy	M82831-001
Japan	M82825-001
North America	M82821-001
The PRC	M82823-001
South Africa	M82832-001
Switzerland	M82833-001
Taiwan	M82826-001
United Kingdom	M82834-001
Power cord (C13, 1.83 m [6 ft])	P10529-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures.

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

NOTE: As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.

IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.

IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
- Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
- Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
- Avoid dropping drives from any height onto any surface.
- After removing a hard drive or an optical drive, place it in a static-proof bag.
- Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
- Avoid exposing a drive to temperature extremes or liquids.
- If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
- Before touching an electronic component, discharge static electricity by using the guidelines described in Personal grounding methods and equipment on page 30.
- Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
- If you remove a component, place it in an electrostatic-safe container.

Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	55% relative humidity	40% relative humidity	10% relative humidity
Walking across carpet	7500 V	15,000 V	35,000 V
Walking across vinyl floor	3000 V	5000 V	12,000 V
Motions of bench worker	400 V	800 V	6000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2000 V
Removing DIPs from vinyl tray	2000 V	4000 V	11,500 V
Removing DIPs from polystyrene foam	3500 V	5000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5000 V	11,000 V	21,000 V

NOTE: Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.

NOTE: As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of 1 MΩ ±10% resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of 1 MΩ ±10% resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Method	Voltage
Antistatic plastic	1500
Carbon-loaded plastic	7500
Metalized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of 1 MΩ ±10% resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing 1 MΩ ±10% resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
   - Select the **Start** menu, and then select **HP Easy Clean**.
   - Select the **HP Easy Clean** icon in the taskbar.
   - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see Removing dirt and debris from your computer on page 32 for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See Cleaning your computer with a disinfectant on page 33 for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see Caring for wood veneer (select products only) on page 34.

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

> ⚠ **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

> **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.

6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.

7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See Cleaning your computer with a disinfectant on page 33 for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in Removing dirt and debris from your computer on page 32, Caring for wood veneer (select products only) on page 34, or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.

2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See Removing dirt and debris from your computer on page 32 for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See Cleaning your computer with a disinfectant on page 33 for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

Use this information to find the HP support that you need.

Table 4-3 Support information locations

Service consideration	Path to access information
Records of reported failure incidents stored on the computer	**Windows:** Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log: 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. **NOTE:** If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility. 3. Press f10 to enter the BIOS setup. 4. Complete one of these tasks: • (On commercial products) Under the **Main** tab, select **BIOS event log**, and then select **View BIOS Event Log**. • (On consumer products) Under the **Main** tab, select **System Log**. Post-operating system failures are logged in the Event Viewer. 1. Turn on the computer and allow the operating system to open. 2. Select the search icon in the taskbar. 3. Type `Event Viewer`, and then press enter. 4. Select the log from the left panel. Details display in the right panel. **ChromeOS™:** 1. Go to support.google.com/chrome. 2. Search `collect Chrome device logs`.
Technical bulletins and alerts	To find technical bulletins, alerts, guides, and whitepapers: 1. Go to www.hp.com/support. 2. Follow the instructions to find your product. 3. Select **Bulletins and Alerts** to view technical bulletins.
Repair professionals	To locate repair professionals: 1. Go to www.hp.com. 2. Select **Authorized service providers**. 3. Select your location.
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: 1. Go to http://www.hp.com/go/techcenter/pcdiags. 2. Select the issue you want to diagnose.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

NOTE: The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

NOTE: The HP Support YouTube Channel (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use these procedures to remove and replace computer components.

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to https://partsurfer.hp.com/, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

Use these procedures to remove and replace computer components.

For initial safety procedures, see Removal and replacement procedures preliminary requirements on page 28.

1. Turn off the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the use this procedure and illustration.

Table 5-1 Bottom cover descriptions and part numbers

Description	Spare part number
Ceramic white	Q01891-001
Shadow black	Q01892-001


Before removing the bottom cover, follow these steps:

Prepare the computer for disassembly (see Preparation for disassembly on page 36).


Remove the bottom cover:

1. Loosen the four Phillips M2.0 × 4.0 captive screws **(1)** at the rear of the bottom cover. Then remove the two noncaptive Phillips screws **(2)** at the front of the computer.

NOTE: The bottom cover includes four captive (not removable) screws that cause the cover to pop up when you loosen the screw. **After the cover pops up, do not continue to loosen the captive screw.**

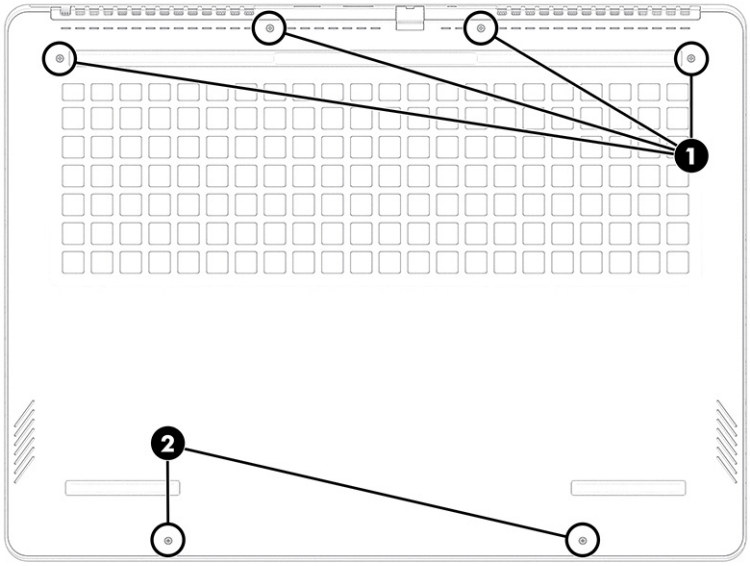

2. Use a nonmarking, nonconductive tool to release the edges of the bottom cover **(1)** from the computer.
3. Remove the bottom cover **(2)** from the computer.

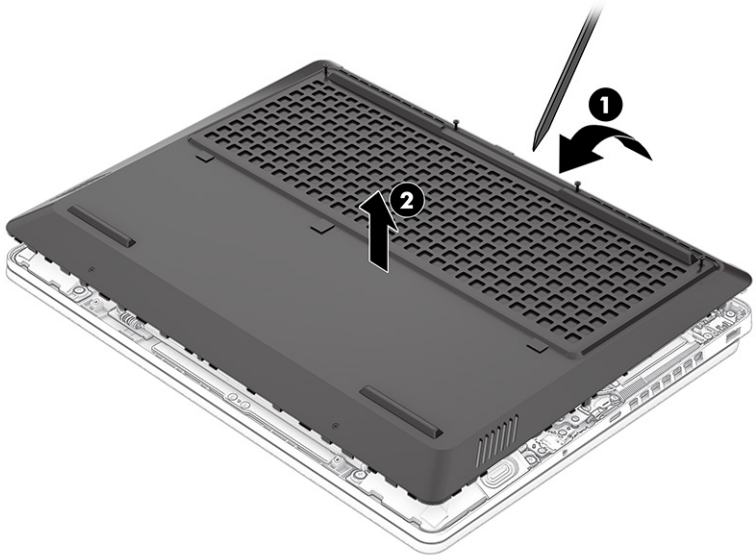


Reverse the removal procedures to replace the bottom cover.

When replacing the bottom cover, remove the Feature Byte label from the inside of the old bottom cover and place it on the inside of the new bottom cover. Be sure to keep this label with the computer, because the label is required for any future repairs.

You can locate product labels:

- Laser etched on the old bottom cover.
- In HP System Information by pressing fn + esc when you turn on the computer.

NOTE: Bottom cover appearance might vary.

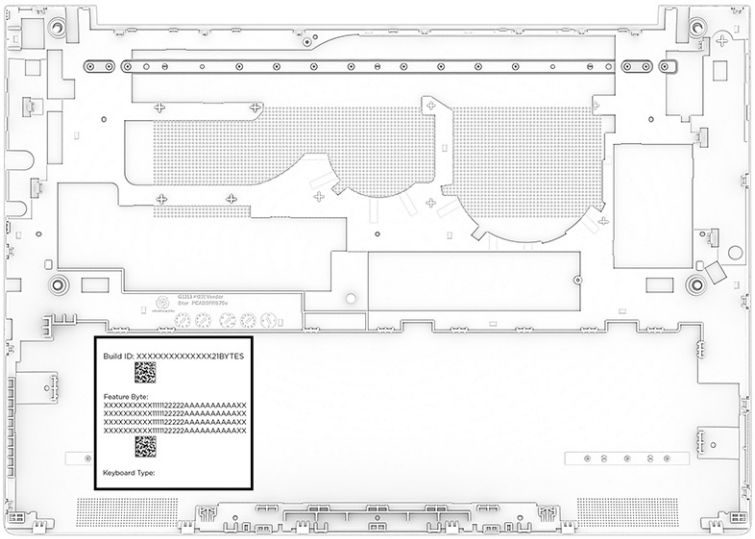


Hand write the product information onto the label of the new bottom cover. Use a ballpoint pen or marker to avoid smudging.

Example of label information



New bottom cover label location

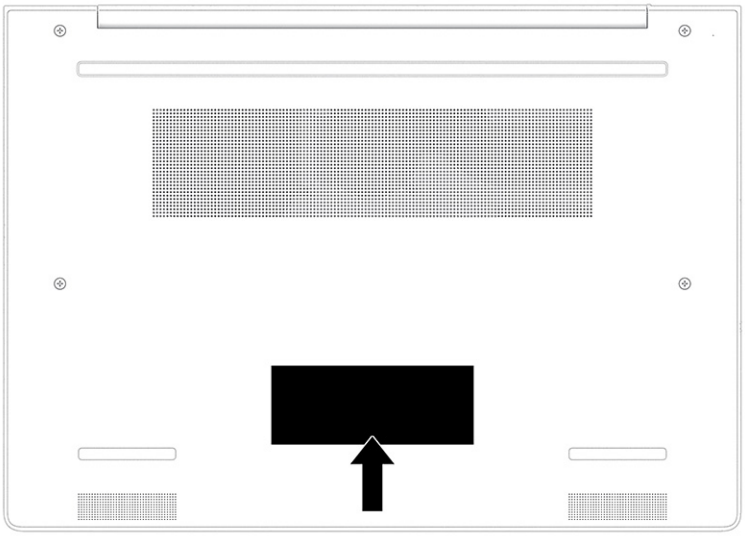

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see Removing and reinstalling the same battery on page 39.
- To install a new battery, see Installing a new battery on page 40.

Removing and reinstalling the same battery

Use this procedure and illustration to remove the battery and reinstall it.

⚠ **WARNING!** To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

For additional battery information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide, select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).

WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable **(1)** from the system board.
2. Remove the six Phillips M2.0 × 4.0 screws **(2)** that secure the battery to the computer.
3. Tilt the battery **(3)** up and forward toward the front of the computer.
4. Remove the battery **(4)** from the computer.

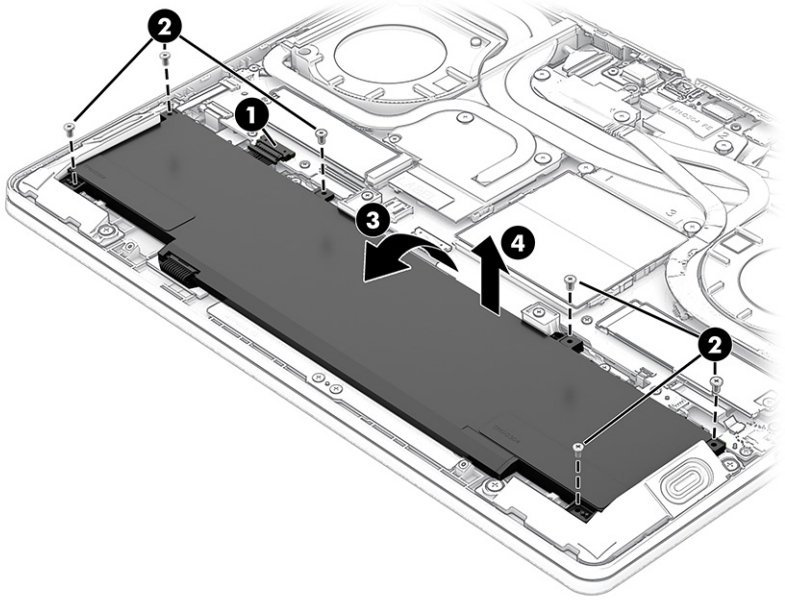

To reinstall the battery, reverse the removal procedures.

NOTE: When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Installing a new battery

To replace the battery, use these procedures and illustrations. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-2 Battery descriptions and part numbers

Description	Spare part number
6 cell, long life, fast charge, 83 Whr, with bracket	P23104-001

Table 5-2 Battery descriptions and part numbers (continued)

Description	Spare part number
4 cell, long life, fast charge, 70 Whr, with bracket	P23103-001

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire-extinguisher for use in an emergency.

⚠ **WARNING!** This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

NOTE: Screw locations, latch locations, and internal components might vary.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).

⚠ **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

1. Remove the battery using the revive kit:


a. Disconnect the battery cable from the system board. Connector location might vary.

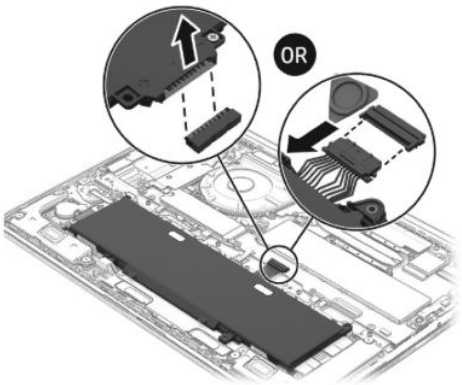

b. Open the empty battery containment tray.




c. Remove the paper backing layer from the adhesive on the tray.

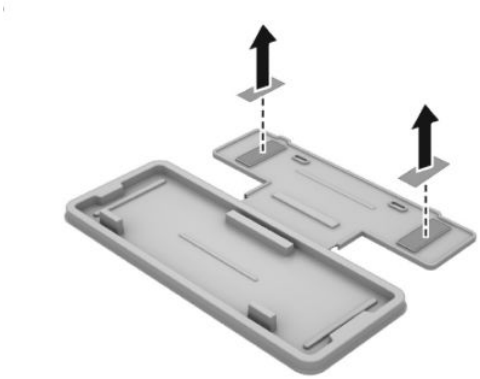

d. Turn the tray **(1)** over so that the adhesive is facing down.


e. Place the tray **(2)** centered on the battery.

f. Press down on the indentations on the tray **(3)** to adhere it to the battery.

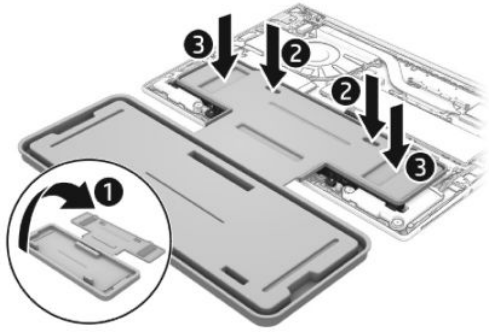


g. Remove the six Phillips screws **(1)** that secure the battery to the computer. Screw locations might vary.

h. Lift the top of the tray **(2)** to remove the battery from the computer.

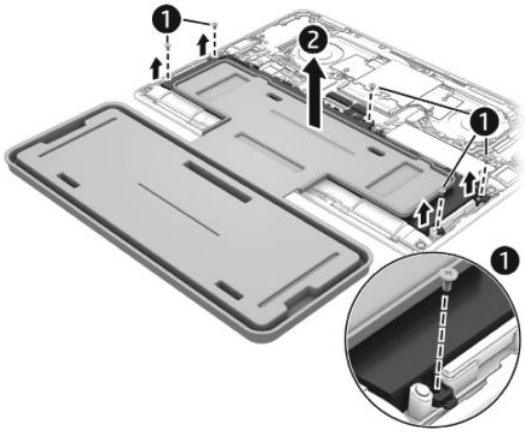

i. Rotate the battery up and over into the cavity of the containment tray.

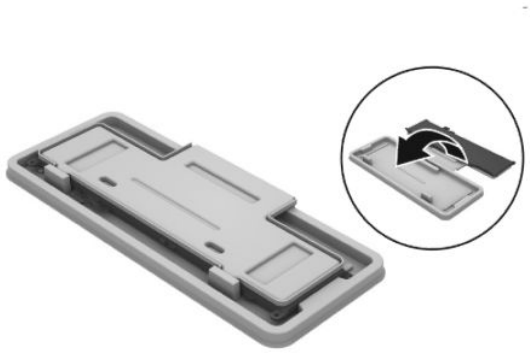


NOTE: Please recycle responsibly. For more information about recycling programs, see the HP website at http://www.hp.com/recycle.

2. If necessary, replace the battery brackets included with the battery:

   a. Remove the four screws **(1)** that secure the brackets to the computer.

   b. Remove the brackets **(2)** from the computer.

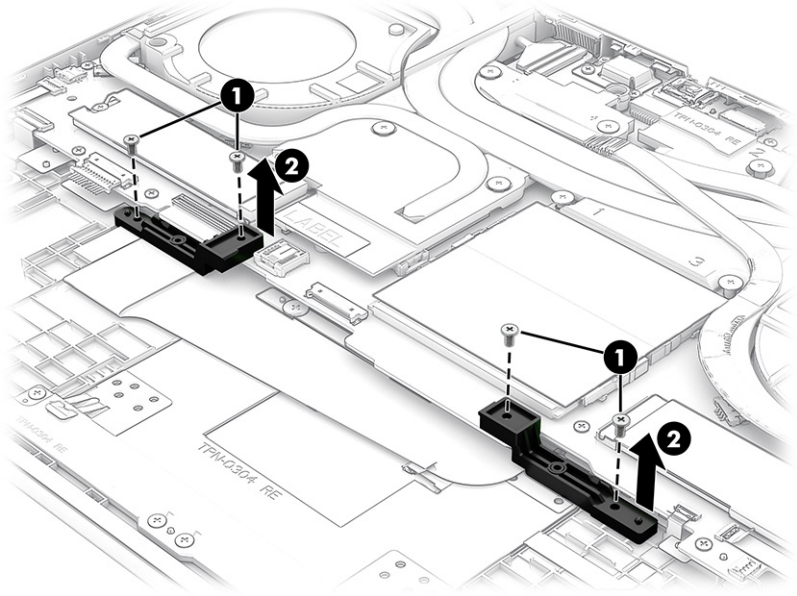


To install the replacement brackets, reverse the removal procedure.

3. Install the battery using the revive kit:


   a. Open the containment tray that includes the new battery.

b. Turn the tray **(1)** over so the battery is facing downward, and then insert the battery **(2)** into the computer. Adhesive secures the battery to the tray.

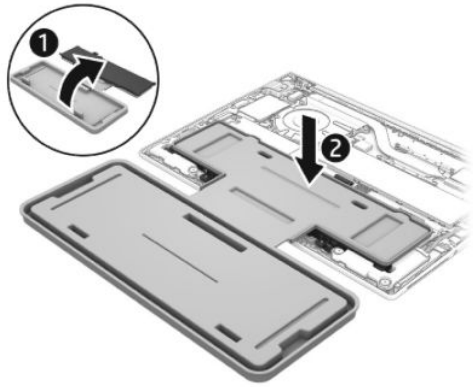


c. Install the screws **(1)** to secure the battery. Screw locations might vary.

d. Lift the containment tray **(2)** off the battery.

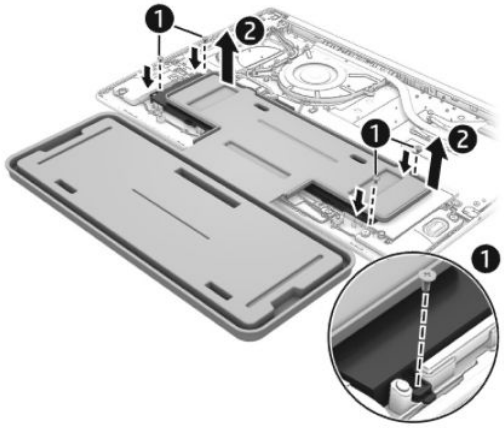

e. Connect the battery cable to the system board. Connector location might vary.

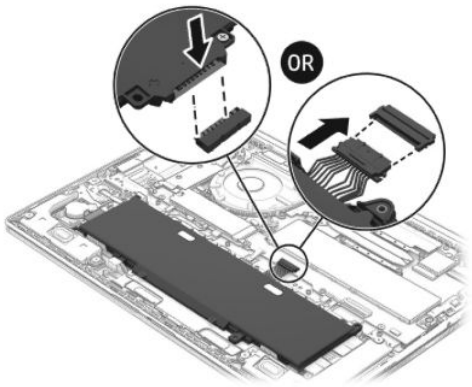

NOTE: When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Memory modules

Use this procedure and illustration to remove the memory modules.

NOTE: Do not remove any labels from factory original memory modules. HP authorized service providers use a commodity tracking number or a vendor serial number printed on memory module labels for limited warranty justification and fraud checking. These numbers are tied to a specific product serial number in the factory and registered by HP for subassembly tracking.

Table 5-3 Memory module descriptions and part numbers

Description	Spare part number
32 GB, DDR5 5600	N77400-001
24 GB, DDR5 5600	P55196-001
16 GB, DDR5 5600	N77398-001
8 GB, DDR5 5600	N77399-001

Before removing the memory, follow these steps:


1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.

If you are replacing a memory module, remove the existing memory module:

1. Lift the plastic cover over the memory module, but do not remove it **(1)**.

2. Spread the two retention clips outward **(2)** until the memory module tilts up at a 45° angle, and then remove the module **(3)**. Use the same procedure to remove all memory modules.

IMPORTANT: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

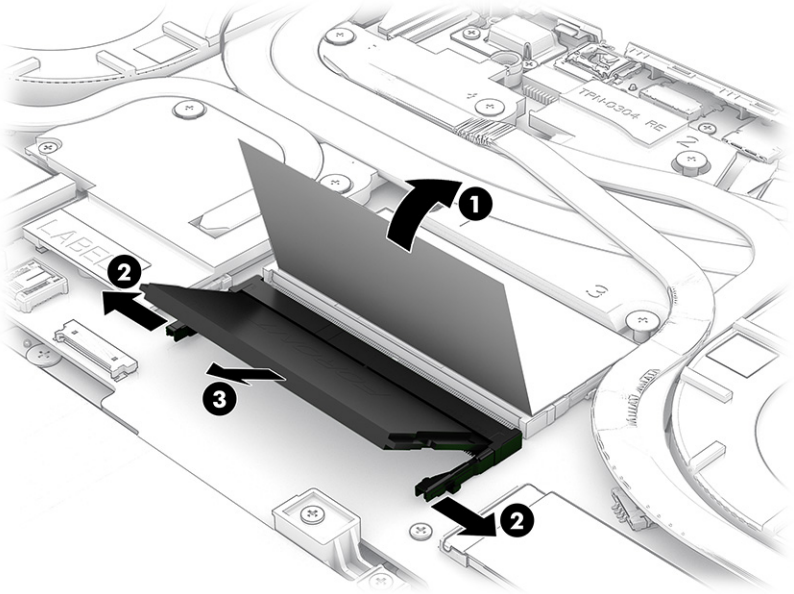

To protect a memory module after removal, place it in an electrostatic-safe container.

To install the replacement memory module, reverse the removal procedure.

Solid-state drive

Use this procedure and illustration to remove the SSD.

Table 5-4 SSD descriptions and part numbers

Description	Spare part number
2 TB, PCIe-4 × 4, NVMe	P07215-001
1 TB, PCIe-4 × 4, NVMe	N77394-001
512 GB, PCIe-4 × 4, NVMe	N77392-001

Before removing the SSD, follow these steps:


1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Remove the battery (see Battery on page 39).


Remove the SSD:

1. Remove the Phillips M2.0 × 2.5 screw **(1)** on either side that secures the drive you are replacing to the computer.

2. Carefully remove the drive bracket **(2)**, including the thermal pad and the paper backing for the thermal pad.
3. Pull the drive **(3)** away from the socket to remove it.

NOTE: Refer to the image that matches your computer.

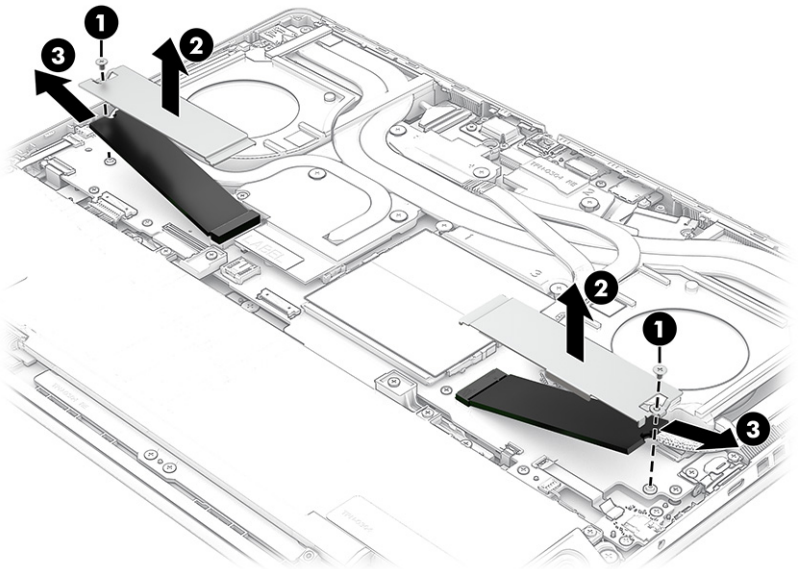

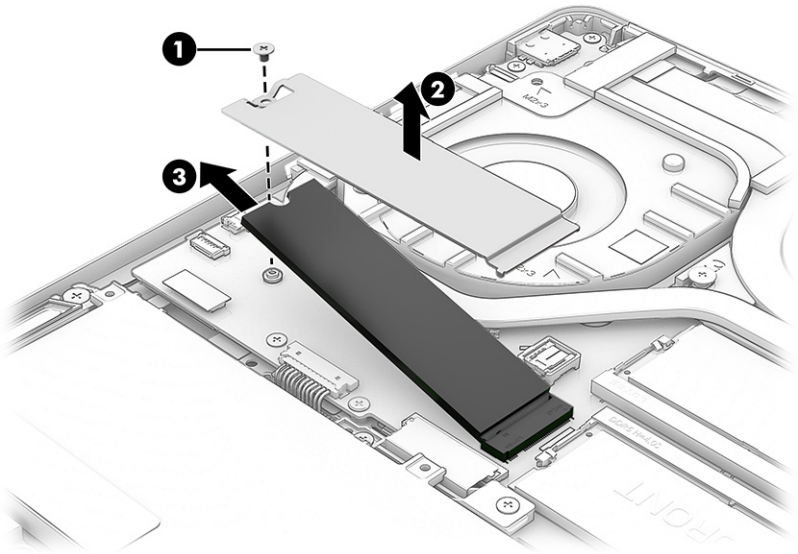

To install the SSD, reverse the removal procedures.

NOTE: SSDs are designed with a notch to prevent incorrect insertion.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

IMPORTANT: Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

NOTE: The HP Support YouTube Channel (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use the procedures described in this section to remove and replace computer components.

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to https://partsurfer.hp.com/, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Speakers

Use this procedure and illustration to remove the speakers.

Table 6-1 Speaker description and part number

Description	Spare part number
Speakers	P23101-001


Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.

Remove the speakers:

1. Disconnect the speaker cables **(1)** from the system board.
2. Remove the four Phillips M2.0 × 4.0 screws **(2)** that secure the speakers to the computer.

3. Remove the speakers **(3)** from the computer.

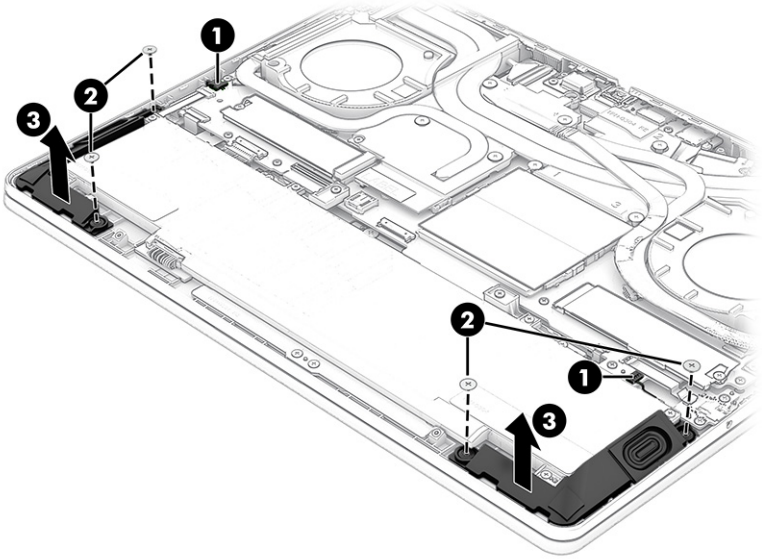

To install the speakers, reverse this procedure.

Audio board

Use this procedure and illustration to remove the audio board.

Table 6-2 Audio board description and part number

Description	Spare part number
Models with RTX 5000 series graphics	P50566-001


Before removing the audio board, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery (see Battery on page 39). Removal of the battery is not required.

Remove the audio board:

1. Remove the two Phillips M2.0 × 3.5 screws **(1)** that secure the board to the computer.
2. Disconnect the audio board cable from the ZIF connector **(2)** on each side of the audio board.
3. Remove the audio board **(3)**.

4. Remove the audio board cable **(4)**.

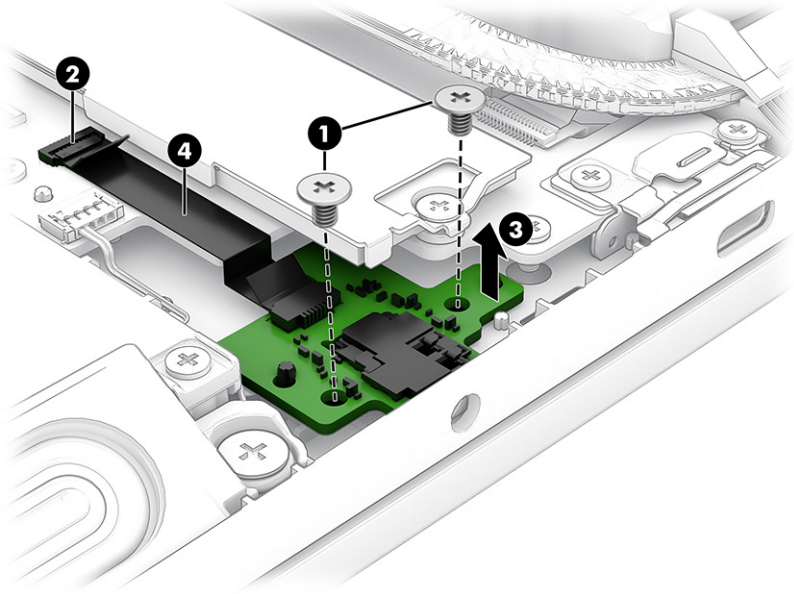

To install the audio board, reverse this procedure.

Touchpad

Use this procedure and illustrations to remove the touchpad.

Table 6-3 Touchpad descriptions and part numbers

Description	Spare part number
Ceramic white, with cable	P23092-001
Shadow black, with cable	P23093-001


Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Remove the battery (see Battery on page 39).


Remove the touchpad:

1. Remove the four Phillips M2.0 × 3.0 screws **(1)** that secure the touchpad bracket to the computer.

2. Remove the touchpad bracket **(2)** from the computer.

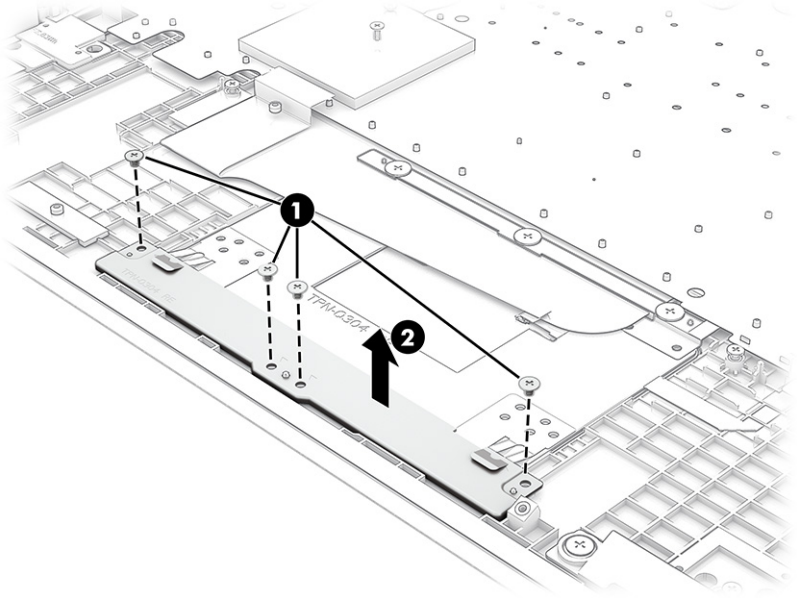

3. Lift but do not remove the Mylar cover **(1)**.
4. Disconnect the cable from the ZIF connector **(2)** on the touchpad.
5. Remove the three Phillips M2.0 × 3.0 screws **(3)** that secure the touchpad to the computer.
6. Lift the tape **(4)** (not shown) from the touchpad.
7. Carefully press up from underneath on the touchpad **(5)** to release it from the computer.
8. Remove the touchpad **(6)** from the computer.

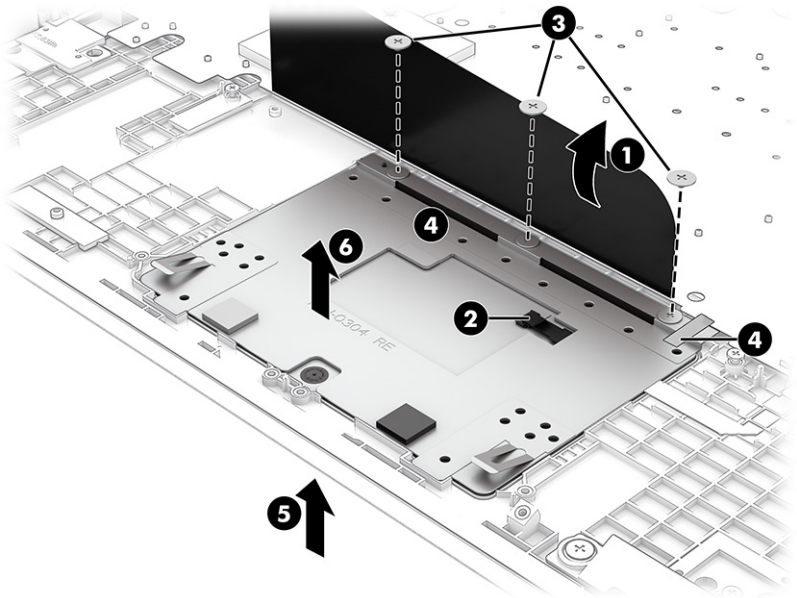

To install the touchpad, reverse this procedure.

Heat sink

Use these procedures and illustrations to remove the heat sink.

Table 6-4 Heat sink descriptions and part numbers


Description	Spare part number
For use in models with RTX 5000 series graphics and Intel Core HX series processors	Q01886-001
For use in models with RTX 5000 series graphics and Intel Core Ultra series 2 processors	Q01887-001
For use in models with RTX 5000 series graphics and Intel Core Ultra series 3 processors	Q01888-001

Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.

Remove the heat sink using the set of steps that matches your computer model:


1. **Models with RTX 5000 series graphics and an Intel Core HX series processor:**
   a. In the order of the screws labeled on the heat sink, remove the seven Phillips screws **(1)** from the heat sink.
   b. Remove the two remaining Phillips M2.0 × 3.0 screws **(2)** from the heat sink.
   c. Carefully tilt the heat sink **(3)** upward from the rear of the computer, without putting pressure on the heat pipe.
   d. Remove the heat sink **(4)** from the computer.

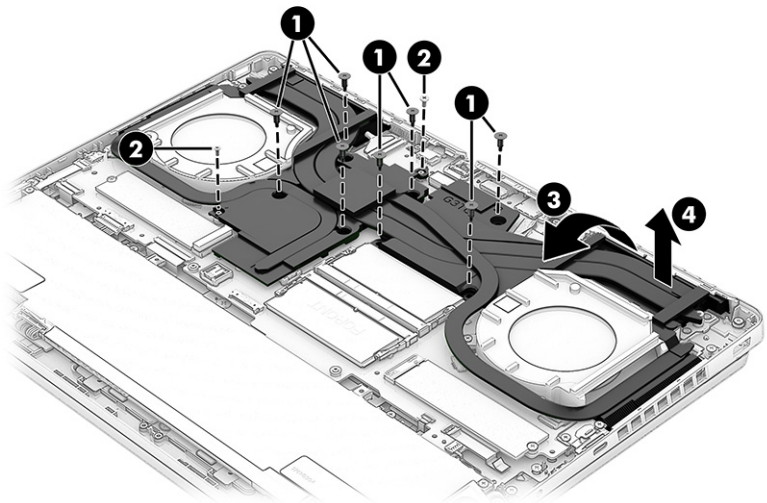

   e. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with

the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

Be sure that thermal paste **(1)** and thermal pads **(2)** are installed on the heat sink components.

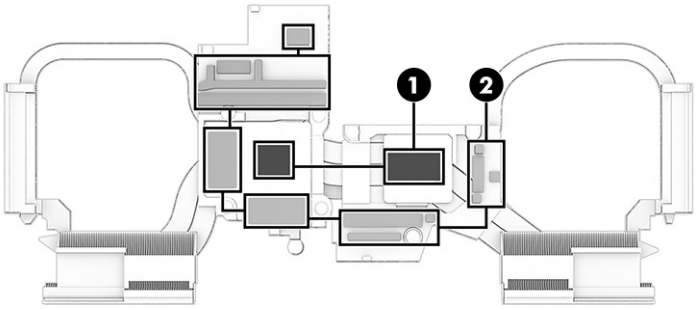


2. **Models with RTX 5000 series graphics and an Intel Core Ultra 3 series processor:**

   a. In the order of the screws labeled on the heat sink, remove the seven Phillips screws **(1)** from the heat sink.

   b. Remove the two remaining Phillips M2.0 × 3.0 screws **(2)** from the heat sink.


   c. Carefully tilt the heat sink **(3)** upward from the rear of the computer, without putting pressure on the heat pipe.

   d. Remove the heat sink **(4)** from the computer.

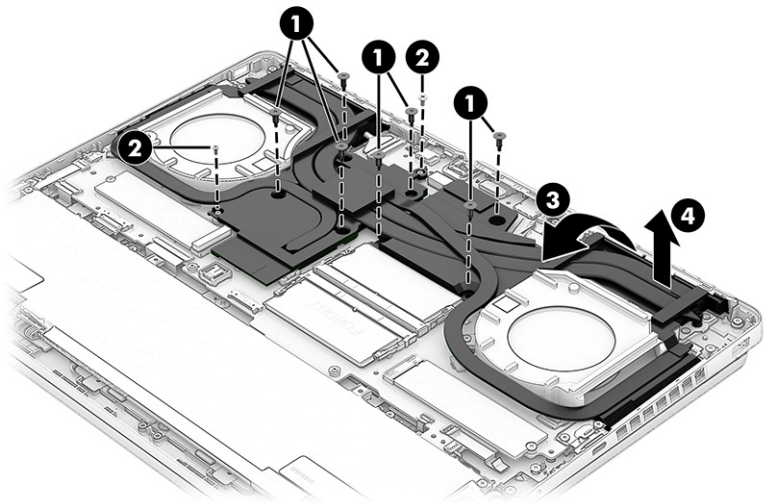

   e. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

   Be sure that thermal paste **(1)** and thermal pads **(2)** are installed on the heat sink components.

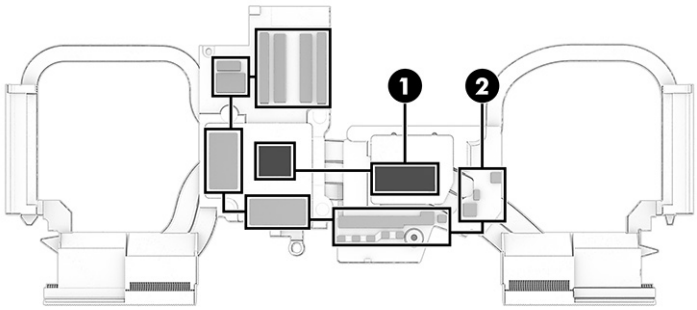


3. **Models with RTX 5000 graphics and an Intel Core Ultra 2 series processor:**

   a. In the order of the screws labeled on the heat sink, remove the seven Phillips screws **(1)** from the heat sink.

   b. Remove the two remaining Phillips M2.0 × 3.0 screws **(2)** from the heat sink.


   c. Carefully tilt the heat sink **(3)** upward from the rear of the computer, without putting pressure on the heat pipe.

   d. Remove the heat sink **(4)** from the computer.

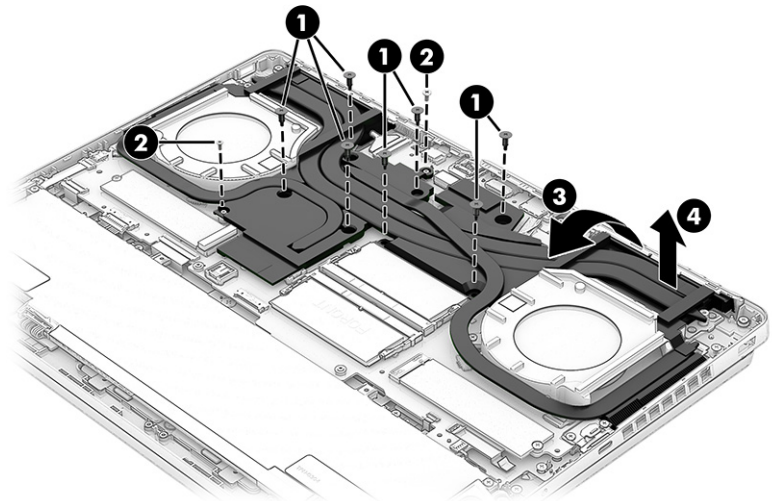

   e. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

   Be sure that thermal paste **(1)** and thermal pads **(2)** are installed on the heat sink components.

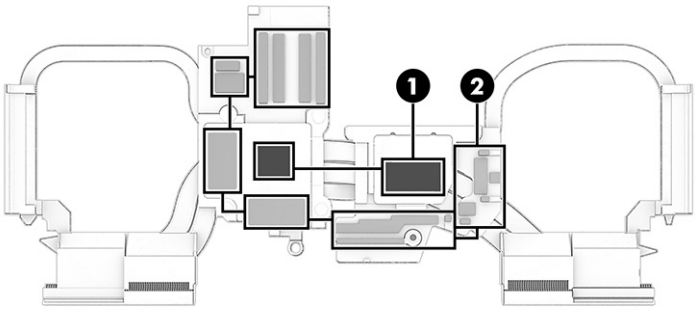

To install the heat sink, reverse this procedure. When installing the heat sink, tighten the screws in the order from 1 to 7.

Fan

Use this procedure and illustration to remove the fans.

Table 6-5 Fan description and part number

Description	Spare part number
Fan	Q01890-001


Before removing the fans, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.
4. Remove the heat sink (see Heat sink on page 53).

Remove the fan assembly:

1. Remove the six Phillips M2.0 × 5.0 screws **(1)** that secure the fans to the computer.
2. Disconnect the fan cables **(2)** from the system board.

3. Remove the fans **(3)** from the computer.

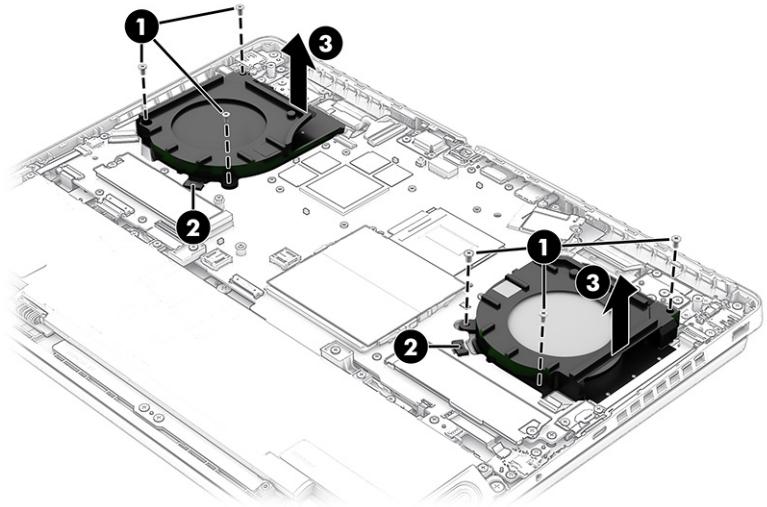

To install the fans, reverse this procedure.

WLAN module

Use this procedure and illustrations to remove the WLAN module.

Table 6-6 WLAN module descriptions and part numbers

Description	Spare part number
Intel BE211 Wi-Fi 7 + Bluetooth 6 (non-vPro)	P36621-005
MediaTek MT7925 Wi-Fi 7+Bluetooth 6.0	N64647-005
Realtek 8852BE-VT Wi-Fi 6 Bluetooth 5.4	P06350-005

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.
4. Remove the heat sink (see Heat sink on page 53).
5. Remove the fans (see Fan on page 56).


Remove the WLAN module:


1. Remove transparent covers from WLAN connectors.

2. Remove the Phillips M2.0 × 2.5 screw **(1)**.
3. Remove the WLAN module bracket **(2)**.
4. Carefully disconnect the two antenna cables **(3)** from the module .
5. Remove the WLAN module **(4)**.


NOTE: Models have either one or two WLAN antennas. On models with two antennas, the #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

NOTE: Refer to the image that matches your computer.

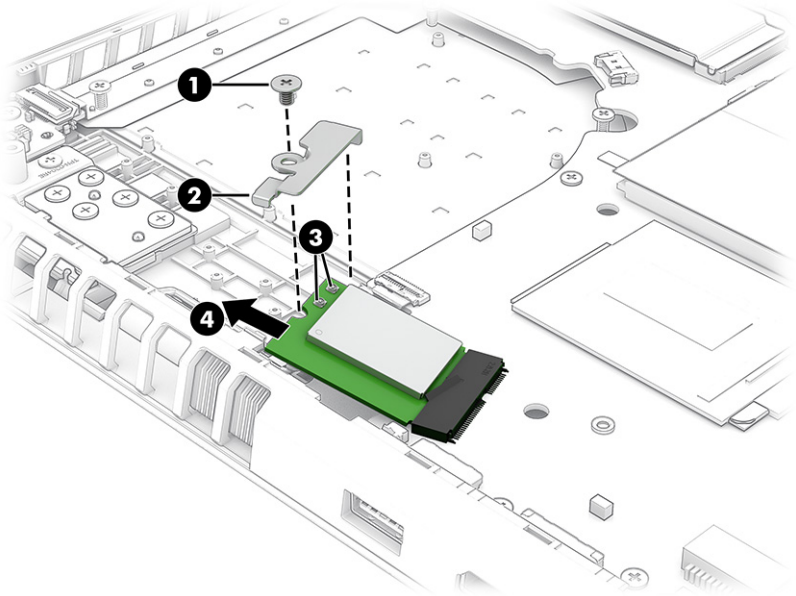

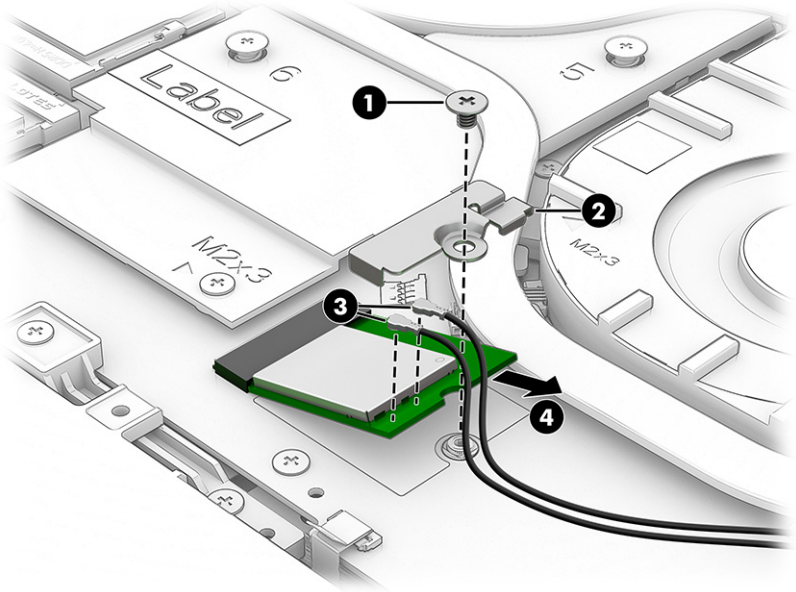

6. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

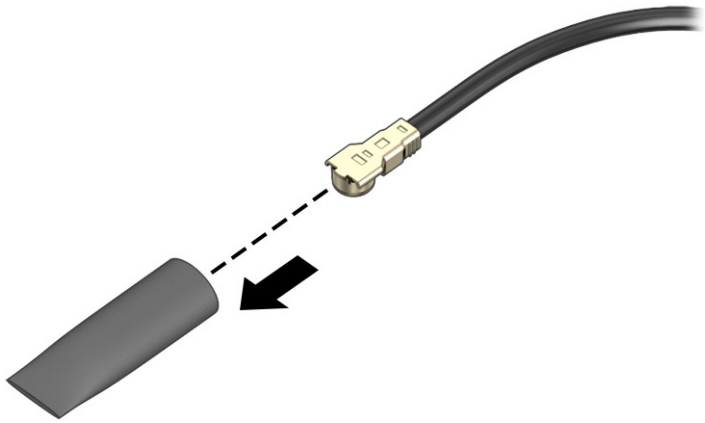

To install the WLAN module, reverse this procedure.

USB board (left)

Use this procedure and illustration to remove the left-side USB board.

Table 6-7 Left-side USB board description and part number

Description	Spare part number
Models with RTX 5000 series graphics	P50565-001


Before removing the left-side USB board, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.
4. Remove the heat sink (see Heat sink on page 53).
5. Remove the fans (see Fan on page 56).

Remove the USB board:

1. Disconnect the cable from the USB board ZIF connector **(1)**.
2. Remove the two Phillips M2.0 × 3.0 screws **(2)** that secure the board to the computer.
3. Remove the board **(3)** from the computer.
4. Disconnect the cable **(4)** from the system board ZIF connector.

5. Remove the cable **(5)** from the computer.

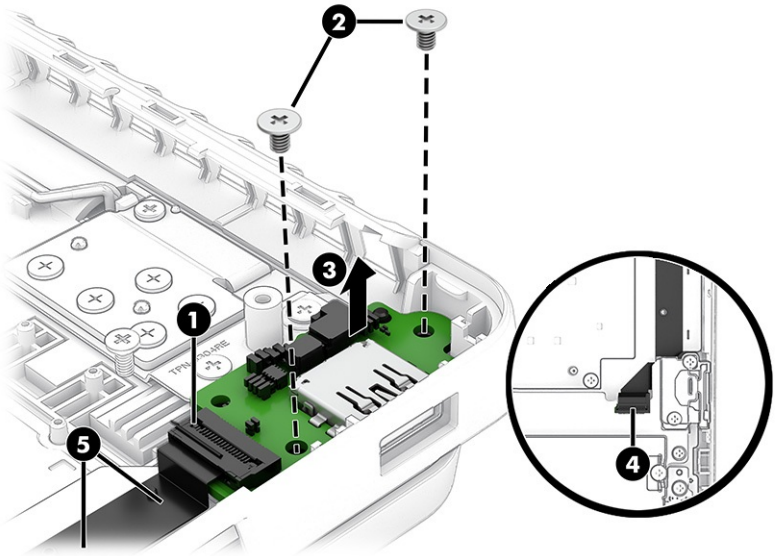

To install the left-side USB board, reverse this procedure.

USB board (right)

Use this procedure and illustration to remove the right-side USB board.

Table 6-8 Right-side USB board descriptions and part numbers

Description	Spare part number
Models with RTX 5000 series graphics	P50564-001
OLED, with cable	Q01902-001


Before removing the right-side USB board, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.
4. Remove the heat sink (see Heat sink on page 53).
5. Remove the fans (see Fan on page 56).

Remove the USB board:

1. Disconnect the cable **(1)** from the USB board ZIF connector.
2. Remove the two Phillips M2.0 × 3.0 screws **(2)** that secure the board to the computer.
3. Remove the board **(3)** from the computer.
4. Disconnect the cable **(4)** from the system board ZIF connector.

5. Remove the cable **(5)** from the computer.

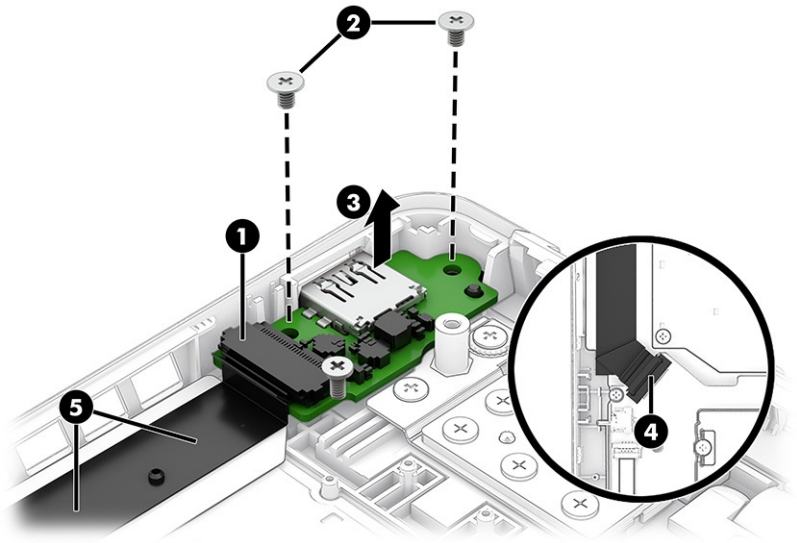

To install the right-side USB board, reverse this procedure.

System board

Use these procedures and illustrations to remove the system board.

Table 6-9 System board descriptions and part numbers

Description	Spare part number
System board (includes integrated processor) **NOTE:** All system board spare part kits include replacement thermal material.	
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync)	Q08679-601
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics	Q08671-601
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync) (People's Republic of China)	Q08693-xx1
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5070 graphics (PRC)	Q08685-xx1
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics	Q01831-601
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync)	Q01861-601
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics (PRC)	Q01871-601
Intel Core i9-14900HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync) (PRC)	Q01879-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics	Q08670-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync)	Q08678-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics (PRC)	Q08684-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5070 graphics (G-Sync) (PRC)	Q08692-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics	Q01830-601

Table 6-9 System board descriptions and part numbers (continued)

Description	Spare part number
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync)	Q01860-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics (PRC)	Q01870-601
Intel Core i7-14650HX processor with NVIDIA GeForce RTX 5060 graphics (G-Sync) (PRC)	Q01878-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01827-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01843-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01847-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01855-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01857-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01865-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01877-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q08673-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08675-601
Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08677-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08681-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08683-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08687-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08689-601
Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08691-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08695-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08697-601
Intel Core Ultra7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01842-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB	Q01826-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01846-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01854-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01864-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync)	Q01856-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (G-Sync) (PRC)	Q01876-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08672-601
Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08676-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB	Q08674-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08686-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08694-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync) (PRC)	Q08696-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08688-601

Table 6-9 System board descriptions and part numbers (continued)

Description	Spare part number
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08680-601
Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (PRC)	Q08690-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 8 GB (G-Sync)	Q08682-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB	Q01833-601
Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB	Q01835-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01839-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01841-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01845-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01849-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01851-601
Intel Core Ultra 9 275 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01853-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01869-601
Intel Core Ultra 9 290 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01873-601
Intel Core Ultra 9 386H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01875-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01832-601
Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB	Q01834-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01838-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01840-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync)	Q01844-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01848-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5070 graphics, 12 GB (PRC)	Q01850-601
Intel Core Ultra 7 255 processor with NVIDIA GeForce RTX 5060 graphics, 12 GB (G-Sync) (PRC)	Q01852-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (G-Sync) (PRC)	Q01868-601
Intel Core Ultra 7 270 processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01872-601
Intel Core Ultra 7 356H processor with NVIDIA GeForce RTX 5060 graphics, 8 GB (PRC)	Q01874-601

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Remove the battery and battery brackets (see Battery on page 39).
4. Remove the heat sink (see Heat sink on page 53).
5. Remove the fans (see Fan on page 56).
6. Remove the WLAN module (see WLAN module on page 57).


When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:


- Memory module(s) (see Memory modules on page 46).
- SSD (see Solid-state drive on page 47).
- Heat sink (see Heat sink on page 53).
- WLAN module (see WLAN module on page 57).

Remove the system board:


1. Disconnect the following cables from the system board:
   - Infrared board cable **(1)**
   - Display panel cable (ZIF) **(2)**
   - Left USB board cable (ZIF) **(3)**
   - Left speaker cable **(4)**
   - Audio board cable **(5)**
   - Touchpad cable (ZIF) **(6)**
   - Keyboard cable (ZIF) **(7)**
   - Battery cable **(8)**
   - Keyboard backlight cable (ZIF) **(9)**
   - Right speaker cable **(10)**
   - Right USB board cable **(11)**

NOTE: Refer to the image that matches your computer.

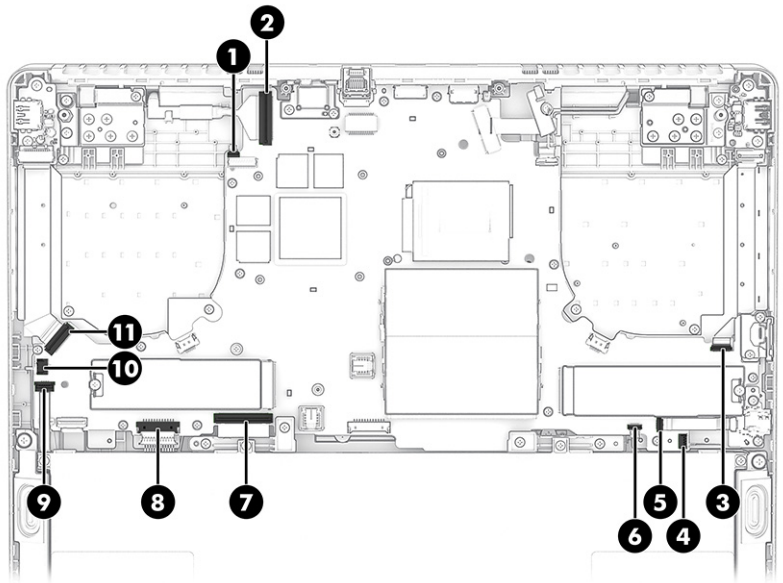

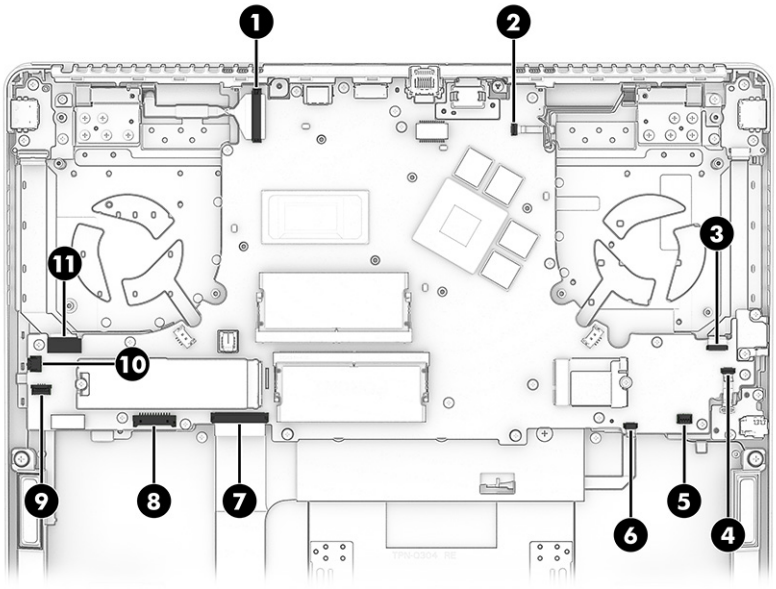



2. Remove the two Phillips screws **(1)** that secure the power connector bracket to the system board.
3. Remove the power connector bracket **(2)** from the system board.

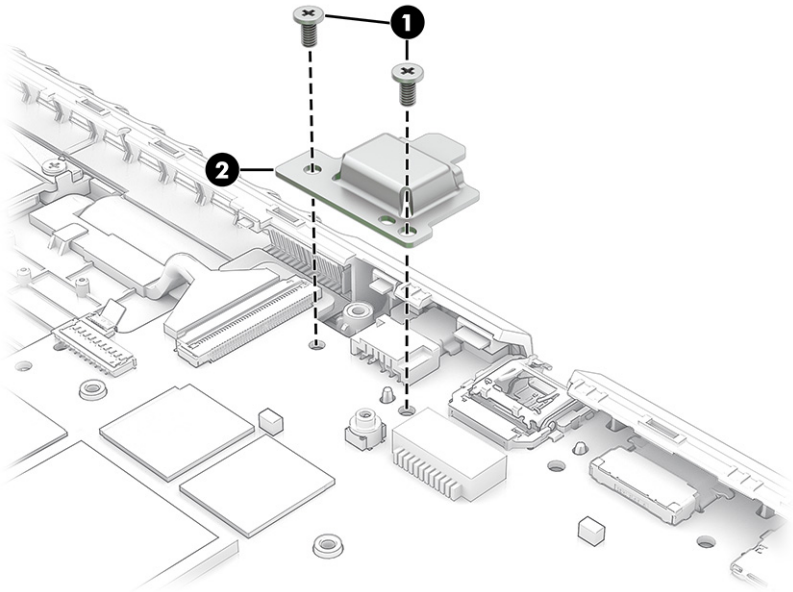


4. Remove the Phillips M2.0 × 5.0 screws that secure the system board to the computer.

NOTE: Refer to the image that matches your computer.

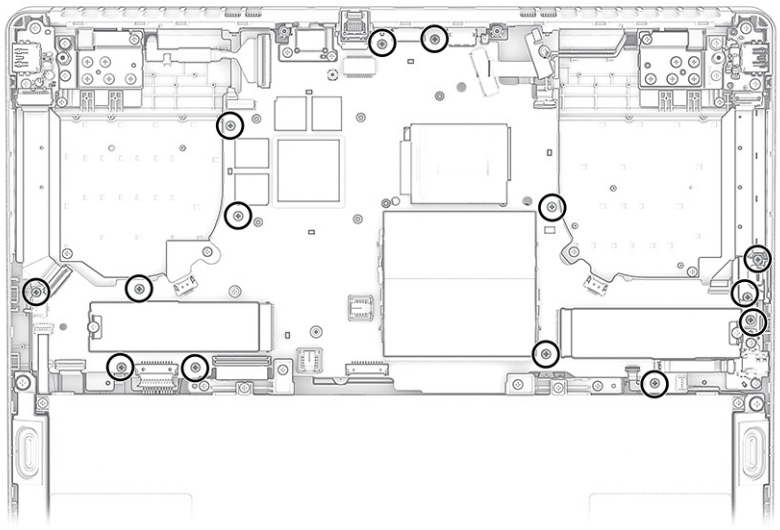

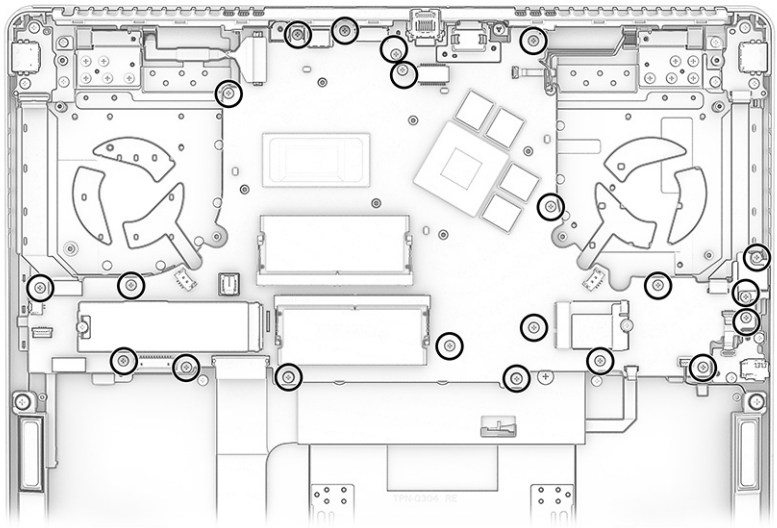

5. Tilt the system board up at the front **(1)** and then remove the system board **(2)** from the computer.

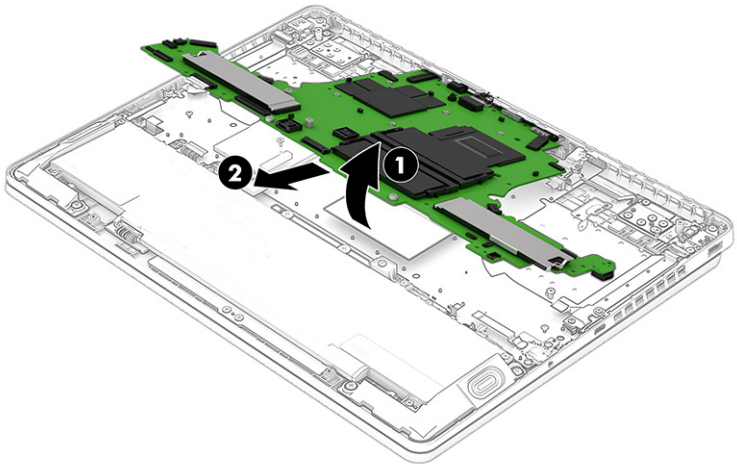

To install the system board, reverse this procedure.

Infrared board

Use this procedure and illustration to remove the infrared board.

NOTE: The infrared board spare part kit includes the infrared board cable.

Table 6-10 Infrared board description and part number

Description	Spare part number
Infrared board (includes cable)	Q01884-001


Before removing the infrared board, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Remove the battery and battery brackets (see Battery on page 39).
4. Remove the heat sink (see Heat sink on page 53).
5. Remove the fans (see Fan on page 56).
6. Remove the system board (see System board on page 61).

Remove the infrared board:

1. Remove the two Phillips screws **(1)** securing the board to the top cover.

2. Remove the infrared board **(2)**.

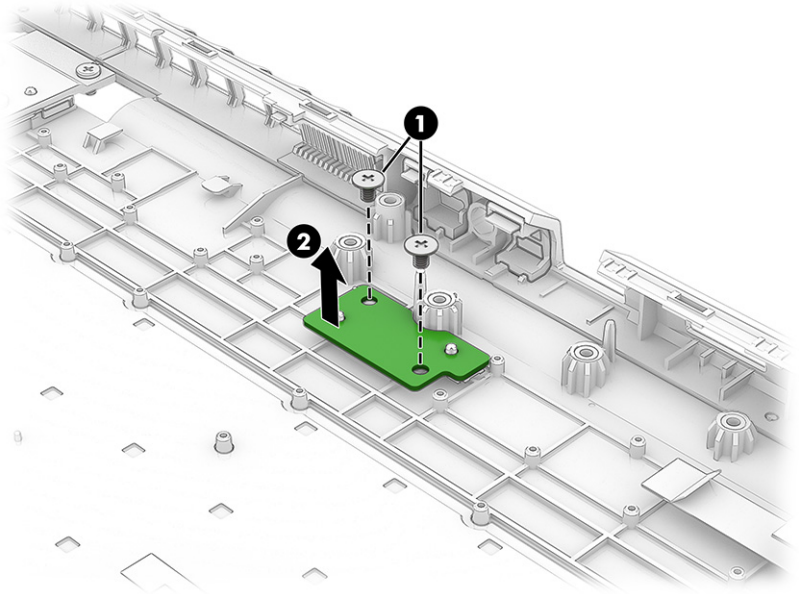

To install the infrared board, reverse this procedure.

Display assembly

Use these procedures and illustrations to remove and disassemble the display assembly.

Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.

Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly (see Preparation for disassembly on page 36).
2. Remove the bottom cover (see Bottom cover on page 36).
3. Disconnect the battery from the system board (see Battery on page 39). Removal of the battery is not required.

Remove the display bezel:


1. You can remove the bezel with the display assembly connected to the computer. To remove the bezel:
   a. Open the display **(1)** to the maximum angle and position the display assembly on a flat surface.
   b. Using a nonmarking pry tool, release the bezel **(2)** from the display assembly and remove the bezel.

   NOTE: To avoid damaging the panel, do not use a tool to release the inside of the bezel. You can use a tool only when you insert it from the **outside** of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

   The bezel is available as the following spare part numbers:

   - Q01893-001: Ceramic white
   - Q01894-001: Ceramic white, infrared

- Q01895-001: Shadow black (plastic)
- Q01896-001: Shadow black, infrared (plastic)
- Q01897-001: Shadow black (metal)
- Q01898-001: Shadow black, infrared (metal)

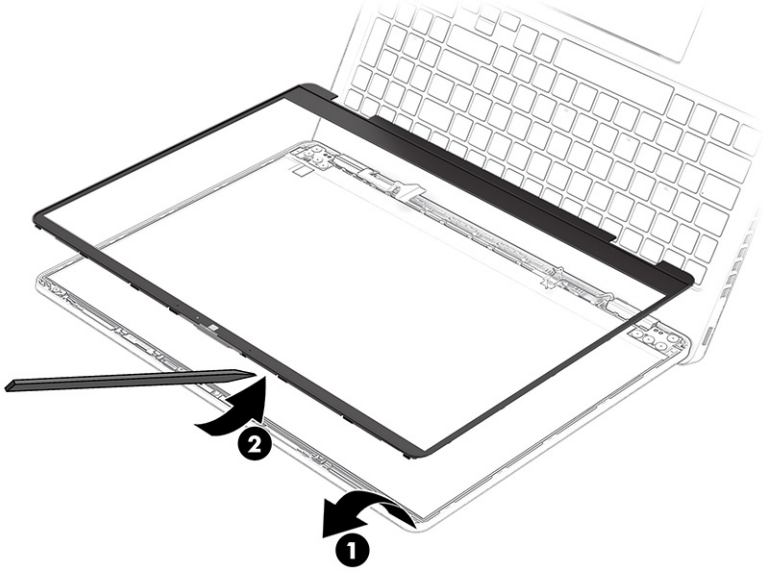

2. You can remove the display panel with the display assembly connected to the computer. To remove the display panel:

   a. The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the ends of the tape **(1)**. While turning the tweezers, wrap the tape around the tweezers **(2)** as you continue to pull the tape out from behind the display panel **(3)**. You must pull the tape multiple times before it is completely removed.

   IMPORTANT: Pull the tape out slowly and evenly to prevent it from breaking prematurely.

   b. Lift but do not remove the Mylar cover **(4)**.


   c. Lift the display cable retention clip **(5)**.

   d. Release the display cable from the display cable connector **(6)**.

   e. Lift and remove the display panel **(7)**.

      Display panels are available as the following spare part numbers:

      - Q01881-001: 2.5 K, UWVA, 500 nits, 240 Hz
      - Q01882-001: UWVA, 500 nits, 165 Hz
      - Q01880-001: UWVA, 400 nits, 165 Hz

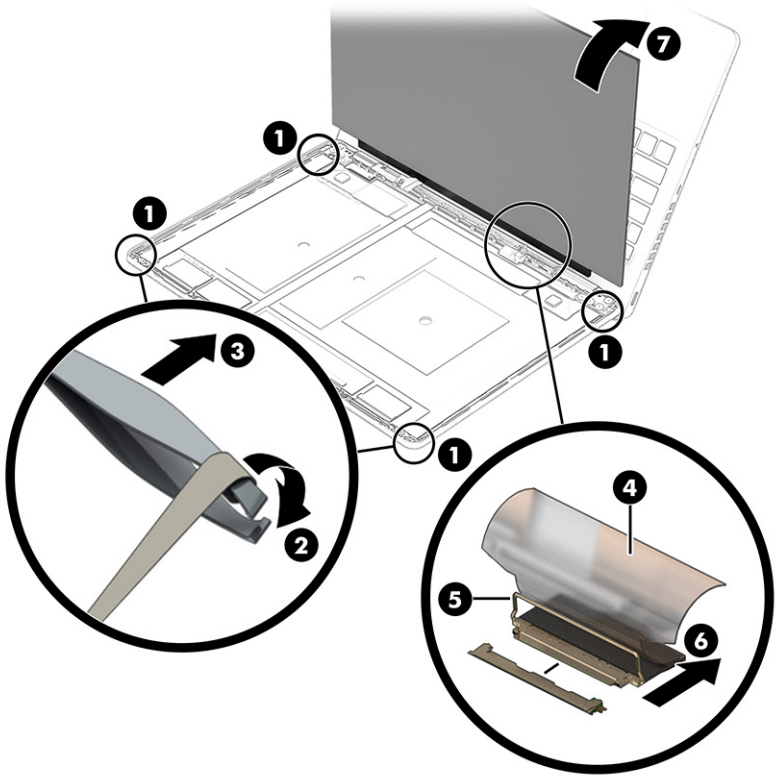

3. The remaining display components require that you remove the display assembly from the computer. To remove the display assembly:

   a. Remove the heat sink (see Heat sink on page 53).

   b. Remove the fans (see Fan on page 56).

   c. Remove the WLAN module (see WLAN module on page 57).


   d. Remove the system board (see System board on page 61).

   e. Close the computer **(1)**.

   f. Remove the 12 hinge screws **(2)** from the hinges.

   g. Open the computer **(3)**.

h. Remove the top cover **(4)**.

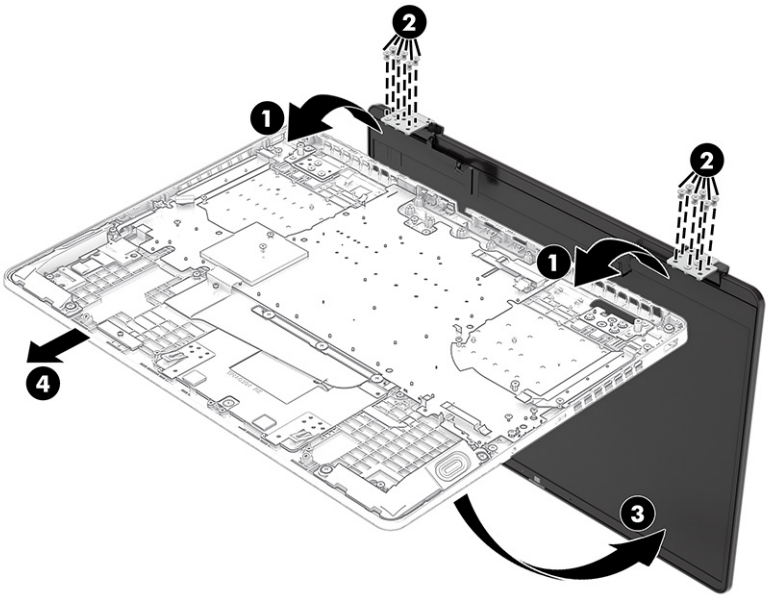


4. Remove the hinge caps.

   a. Rotate the hinges **(1)** to the closed position.

   b. Remove the hinge caps **(2)**.

      Hinge caps are available as a set as spare part numbers P23120-001 (ceramic white) and P23121-001 (shadow black).

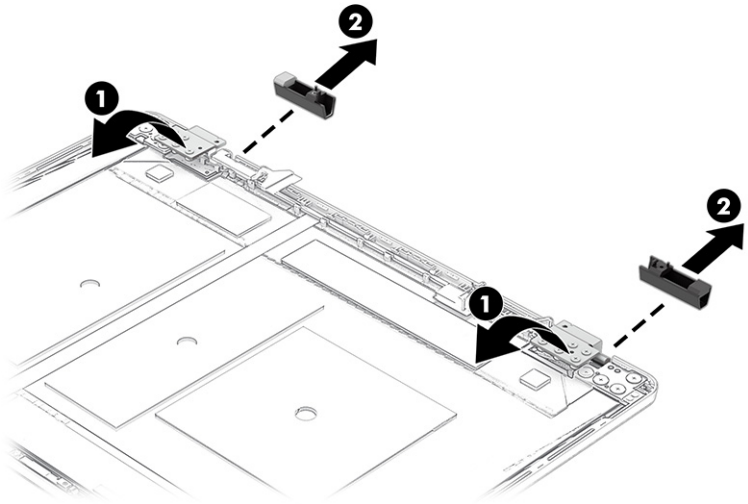


5. Remove the hinges and WLAN antennas from the display assembly.

   a. Rotate the hinges to the open position **(1)**.

   b. Remove the two Phillips M2.5 × 4.5 screws and the eight broadhead Phillips M2.0 × 2.5 screws **(2)** from the hinge subassembly .

c. Remove the hinge subassembly **(3)** from the display assembly.


Hinges are available as a set as spare part number P23119-001 or Q01900-001 (metal).

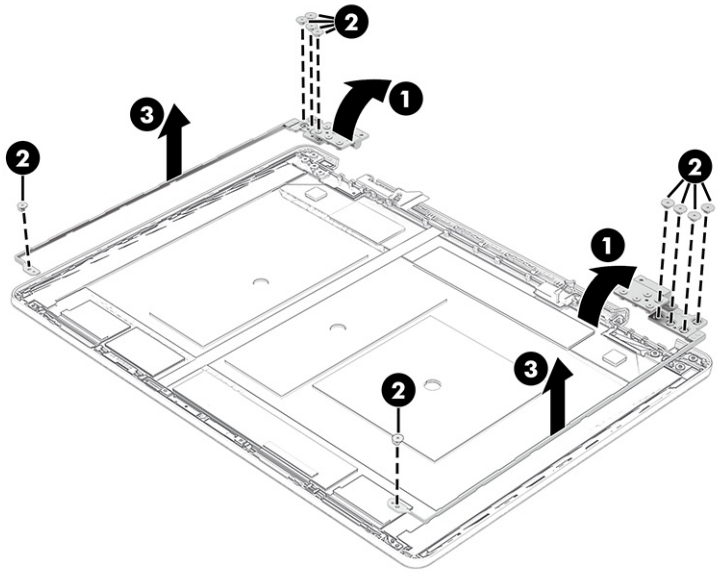

6. To remove the camera module:

a. Using a pry tool, carefully release the display assembly top bracket from the retention clips.


IMPORTANT: The top bracket is thin and may bend if not removed with care.

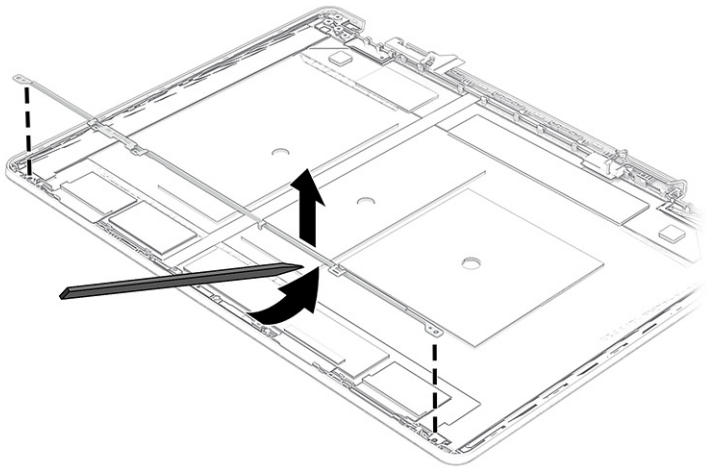

b. Use a pry tool to loosen the camera module **(1)** from the display back cover.


c. Lift up evenly across the module and peel the module up from the display back cover, and then disconnect the cable **(2)** from the reverse ZIF connector on the module.

d. Remove the camera module **(3)** from the display assembly. The camera module is available as spare part number Q02188-001 (with cable), or Q02189-001 (infrared, with cable).

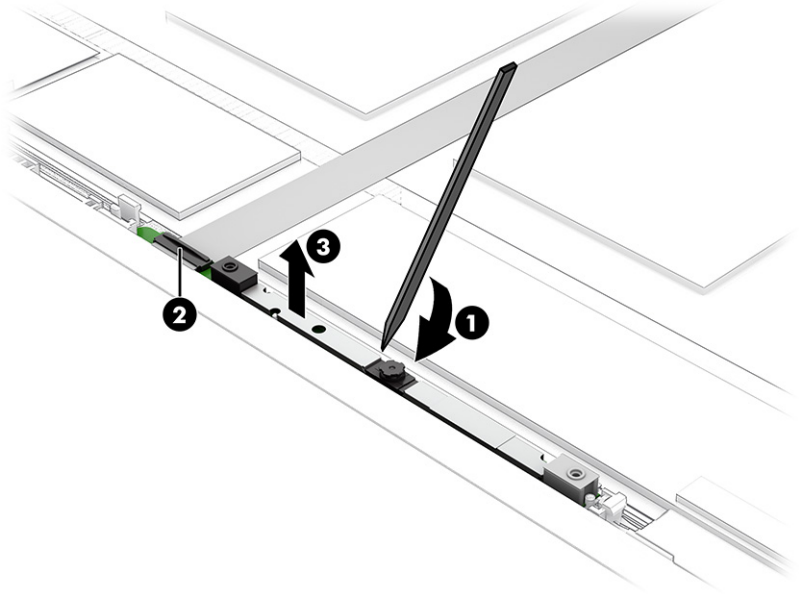


7. To remove the display/camera cable, peel the cable off the inside of the display back cover, remove the cable from the clips at the bottom of the display back cover, and then remove the cable.

   Display panel and camera module cables are available as spare part number Q01899-001.

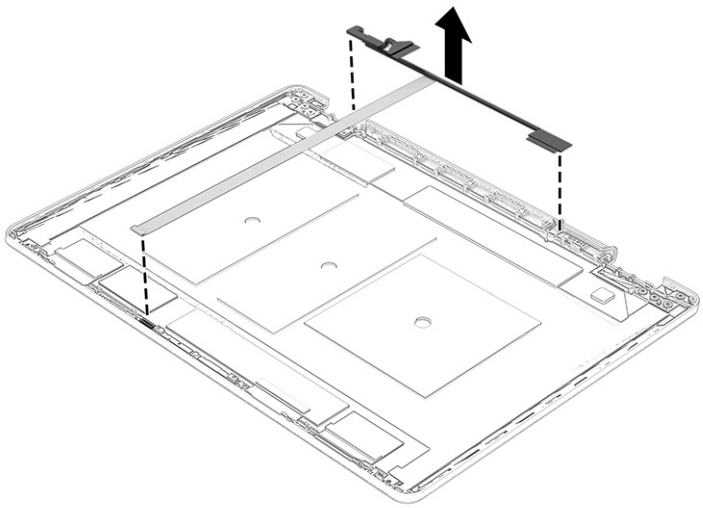

8. To remove the antenna cables, remove the cables from the clips **(1)** at the bottom and sides of the display assembly, peel the antennas off the inside **(2)** of the display back cover, and then remove the antennas and cables.

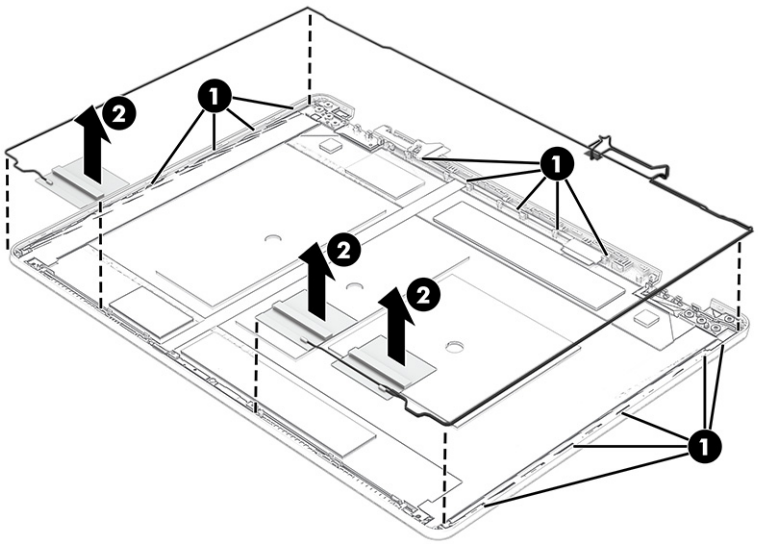

Antenna cables are available as spare part number Q01889-001.

Display back covers are available as the following spare part numbers:

- Q01943-001: Ceramic white, 2.6T
- Q01944-001: Shadow black, 2.6 T
- Q01945-001: Shadow black, OLED
- Q02253-001: Ceramic white, 3.0T (plastic)
- Q02254-001: Shadow black, 2.6T (plastic)
- Q02255-001: Shadow black, 3.0T (plastic)

To reassemble and replace the display assembly, reverse this procedure.

Keyboard with top cover

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part numbers for the top cover with keyboards. The second table provides the country codes.

Table 6-11 Keyboard with top cover descriptions and part numbers

Description	Spare part number
Ceramic white, 4-zone RGB backlight	Q01903-xxx
Ceramic white, backlight	Q01904-xxx
Shadow black, 4-zone RGB backlight	Q01905-xxx
Shadow black, backlight	Q01906-xxx

Table 6-12 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Saudi Arabia	-171
Brazil	-201	India	-D61	Slovenia	-BA1
Bulgaria	-261	Israel	-BB1	South Korea	-AD1
Chile	-161	Italy	-061	Spain	-071
Czech Republic/Slovakia	-FL1	Japan	-291	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	Kazakhstan	-DF1	Taiwan	-AB1
French Canada	-DB1	The Netherlands	-B31	Thailand	-281
France	-051	Northern Africa	-FP1	Turkey	-141
Germany	-041	Portugal	-131	Ukraine	-BD1
Greece	-151	Romania	-271	United Kingdom	-031
Hungary	-211	Russia	-251	United States	-001

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).

IMPORTANT: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Use one of these options:

- Turn on or restart the computer and quickly press f10.
- Turn on or restart the computer, quickly press esc, and then press f10 when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
  1. Perform one of these tasks:
     - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
     - Select the question mark icon in the taskbar.
  2. Under **My notebook**, select **Specifications**.
- Setup Utility (BIOS)

1. Start Setup Utility (BIOS) (see Starting Setup Utility (BIOS) on page 76).
2. Select **Main**, and then make note of the BIOS version.
3. Select **Exit**, select one of the options, and then follow the on-screen instructions.

- In Windows, press ctrl+alt+s.

To check for later BIOS versions, see Preparing for a BIOS update on page 77.

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

IMPORTANT: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the HP AC adapter provided with the computer (select products only), a replacement AC adapter provided by HP, or an AC adapter with the power rating specified on the product label. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

NOTE: If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
   - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
   - Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
   a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
   b. Follow the on-screen instructions to download your selection to the hard drive.

      Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename*.exe).

   The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

IMPORTANT: If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.

NOTE: If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to http://www.hp.com, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.

NOTE: In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to http://www.hp.com/support, select your country or region, and then follow the on-screen instructions.

IMPORTANT: HP recommends that you follow the Restoring and recovery methods on page 80 to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the Restoring and recovery methods on page 80.

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.

NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see Recovering using the HP Recovery USB flash drive on page 80.

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.

NOTE: You must be connected to the internet to access the Get Help app.

Recovering using the HP Recovery USB flash drive

You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only) on page 79.

NOTE: In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to http://www.hp.com/support, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.

NOTE: HP recommends that you follow the Restoring and recovery methods on page 80 to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
   - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press esc, and then press f9 for boot options.
   - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
     - Volume up
     - Volume down

     Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the OS
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to http://www.hp.com/support. Follow the on-screen instructions to find your product and locate your documentation.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see Downloading HP PC Hardware Diagnostics Windows on page 83.

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Complete one of the following tasks:
   - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
   - Select the question mark icon in the taskbar.

2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to http://www.hp.com/go/techcenter/pcdiags. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to http://www.hp.com/support.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 85.

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press esc.

2. Press f2.

   The BIOS searches three places for the diagnostic tools, in the following order:

   a. Connected USB flash drive

   NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see Downloading the latest HP PC Hardware Diagnostics UEFI version on page 86.

   b. Hard drive

   c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.

NOTE: You must disable Fast Boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable Fast Boot:

1. Turn on or restart the computer, and when the HP logo appears, press f10 to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press fn+esc.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.

IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.

NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.

NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only `.exe` files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps.

1. Go to http://www.hp.com/go/techcenter/pcdiags. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.

NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to http://www.hp.com/support.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to http://www.hp.com/go/techcenter/pcdiags, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to http://www.hp.com/go/techcenter/pcdiags. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.

3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.

NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to http://www.hp.com/support.

2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.

3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press f10 to enter Computer Setup.

2. Select **Advanced**, and then select **Settings**.

3. Make your customization selections.

4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	**385 mm**	15.2 in
Width (thin models)	**357.5 mm**	14.1 in
Depth (all models)	**269 mm**	10.6 in
Height (front to back) (all models)	**23.8 mm to 28.4 mm**	0.9 in to 1.1 in
Weight (lowest configuration)	**2.4 kg**	5.29 lb
Weight (lowest configuration; thin models)	**2.433 kg**	5.36 lb
Input power		
Operating voltage and current	19.5 V DC @ 2.31 A - 45 W	
	19.5 V DC @ 3.33 A - 65 W	
	19.5 V DC @ 4.62 A - 90 W	
	19.5 V DC @ 7.70 A - 150 W	
	19.5 V DC @ 10.3 A - 200 W	
Temperature		
Operating	**5°C to 35°C**	41°F to 95°F
Nonoperating	**-20°C to 60°C**	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	**-15 m to 3048 m**	-50 ft to 10,000 ft
Nonoperating	**-15 m to 12,192 m**	-50 ft to 40,000 ft

NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	**40.6 cm**	16 in
Resolution	2560 × 1600 (UHD)	
	1920 × 1200 (FHD)	
Surface treatment	Antiglare (FHD, UHD panels)	
	Brightview (OLED panel)	
Brightness	500 nits	
	400 nits	
	300 nits	
Viewing angle	UWVA	
Backlight	WLED	
	AMOLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your SSDs.

Table 10-3 SSD specifications

	256 GB*	256 GB OPAL2*	512 GB*	512 GB TLC*	1 TB/2 TB*
Dimensions					
Height	2.3 mm	2.3 mm	2.3 mm	2.3 mm	2.3 mm
Length	80 mm	80 mm	80 mm	80 mm	80 mm
Width	22 mm	22 mm	22 mm	22 mm	22 mm
Weight	< 10 g	< 10 g	< 10 g	< 10 g	< 10 g
Interface type	PCIe	PCIe	PCIe	PCIe	PCIe
Ready time, maximum (to not busy)	1.0 ms	1.0 ms	< 1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms	0.1 ms	0.1 ms
Transfer rate					
Sequential read	Up to 3100 MBps	Up to 3100 MBps	Up to 3500 MBps	Up to 6450 MBps	Up to 6400 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs

Table 10-3 SSD specifications (continued)

	256 GB*	256 GB OPAL2*	512 GB*	512 GB TLC*	1 TB/2 TB*
Sequential write	Up to 1200 MBps	Up to 1200 MBps	Up to 1600 MBps	Up to 3500 MBps	Up to 5000 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	500,118,192	1,000,215,216	1,000,215,216	1,000,215,216	1 TB: 2,000,409,264 2 TB: 4,000,797,360
Operating temperature	**0°C to 70°C** (32°F to 158°F)	**0°C to 70°C** (32°F to 158°F)	**0°C to 70°C** (32°F to 158°F)	**0°C to 70°C** (32°F to 158°F)	**0°C to 70°C** (32°F to 158°F)

*Actual accessible capacity is less. Actual drive specifications might differ slightly.

NOTE: Certain restrictions and exclusions apply. Contact support for details.

11 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a 2-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a 2-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about lithium-ion batteries and the factors that can accelerate battery swelling, see https://support.hp.com/us-en/document/ish_6824662-6824706-16.

Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact https://www.hp.com/go/contacthp to understand what battery replacement options are available.

Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

Adaptive Battery Optimizer (consumer notebooks)

Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling Adaptive Battery Optimizer on your HP notebook, see https://support.hp.com/us-en/document/ish_9908083-9908127-16.

HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see https://support.hp.com/us-en/document/ish_4449597-3519507-16.

13 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at http://www.hp.com/recycle.

Index

A

AC adapter and battery light, identifying 8
AC adapters, spare part numbers 26
action key, identifying 13
action keys
  decrease screen brightness 15
  identifying 14
  increase screen brightness 15
  keyboard backlight 15
  mute volume 15
  next track 15
  pause 15
  play 15
  previous track 15
  speaker volume 15
  switch screen image 15
  touchpad 16
  using 14
  volume
    mute 15
  Windows key lock 16
audio
  adjusting volume 15
audio board
  illustrated 23
  removal 50
  spare part number 23
  spare part numbers 50
audio-out (headphone)/audio-in (microphone) combo jack, identifying 7
audio, product description 2

B

backup, creating 79
backups 79
battery
  illustrated 23
  spare part number 23
battery swelling 94
BIOS
  determining version 76
  downloading an update 77, 78
  starting the Setup Utility 76
  updating 76
Bluetooth label 18
boot order, changing 81
bottom components 17
bottom cover
  illustrated 24
  removal 36
  spare part number 24, 36
buttons
  left touchpad 10, 11
  power 14
  right touchpad 10, 11

C

cables
  spare part numbers 26
calculator key, identifying 14
camera
  identifying 9
camera light, identifying 9
camera privacy cover, identifying 9
caps lock light 12
caring for your computer 32
cautions
  electrostatic discharge 28, 29
cleaning your computer 32
  caring for wood veneer 34
  disinfecting 33
  HP Easy Clean 32
  removing dirt and debris 32
components
  bottom 17
  display 8
  keyboard area 10
  left side 6
  lights 11
  rear 7
  right side 5
  touchpad 10
computer major components 19
computer specifications 88
connectors
  power 6, 8
control zone 10

D

decrease screen brightness action key 15
display
  specifications 88, 89
display assembly
  subcomponents 24
display back cover
  illustrated 24
  spare part number 24
display bezel
  illustrated 24
  spare part number 24
display cable
  illustrated 24
  spare part number 24
display components 8
display panel
  illustrated 24
  product description 1
  spare part number 24
dual action keys, identifying 13

E

electrostatic discharge (ESD) 28, 29
  preventing damage 28-30
esc key, identifying 13

F

fan
  illustrated 24
  removal 56
  spare part number 24, 56
fn key, identifying 13

G

graphics, product description 1
grounding methods 28-30
guidelines
  packaging 28, 34
  transporting 28, 34
  workstation 28

H

hard drive
  product description 1
  specifications 88
hardware, locating 5
HDMI port
  identifying 7
heat sink
  illustrated 24
  removal 53
  spare part number 24
  spare part numbers 53
hinge
  illustrated 24
  spare part number 24
hinge cover
  illustrated 24
  spare part number 24
HP OMEN Gaming Hub, using 16
HP PC Hardware Diagnostics UEFI
  downloading 85
  failure ID code 84
  HP Hotkey Support
    software 85
  starting 84, 85
  using 84
HP PC Hardware Diagnostics
  Windows
  accessing 82, 83
  downloading 83
  failure ID code 82
  installing 84
  using 82
HP Recovery media
  recovery 80
HP Sure Recover 81

I

illustrated parts catalog 19
IMAX Enhanced Mode,
  identifying 8
increase screen brightness action
  key 15
infrared board
  illustrated 24
  spare part number 24
Infrared board
  removal 67
  spare part number 67
integrated numeric keypad,
  identifying 14
internal microphones,
  identifying 9

J

jacks
  audio-out (headphone)/audio-in
    (microphone) 7
  network 8
  RJ-45 (network) 8

K

keyboard
  product description 3
keyboard backlight action key 15
keyboard with top cover
  spare part numbers 74
keypad, integrated numeric 14
keys
  action 13
  calculator 14
  dual action 13
  esc 13
  fn 13
  num lock 13
  play 13
  touchpad 16
  Windows 13
  Windows Copilot 13
  Windows key lock 16

L

labels
  Bluetooth 18
  regulatory 18
  serial number 18
  service 18
  wireless certification 18
  WLAN 18
left control zone, identifying 10
left side components 6
lights
  AC adapter and battery 8
  camera 9
  caps lock 12
  mute 12
  power 12
  RJ-45 (network) status 8
  touchpad 10, 12
low blue light mode 8

M

memory module
  product description 1
memory modules
  illustrated 23
  removal 46
  spare part number 23
  spare part numbers 46
microphone
  product description 2
model name 1
mute light, identifying 12
mute volume action key 15

N

network jack, identifying 8
next track action key 15
num lock key, identifying 13

O

OMEN Gaming Hub Graphics Mode,
  using 17
operating system, product
  description 4

P

packaging guidelines 28, 34
pause action key 15
pause key, identifying 13
play action key 15
play key, identifying 13
pointing device, product
  description 3
ports
  HDMI 7
  product description 2
  USB 5-7
  USB Type-C power connector
    and port with HP Sleep and
    Charge and DisplayPort
    output 6
power button, identifying 14
power connector
  identifying 6, 8
power cord
  requirements for all
    countries 91
  requirements for specific
    countries and regions 91
  set requirements 91
power cords, spare part
  numbers 26
power light, identifying 12
power requirements, product
  description 3
previous track action key 15
primary storage
  product description 1

processor
product description 1
product description
audio 2
display panel 1
graphics 1
hard drive 1
keyboard 3
memory module 1
microphone 2
operating system 4
pointing device 3
ports 2
power requirements 3
primary storage 1
processors 1
product name 1
RJ-45 (network) jack 2
security 4
serviceability 4
solid-state drive 1
video 2
wireless 2
product name 1
product name and number, computer 18

R

rear components 7
recovery 79
discs 80
media 80
USB flash drive 80
recovery media 79
creating using HP Cloud Recovery Download Tool 79
creating using Windows tools 79
regulatory information
regulatory label 18
wireless certification labels 18
Remote HP PC Hardware Diagnostics UEFI settings
customizing 87
using 86
removal and replacement
procedures 36, 49
solid-state drive 47
restoring 79
restoring and recovery methods 80
right control zone, identifying 10
right side components 5
RJ-45 (network) jack, identifying 8
RJ-45 (network) jack, product description 2
RJ-45 (network) status lights, identifying 8

S

Screw Kit, spare part number 26
security, product description 4
serial number, computer 18
service labels, locating 18
serviceability, product description 4
software
locating 5
software installed
locating 5
solid-state drive
illustrated 23
product description 1
removal and replacement 47
spare part number 23
specifications 89
spare part country codes 74
speaker
illustrated 24
removal 49
spare part number 24, 49
speaker volume action keys 15
speakers 17
special keys
identifying 12
using 12
specifications
computer 88
display 88, 89
hard drive 88
solid-state drive 89
static electricity 28, 29
support information 34
swelling or deformation of notebook battery 94
switch screen image action key 15
system board
illustrated 21, 61
removal 61
spare part number 21, 61
spare part numbers 61
system restore 80
system restore point, creating 79

T

top cover/keyboard
illustrated 20
spare part number 20
touchpad
illustrated 21
removal 51
settings 10
spare part number 21
spare part numbers 51
touchpad buttons
identifying 10, 11
touchpad cable
spare part number 26
touchpad components 10
touchpad key 16
touchpad light, identifying 10, 12
touchpad settings, adjusting 10
touchpad zone, identifying 10, 11
transporting guidelines 28, 34
traveling with the computer 18

U

USB board
illustrated 21
removal 59, 60
spare part number 21, 59, 60
USB board cable
spare part number 26
USB port, identifying 5-7
USB Type-C power connector and port with HP Sleep and Charge and DisplayPort output, identifying 6

V

vents, identifying 5-7, 18
video, product description 2
volume
adjusting 15

W

wake-on-voice 8
Windows
backup 79
recovery media 79
system restore point 79
Windows Copilot key, identifying 13
Windows key lock 16
Windows key, identifying 13
Windows tools, using 79

wireless antennas
illustrated 24
spare part number 24
wireless antennas, identifying 9
wireless certification label 18
wireless, product description 2
WLAN antennas, identifying 9
WLAN device 18
WLAN label 18
WLAN module
illustrated 23
removal 57
spare part number 23
spare part numbers 57
workstation guidelines 28