



Maintenance and Service Guide

SUMMARY

This guide provides information about spare parts, removal and replacement of parts, security, backing up, and more.

© Copyright 2021 HP Development Company, L.P.

AMD and Radeon are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. SDHC, SDXC, and microSD are trademarks or registered trademarks of SD-3C LLC. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. NVIDIA, GeForce, and Optimus are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries. Miracast is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2021

Document Part Number: M44534-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. Go to <http://www.microsoft.com> for details.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 Product description	1
2 Getting to know your computer	5
Right side	5
Left side	6
Display	7
Low blue light mode (select products only)	7
Keyboard area	8
Touchpad settings and components	8
Touchpad settings	8
Adjusting touchpad settings	8
Turning on the touchpad	8
Touchpad components	9
Lights	9
Button, vent, and fingerprint reader	10
Special keys	11
Bottom	12
Labels	13
3 Illustrated parts catalog	15
Computer major components	15
Display assembly subcomponents	18
Cables	19
Miscellaneous parts	20
4 Removal and replacement procedures preliminary requirements	22
Tools required	22
Service considerations	22
Plastic parts	22
Cables and connectors	22
Drive handling	22
Workstation guidelines	23
Electrostatic discharge information	23
Generating static electricity	24
Preventing electrostatic damage to equipment	24
Personal grounding methods and equipment	25

Grounding the work area	25
Recommended materials and equipment	25
Packaging and transporting guidelines	26
5 Removal and replacement procedures for authorized service provider parts	27
Component replacement procedures	27
Preparation for disassembly	27
Bottom cover	27
Battery	29
WLAN module	30
Solid-state drive	32
Memory modules	33
Touchpad	35
Speakers	37
USB/audio board	38
Power connector cable	39
Fan	40
Heat sink	41
System board	44
Fingerprint reader	46
Display assembly	47
Top cover with keyboard	54
6 Using Setup Utility (BIOS)	55
Starting Setup Utility (BIOS)	55
Updating Setup Utility (BIOS)	55
Determining the BIOS version	55
Preparing for a BIOS update	56
Downloading a BIOS update	56
Installing a BIOS update	56
7 Backing up, restoring, and recovering	58
Backing up information and creating recovery media	58
Using Windows tools for backing up	58
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	58
Restoring and recovering your system	58
Creating a system restore	59
Restoring and recovery methods	59
Recovering using HP Recovery media	59
Changing the computer boot order	59

Using HP Sure Recover (select products only)	60
8 Using HP PC Hardware Diagnostics	61
Using HP PC Hardware Diagnostics Windows (select products only)	61
Using an HP PC Hardware Diagnostics Windows hardware failure ID code	61
Accessing HP PC Hardware Diagnostics Windows	61
Accessing HP PC Hardware Diagnostics Windows from HP Help and Support (select products only)	61
Accessing HP PC Hardware Diagnostics Windows from Support Assistant	62
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)	62
Downloading HP PC Hardware Diagnostics Windows	62
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	62
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store	62
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	63
Installing HP PC Hardware Diagnostics Windows	63
Using HP PC Hardware Diagnostics UEFI	63
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	63
Starting HP PC Hardware Diagnostics UEFI	64
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	64
Downloading the latest HP PC Hardware Diagnostics UEFI version	64
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	64
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	65
Downloading Remote HP PC Hardware Diagnostics UEFI	65
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	65
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	65
Customizing Remote HP PC Hardware Diagnostics UEFI settings	65
9 Specifications	67
Computer specifications	67
35.6 cm (14.0 in) display specifications	67
Solid-state drive specifications	68
10 Power cord set requirements	70
Requirements for all countries	70
Requirements for specific countries and regions	70
11 Recycling	72

Index	73
--------------------	-----------

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP Pavilion 14 Laptop PC Model numbers: 14-ec0xxx
Processors	AMD® processors AMD Ryzen™ 7 5700U with Radeon™ HD Graphics (1.80 GHz base frequency, up to 4.30 GHz, 8 MB cache, 8 cores) AMD Ryzen 5 5500U with Radeon HD Graphics (2.10 GHz base frequency, up to 4.00 GHz, 8 MB cache, 6 cores) AMD Ryzen 3 5300U with Radeon HD Graphics (2.60 GHz base frequency, up to 3.80 GHz, 4 MB cache, 4 cores)
Graphics	Internal graphics AMD Radeon Graphics Hybrid graphics NVIDIA® GeForce® MX450 graphics Supports HD Decode, DX12, and HDMI Supports Optimus® Supports GPS (GPU Performance Scaling)
Display	14.0 in (35.6 cm), full high-definition (FHD) (1920 × 1080), WLED, slim-flat, narrow bezel Antiglare, Ultra Wide Viewing Angle (UWVA) 45, eDP, 250 nits FHD, antiglare, UWVA 45, eDP, 250 nits, Touch-on Panel (TOP) FHD, antiglare, UWVA 72, eDP 1.3 + PSR, 400 nits FHD, BrightView, UWVA 45, eDP, 250 nits
Memory	Memory not customer accessible or upgradeable Models with Unified Memory Architecture (UMA) graphics memory: Two SODIMM slots, dual-channel support Models with discrete graphics memory: One SODIMM slot, single-channel support DDR4-3200 Supports the following configurations: <ul style="list-style-type: none">• 16 GB (8 × 2) (for UMA models)• 16 GB (16 × 1) (for discrete models)• 8 GB (4 × 2) (for UMA models)• 8 GB (8 × 1) (for discrete models)
Primary storage	PCIe, NVMe, M.2 2280 solid-state drives

Table 1-1 Product components and their descriptions (continued)

Category	Description
	1 TB
	512 GB
	256 GB
Audio and video	B&O HD Audio
	Dual speakers
	Support for HP Audio Boost
	Supports Alexa
	Supports Cortana (far field)
	HP Wide Vision HD Camera: indicator LED, USB 2.0, HD BSI sensor, f2.0, WDR, 88° WFOV
	720p by 30 frames per second
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
Wireless	Compatible with Miracast® devices
	Supports Modern Standby (Connected)
	Wi-Fi BIOS SAR (Specific Absorption Rate)
	Intel Bluetooth Audio Offload
	Turbo Lite Wireless Local Area Network (WLAN) Symbol Virtual Terminal Program (SVTP)
	Integrated wireless options with dual antennas
	Realtek Wi-Fi 6 RTL8852AE + Bluetooth® 5.2 (802.11ax 2 × 2, multi-user, multiple input, multiple output (MU-MIMO) supported, supporting gigabit file transfer speeds)
	Realtek Wi-Fi 6 RTL8852AE-VT + Bluetooth 5.2 (802.11ax 1 × 2, MU-MIMO supported, supporting gigabit file transfer speeds)
	Integrated wireless options with single antenna
	Realtek RTL8821CE-M 802.11ac 1 × 1 Wi-Fi + Bluetooth® 4.2 (MU-MIMO supported)
Media card reader (select products only)	HP Multi-Format Digital Media Card Reader
	Supports microSD™, SDHC™, SDXC™
	Push-push insertion/removal
Ports	HDMI v2.0 + HDCP 2.2 supporting: up to 4096 × 2160 @ 60 Hz
	Audio-out (headphone)/audio-in (microphone) combo jack
	USB 3.2 Gen 2 Type-C (supports data transfer, Power Delivery 3.0, HP Sleep & Charge; DisplayPort™ 1.4 out up to 4096 × 2304 @ 60 Hz through adapter; HDMI 2.0 out up to 4096 × 2160 @ 60 Hz with HDCP 2.2 through adapter)
	USB 3.2 Gen 1 Type-A (2)
	AC Smart Pin adapter plug
Keyboard/pointing devices	Keyboard
	Full size with numeric keypad in the following colors: natural silver and cloud blue

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Backlit, island style with numeric keypad in the following colors: natural silver, cloud blue, and luminous gold
Clickpad	
	Image sensor
	Multitouch gestures enabled
	Precision touchpad support
	Support for Modern Trackpad Gestures
	Taps enabled as default
Power requirements	Battery
	3 cell, 43 Whr, lithium-polymer
	HP long life
	HP Fast Charge Technology
	Smart AC adapters (barrel type, 4.5 mm)
	65 W
	65 W, EM
	45 W
	Power cord
	C5, 1 m (3.3 ft)
Security	Supports Trusted Platform Module (fTPM) 2.0, firmware based
	Integrated fingerprint reader (select products only)
Operating system	Windows® 10 Home 64
	Windows 10 Home 64 Chinese Market CPPP
	Windows 10 Home 64 High-end Chinese Market CPPP
	Windows 10 Home 64 Plus
	Windows 10 Home 64 Plus Single Language
	Windows 10 Home 64 Plus Single Language Africa Market
	Windows 10 Home 64 Plus Single Language APAC EM PPP
	Windows 10 Home 64 Plus Single Language India Market
	Windows 10 Home 64 Plus Single Language Indonesia Market
	Windows 10 Home 64 Single Language
	Windows 10 Home 64 Single Language Africa Market
	Windows 10 Home 64 Single Language APAC EM PPP
	Windows 10 Home 64 Single Language India Market
	Windows 10 Home 64 Single Language Indonesia Market

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Windows 10 Home S 64
	Windows 10 Home S 64 Plus
	Windows 10 Pro 64
	Windows 10 Pro 64 Chinese Market
	FreeDOS 3.0
Serviceability	End user replaceable parts
	AC adapter

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Identify the components on the right side of the computer.

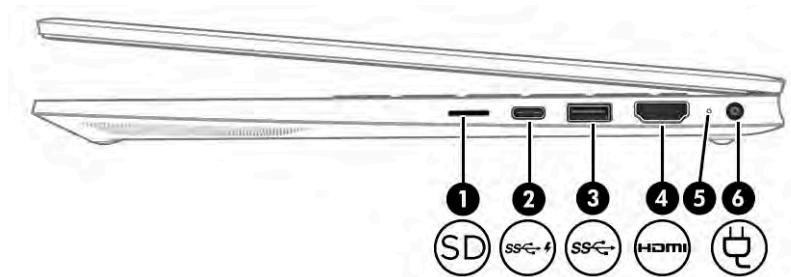


Table 2-1 Right-side components and their descriptions

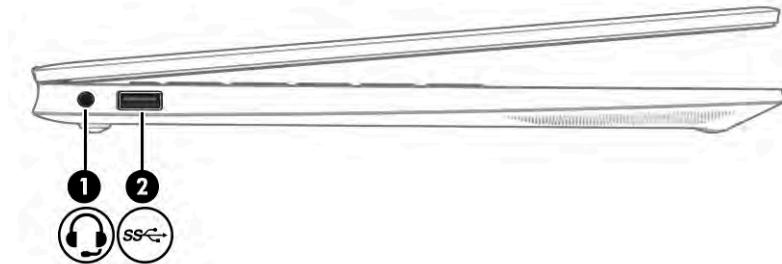
Component	Description
(1) SD	microSD™ memory card reader (select products only) Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: <ol style="list-style-type: none">1. Hold the card label-side up, with connectors facing the computer.2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: ▲ Press in on the card, and then remove it from the memory card reader.
(2) ss↔ DP	USB Type-C® power connector port, SuperSpeed port, and DisplayPort™ connector Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. – and – Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. – and – Connects a display device that has a USB Type-C connector, providing DisplayPort output.

Table 2-1 Right-side components and their descriptions (continued)

Component	Description
(3)  USB SuperSpeed port	Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(4)  HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
(5)	AC adapter and battery light
	<ul style="list-style-type: none">White: The AC adapter is connected and the battery is fully charged.Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level.Amber: The AC adapter is connected and the battery is charging.Off: The battery is not charging.
(6)  Power connector	Connects an AC adapter.

Left side

Identify the components on the left side of the computer.

**Table 2-2 Left-side components and their descriptions**

Component	Description
(1)  Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: ▲ Type HP Documentation in the taskbar search box, and then select HP Documentation .

Table 2-2 Left-side components and their descriptions (continued)

Component	Description
	<p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>
(2)  USB SuperSpeed port	<p>Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode.</p> <p>NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.</p>

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

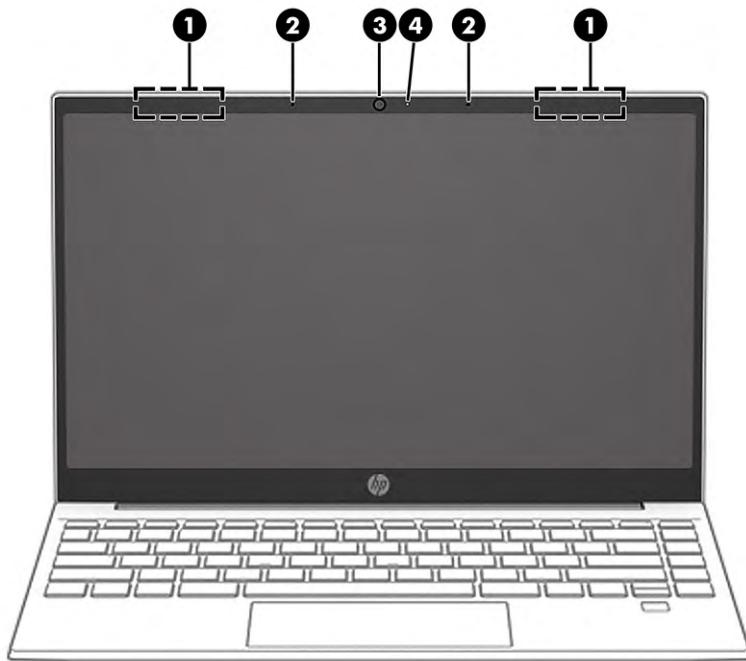


Table 2-3 Display components and their descriptions

Component	Description
(1) WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) Internal microphones (2)	Record sound.
(3) Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4) Camera light	On: The camera is in use.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- ▲ Type **HP Documentation** in the taskbar search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.

Touchpad settings and components

Learn the touchpad settings and components

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Type **touchpad settings** in the taskbar search box, and then press **enter**.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Type **touchpad settings** in the taskbar search box, and then press **enter**.
2. Using an external mouse, click the **touchpad** button.

If you are not using an external mouse, press the **Tab** key repeatedly until the pointer rests on the **touchpad** button. Then press the **spacebar** to select the button.

Touchpad components

Identify the touchpad components.

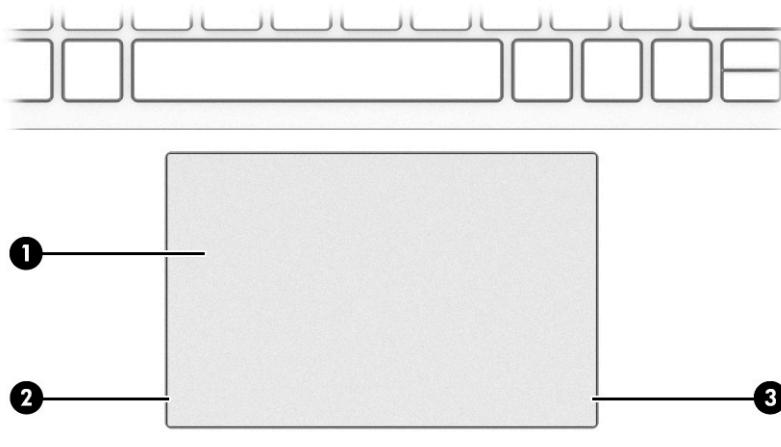


Table 2-4 Touchpad components and their descriptions

Component	Description
(1)	Touchpad zone
(2)	Left control zone
(3)	Right control zone

Lights

Identify the lights on the computer.


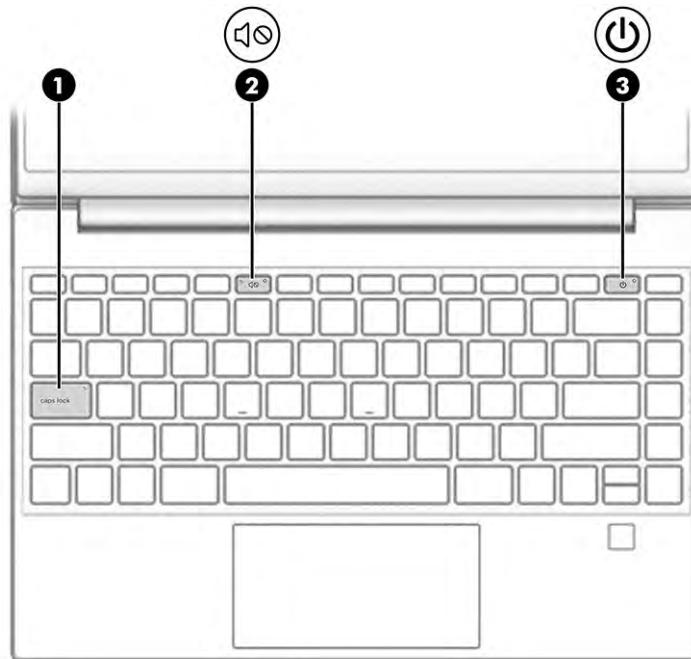


Table 2-5 Lights and their descriptions

Component	Description	
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	Mute light	<ul style="list-style-type: none">On: Computer sound is off.Off: Computer sound is on.
(3)	Power light	<ul style="list-style-type: none">On: The computer is on.Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components.Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.

Button, vent, and fingerprint reader

Identify the computer button, vent and fingerprint reader.

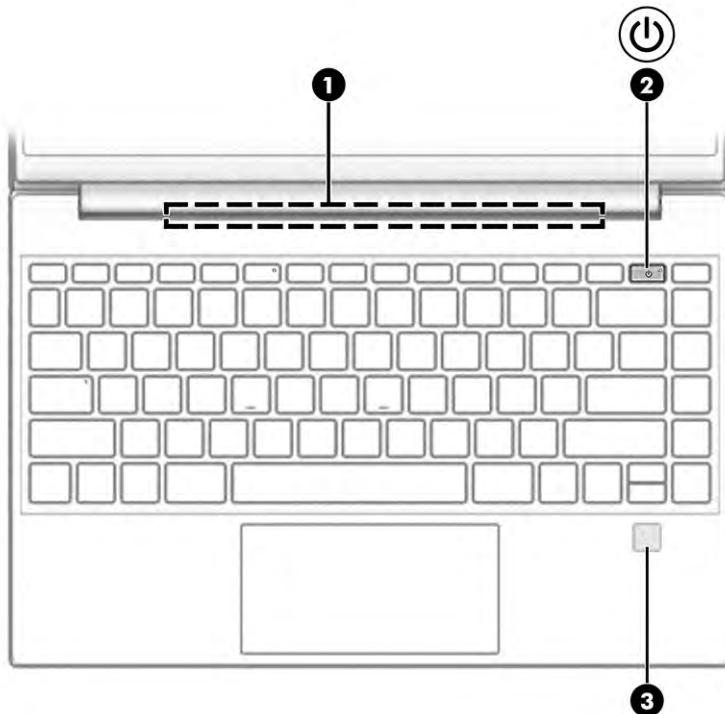

Fingerprint readers, which enable a fingerprint logon, can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

IMPORTANT: To verify that your computer supports fingerprint reader sign-in, type **Sign-in options** in the taskbar search box and follow the on-screen instructions. If **Fingerprint reader** is not listed as an option, then your computer does not include a fingerprint reader.

Table 2-6 Button, vent, and fingerprint reader and their descriptions

Component	Description
(1) Vent	<p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(2)  Power button	<ul style="list-style-type: none">When the computer is off, press the button briefly to turn on the computer.When the computer is on, press the button briefly to initiate Sleep.When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only).When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options:</p> <ul style="list-style-type: none">Right-click the Power icon  , and then select Power Options.
(3) Fingerprint reader (select products only)	<p>Allows a fingerprint logon to Windows, instead of a password logon.</p> <p>Swipe down across the fingerprint reader.</p> <p>IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.</p>

Special keys

Identify the special keys.

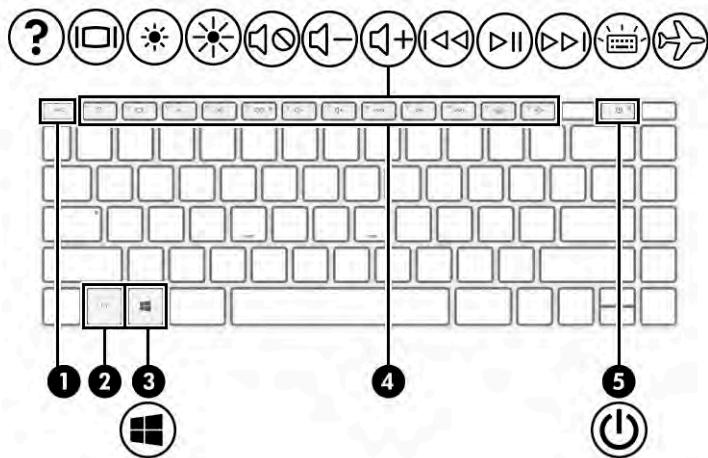


Table 2-7 Special keys and their descriptions

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes specific functions when pressed in combination with another key.
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys.
(5) 	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options:</p> <p>▲ Right-click the Power icon  , and then select Power Options.</p>

Bottom

Identify the bottom components.

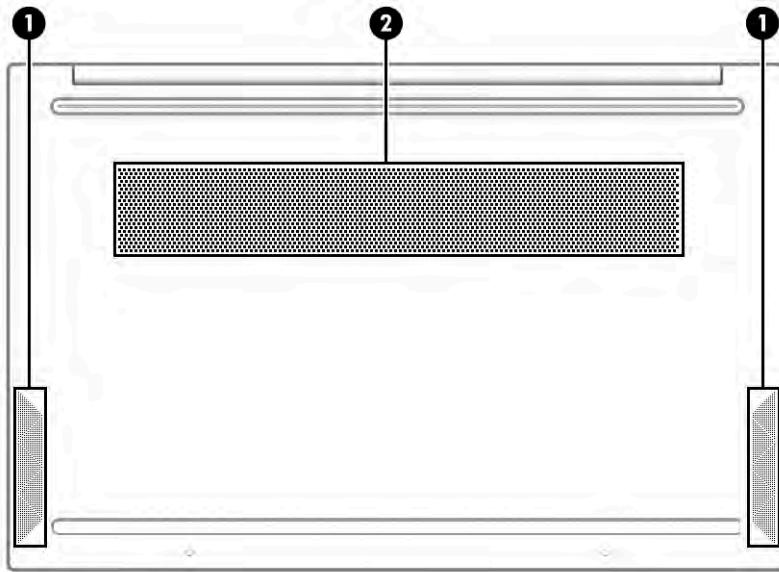


Table 2-8 Bottom components and their descriptions

Component	Description
(1) Speakers (2)	Produce sound.
(2) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.



IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the following examples. Refer to the illustration that most closely matches the service label on your computer.

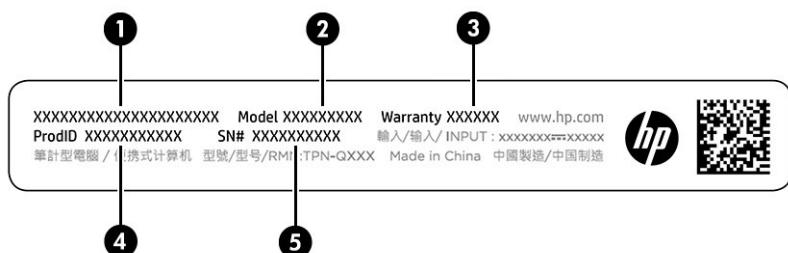


Table 2-9 Service label components

Component
(1) HP product name
(2) Model number
(3) Warranty period
(4) Product ID
(5) Serial number

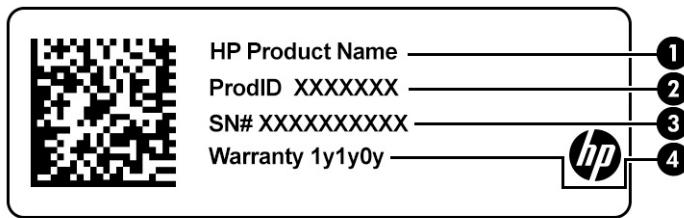


Table 2-10 Service label components

Component
(1) HP product name
(2) Product ID
(3) Serial number
(4) Warranty period

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this table to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

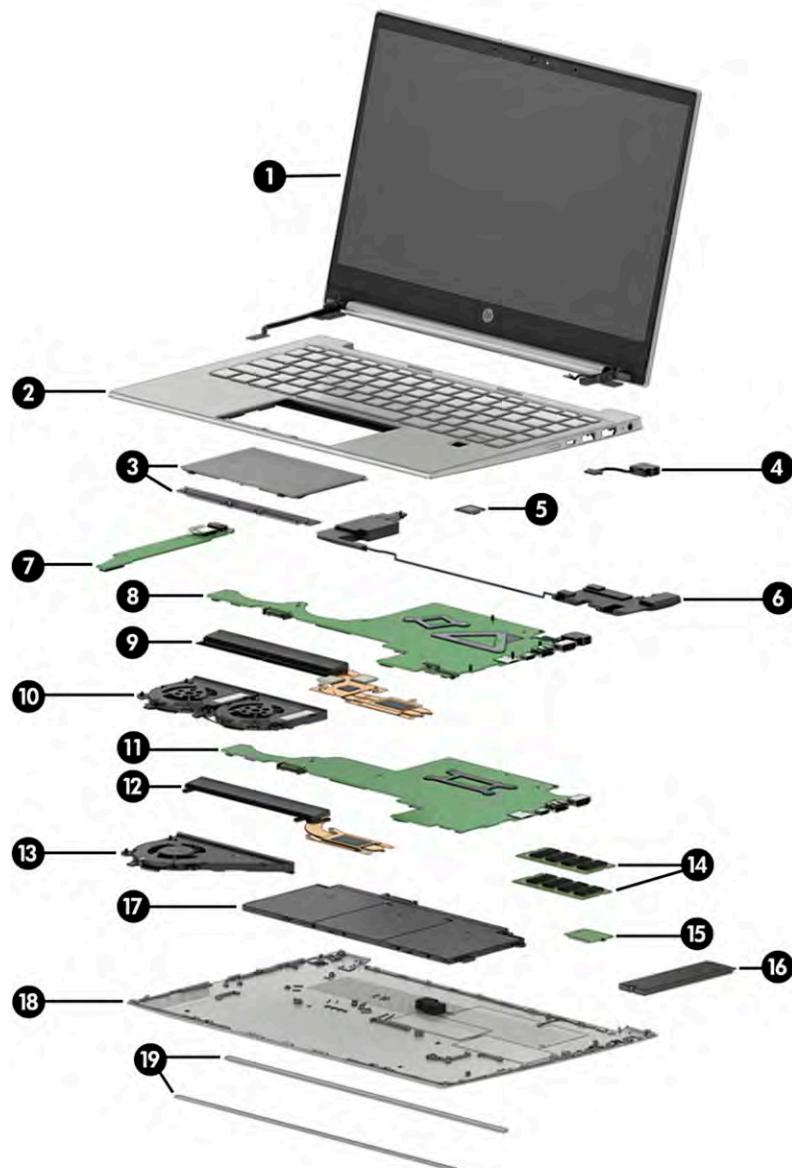


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display assemblies are offered as spare parts only at a subcomponent level. For more information, see Display assembly subcomponents on page 18 .	not available as a spare part
(2)	Top cover with keyboard For a detailed list of country codes, see Top cover with keyboard on page 54 . NOTE: The top cover rubber kit is available for models with UMA graphics only as spare part number M39507-001.	
	For use in models without a fingerprint reader	
	• Natural silver, not backlit	M75245-xx1
	• Natural silver, backlit	M75246-xx1
	For use in models with a fingerprint reader	
	• Natural silver, not backlit	M75247-xx1
	• Natural silver, backlit	M75248-xx1
	• Luminous gold, backlit	M75249-xx1
	• Fog blue, not backlit	M52711-xx1
	• Fog blue, backlit	M52712-xx1
(3)	Touchpad (does not include bracket)	
	NOTE: The touchpad cable is available using spare part number M16619-001.	
	Natural silver	M16623-001
	Luminous gold	M16626-001
	Cloud blue	M52696-001
(4)	Power connector (DC-in) cable	808155-021
(5)	Fingerprint reader NOTE: The fingerprint reader cable is available using spare part number M16618-001.	
	Natural silver	M08880-001
	Warm gold	M08881-001
	Fog blue	M08878-001
(6)	Speakers (left and right)	M16640-001
(7)	USB/audio board NOTE: The USB/audio board cable is available using spare part number M16620-001.	M52695-001
(8)	System board (includes processor; for use in models with discrete graphics memory) All system boards use the following part numbers: xxxxxx-001: Non-Windows operating system xxxxxx-601: Windows 10 operating system	M52708-xx1

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	AMD Ryzen5 5500 processor and NVIDIA GeForce MX450 graphics	M52707-xx1
(9)	Heat sink (for use in models with discrete graphics memory; includes replacement thermal material)	M52709-001
(10)	Fans (for use in models with discrete graphics memory)	M16664-001
(11)	System board (includes processor; for use in models with UMA graphics memory) All system boards use the following part numbers: xxxxxx-001: Non-Windows operating system xxxxxx-601: Windows 10 operating system	
	AMD Ryzen7 5700 processor and UMA graphics memory	M52706-xx1
	AMD Ryzen5 5500 processor and UMA graphics memory	M52705-xx1
	AMD Ryzen3 5300 processor and UMA graphics memory	M52704-xx1
(12)	Heat sink (for use in models with UMA graphics memory; includes replacement thermal material)	M52710-001
(13)	Fan (for use in models with UMA graphics memory)	M16665-001
(14)	Memory modules (DDR4-3200)	
	16 GB	L67710-005
	8 GB	L46598-005
	4 GB	L83673-005
(15)	WLAN module	
	Realtek RTL8821CE-M 802.11ac 1 × 1 Wi-Fi + Bluetooth 4.2	M09870-005
	Realtek Wi-Fi 6 RTL8852AE + Bluetooth 5.2	M34027-005
	Realtek Wi-Fi 6 RTL8852AE-VT + Bluetooth 5.2	M34029-005
(16)	Solid-state drive	
	NOTE: The solid-state drive thermal pad is available as spare part number M52722-001. For use only in models with UMA graphics memory.	
	1 TB, PCIe	L85370-005
	512 GB, PCIe	L85364-005
	256 GB, PCIe	L85354-005
(17)	Battery (3 cell, 43 Whr)	M01144-005
(18)	Bottom cover	
	Natural silver	M52720-001
	Luminous gold	M52721-001
	Cloud blue	M52694-001
(19)	Rubber Foot Kit	
	Natural silver	M16635-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Luminous gold	M16638-001
	Cloud blue	M52702-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

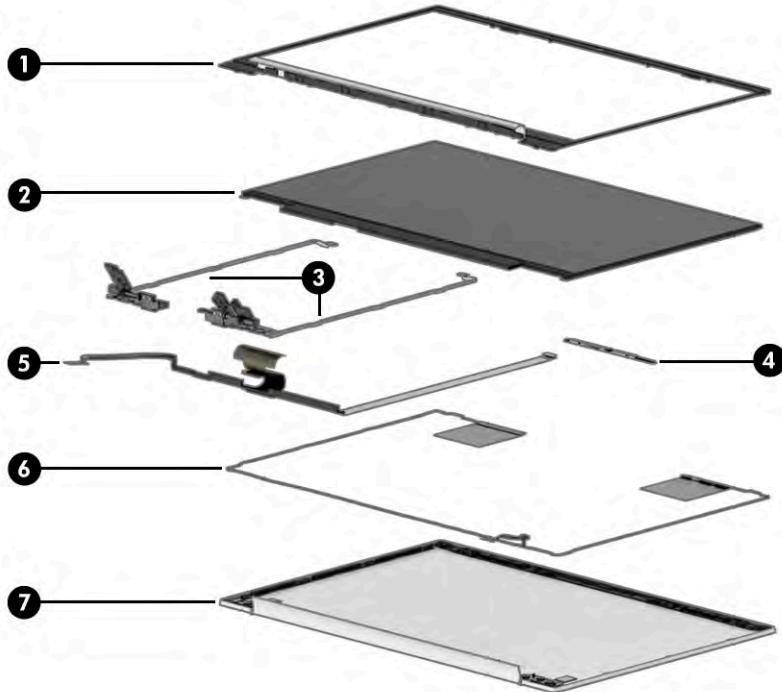


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display bezel	
	Ceramic white	M16611-001
	Natural silver	M16612-001
	Warm gold	M16615-001
	Fog blue	M52693-001
(2)	Display panel (includes display panel adhesive and display bezel adhesive)	
	BrightView, UWVA, FHD, 250 nits	M52701-001
	Antiglare, UWVA, FHD, 250 nits	M52698-001
	Antiglare, UWVA, FHD, Touch-On Panel (TOP), 250 nits	M52699-001
	Antiglare, UWVA, FHD, 400 nits	M52700-001
(3)	Hinges (includes left and right display hinges; includes display bezel adhesive)	M16622-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
(4)	Camera module (includes display panel adhesive kit)	M24409-001
(5)	Display panel cable (includes display panel adhesive and display bezel adhesive) For use with nontouch panels	M16617-001
	For use with touch screen panels	M16616-001
(6)	Wireless antenna kit (dual) (includes display panel adhesive kit)	M16601-001
	Wireless antenna kit (single) (includes display panel adhesive kit; not illustrated)	M16600-001
(7)	Display back cover (includes display bezel adhesive) Ceramic white	M16602-001
	Natural silver	M16603-001
	Warm gold	M16606-001
	Fog blue	M52692-001
	Adhesive tape kit (includes display panel adhesive and display bezel adhesive; not illustrated)	M17753-001

Cables

To identify the cables, use this illustration and table.

**Table 3-3** Cable descriptions and part numbers

Item	Component	Spare part number
(1)	USB board cable	M16620-001
(2)	Touchpad cable	M16619-001
(3)	Display/camera cable Touch	M16616-001
	Nontouch	M16617-001
(4)	Fingerprint reader board cable	M16618-001
(5)	Power connector cable	808155-021

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-4 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapters	
65 W HP Smart AC adapter (non-PFC, EM, RC, 4.5 mm)	913691-850
45 W HP Smart AC adapter (non-PFC, RC, 4.5 mm, non-slim)	741727-001
65 W HP Smart AC adapter (non-PFC, 3 pin, 4.5 mm)	710412-001
Screw Kit	M52703-001
Top cover rubber kit	M39507-001
Solid-state drive thermal pad	M52722-001
WLAN module protective shielding	M14330-001
Memory module protective shielding	M34031-001
Display rear cover adhesive tapes	M17753-001
HP HDMI-to-VGA adapter	701943-001
HP USB-to-Gigabit RJ-45 adapter	829941-001
HP USB-C-to-VGA adapter	831751-001
HP USB-C-to-RJ-45 adapter	855560-001
HP USB Type-C-to-USB Type-A	833960-001
Hub, HP USB Type-C-to-USB Type-A	916838-001
Hub, HP USB-C-to-multiport	919666-001
Hub, HP Elite USB-C multiport	L39572-001
External DVD±RW drive	747080-001
Power cords (C5, 1.0 m)	
Australia	L19358-001
Denmark	L19360-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-001
India	L19363-001
Israel	L19362-001
North America	L19367-001
People's Republic of China	L19368-001
South Africa	L19369-001
South Korea	L19366-001
Switzerland	L19370-001
Taiwan	L19372-001

Table 3-4 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Thailand	L19371-001
United Kingdom	L19373-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described [Personal grounding methods and equipment on page 25](#).

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V	
Walking across vinyl floor	3,000 V	5,000 V	12,000 V	
Motions of bench worker	400 V	800 V	6,000 V	
Removing DIPs (dual in-line packages) from plastic tube	400 V	700 V	2,000 V	
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V	
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V	
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V	
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V	
Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.				



NOTE: As little as 700 V can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity. The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components.

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.

- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1 \text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- **Heel straps/Toe straps/Boot straps** can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1 \text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids

- Conductive foam
- Conductive tabletop workstations with ground cord of $1 \text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1 \text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

5 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Components described in this chapter should be accessed only by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use these procedures.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

You must remove, replace, or loosen as many as 50 screws when you service the parts described in this chapter. Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures.

See [Removal and replacement procedures preliminary requirements on page 22](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover and rubber feet, use this procedure and illustration.


Table 5-1 Bottom cover and rubber feet descriptions and part numbers

Description	Spare part number
Bottom cover, natural silver	M52720-001
Bottom cover, luminous gold	M52721-001
Bottom cover, cloud blue	M52694-001
Rubber feet, natural silver	M16635-001
Rubber feet, luminous gold	M16638-001
Rubber feet, cloud blue	M52702-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).

Remove the bottom cover:

1. Remove the two rubber feet (1).
2. Remove the four Phillips M2.5 × 6.0 screws (2) from under the feet and the two Phillips M2.0 × 5.0 screws (3) along the bottom edge of the bottom cover.

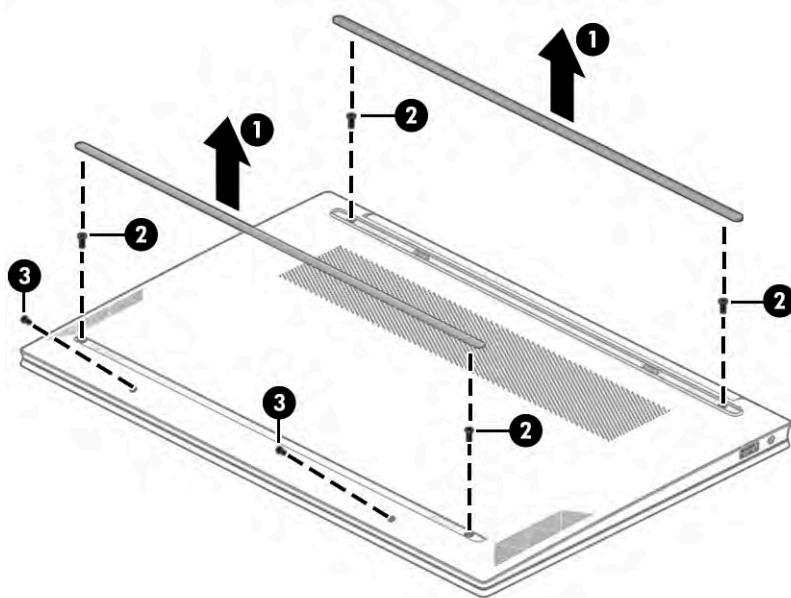

3. Starting near the hinges, use a plastic tool (1) to release the bottom cover from the computer (2).

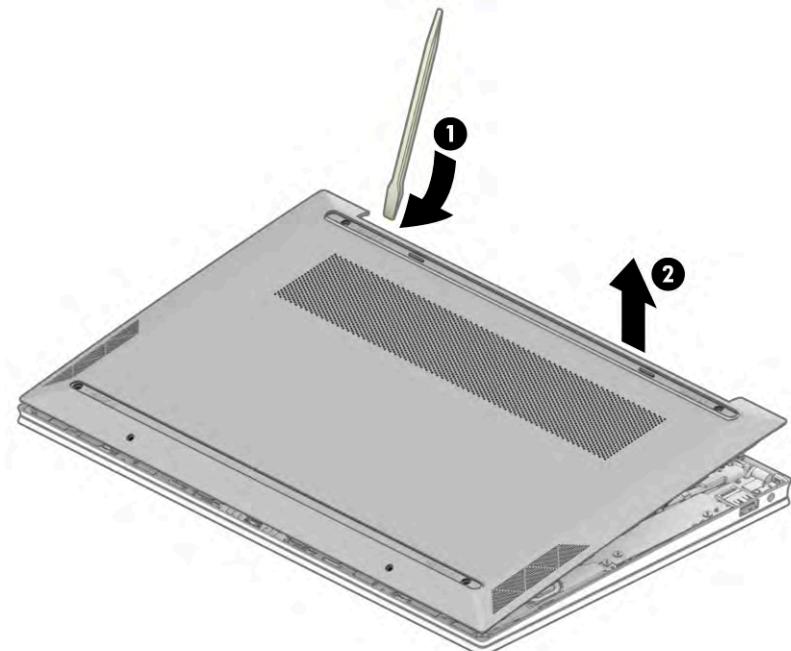

To replace the bottom cover, reverse the removal procedures.

Battery

To remove the battery, use this procedure and illustration.

Table 5-2 Battery description and part number

Description	Spare part number
3 cell, 43 Whr, Li-ion battery	M01144-005

 **WARNING!** To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. They can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).


 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.


Remove the battery:

1. Remove the four Phillips M2.0 × 4.0 screws **(1)** that secure the battery to the computer.

2. Remove the tape (2), and then remove the speaker cable from the clips in the bottom of the battery (3).

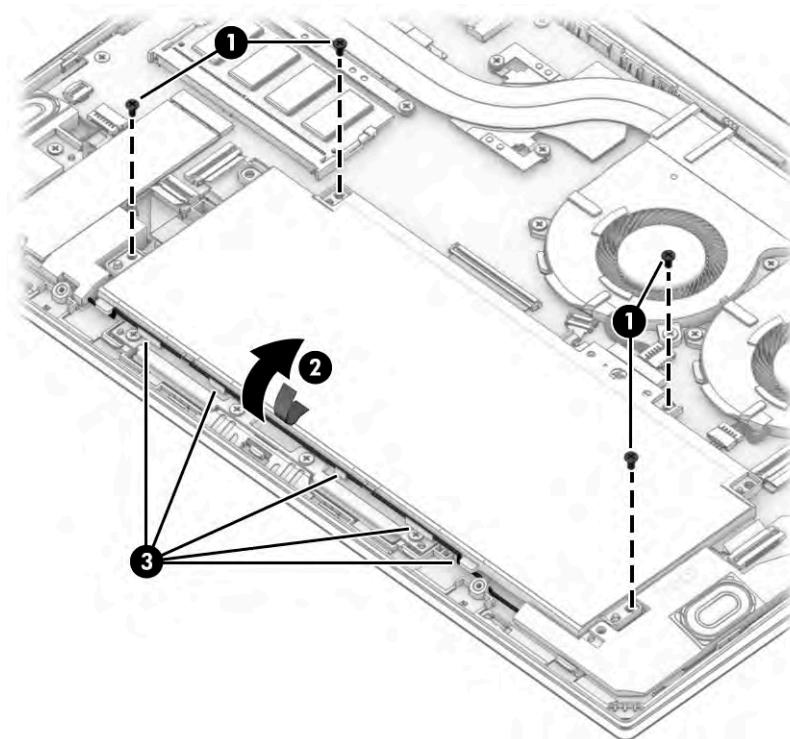

3. Lift the bottom of the battery upward (1), and then remove it from the computer (2).

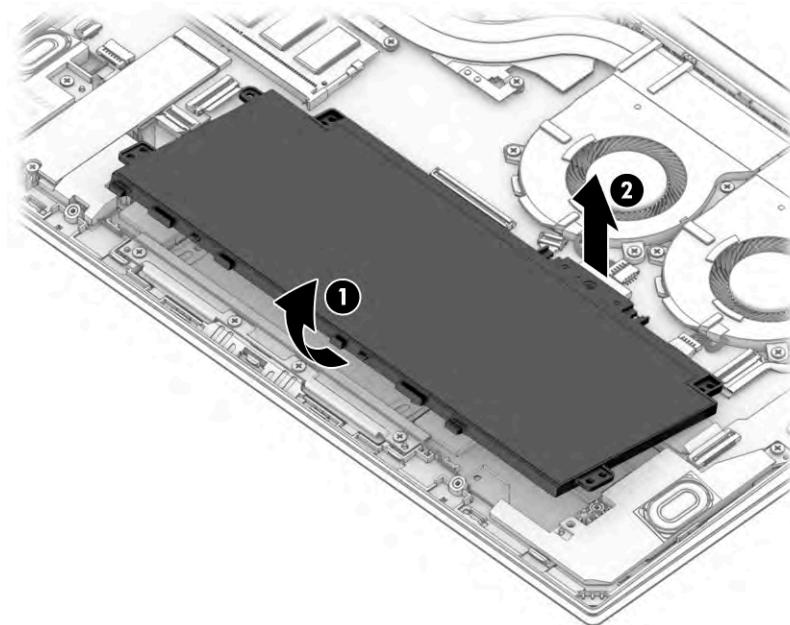

To replace the battery, reverse the removal procedures.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-3 WLAN module descriptions and part numbers

Description	Spare part number
Realtek RTL8821CE-M 802.11ac 1 × 1 Wi-Fi + Bluetooth 4.2	M09870-005
Realtek Wi-Fi 6 RTL8852AE + Bluetooth 5.2	M34027-005
Realtek Wi-Fi 6 RTL8852AE-VT + Bluetooth 5.2	M34029-005
WLAN module protective shielding	M14330-001

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).


Remove the WLAN module:

1. Carefully disconnect the antenna cables from the module **(1)**.
2. Remove the Phillips M2.0 × 2.5 screw **(2)**, and then remove the WLAN module **(3)**.

 **NOTE:** Models have either one or two WLAN antennas. On models with two antennas, the #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

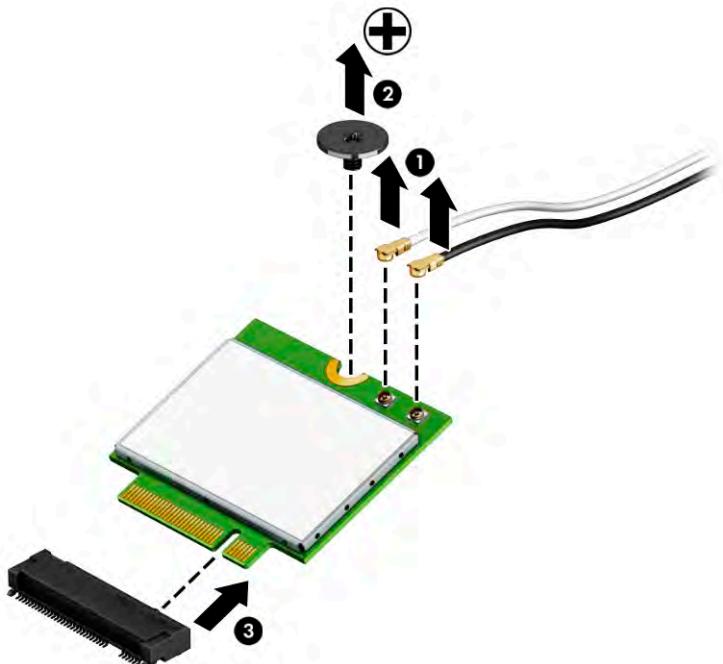

3. If the WLAN antenna is not connected to the terminal on the WLAN module, you must install a protective sleeve on the antenna connector, as shown in the following illustration.

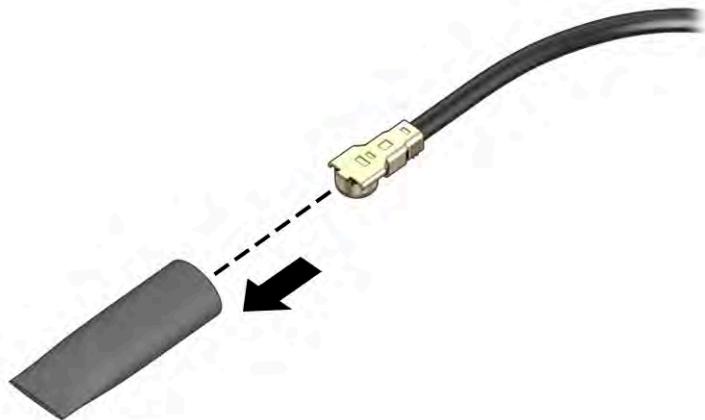

Reverse this procedure to install the WLAN module.

Solid-state drive

To remove the solid-state drive, use this procedure and illustration.

Table 5-4 Solid-state drive descriptions and part numbers

Description	Spare part number
1 TB, PCIe	L85370-005
512 GB, PCIe	L85364-005
256 GB, PCIe	L85354-005
Solid-state drive thermal pad (for use only in models with UMA graphics memory)	M52722-001


Before removing the solid-state drive, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the solid-state drive:

1. Remove the thermal pad from the top of the drive **(1)**.
2. Remove the Phillips M2.0 × 2.5 screw **(2)** that secures the drive to the computer.

3. Pull the drive away from the socket to remove it (3).

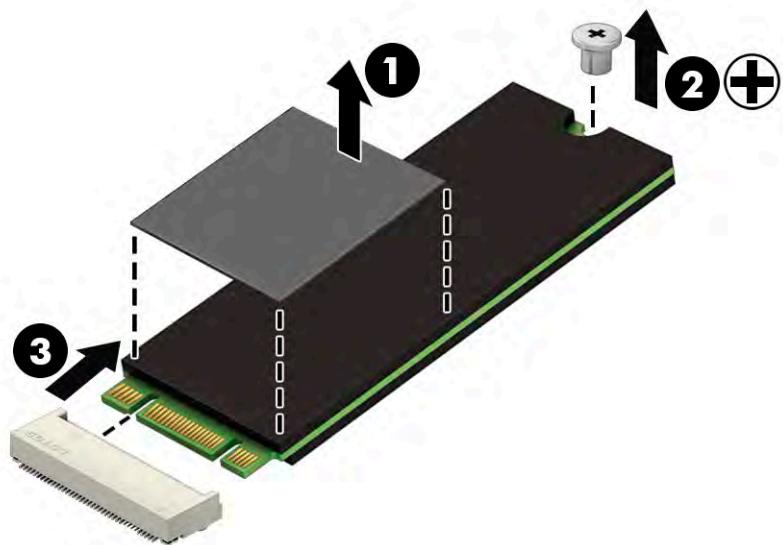

To install the solid-state drive, reverse the removal procedures.



NOTE: Solid-state drives are designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 5-5 Memory module descriptions and part numbers


Description	Spare part number
Memory module, 16 GB (DDR4-3200)	L67710-005
Memory module, 8 GB (DDR4-3200)	L46598-005
Memory module, 4 GB (DDR4-3200)	L83673-005
Memory module protective shielding	M34031-001

Before removing the memory, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).


If you are replacing a memory module, remove the existing memory module:

1. Lift the protective cover from the module.

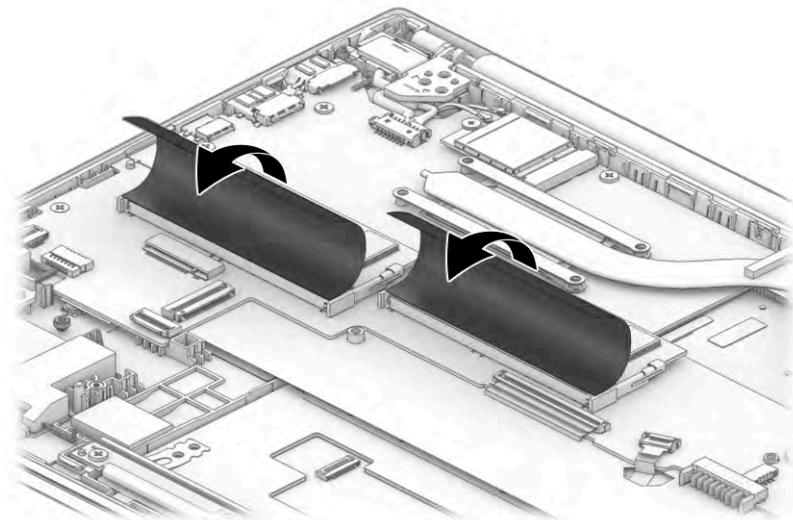

2. Spread the two retention clips outward **(1)** until the memory module tilts up at a 45° angle, and then remove the module **(2)**. Use the same procedure to remove all memory modules.

IMPORTANT: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

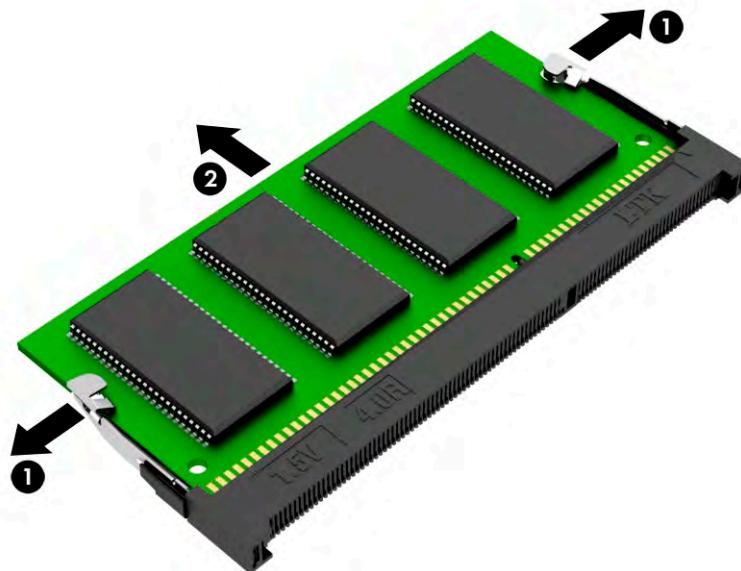


To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:

1. Align the notched edge of the module with the tab in the slot **(1)**, and then press the module into the slot at an angle until it is seated **(2)**.

2. Press down on the module until the side retention clips snap into place (3).

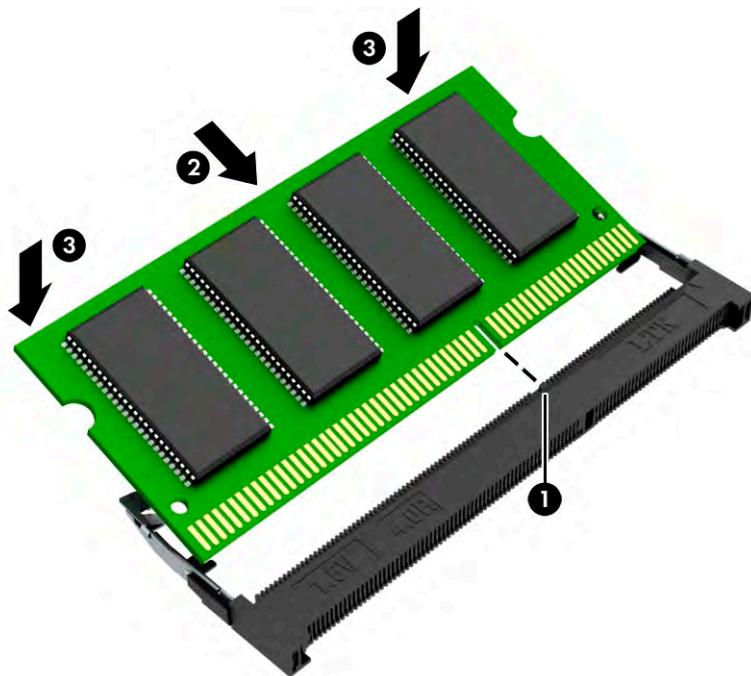

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 5-6 Touchpad description and part number


Description	Spare part number
Touchpad, natural silver	M16623-001
Touchpad, luminous gold	M16626-001
Touchpad, cloud blue	M52696-001
Touchpad cable	M16619-001

Before removing the touchpad, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the touchpad:

1. Remove the four Phillips M2.0 × 2.0 screws (1) from the touchpad bracket, and then remove the bracket from the computer (2).

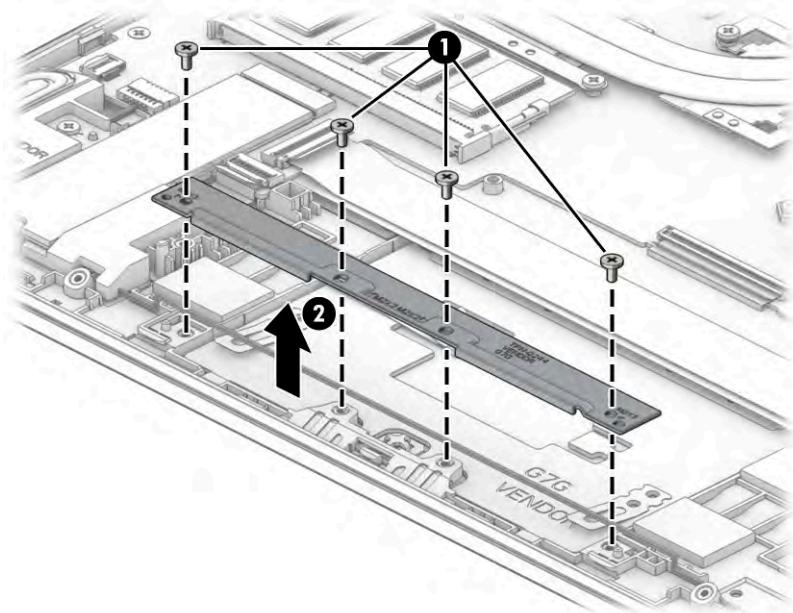


2. Disconnect the touchpad cable from the ZIF connector on the touchpad **(1)**.
3. Disconnect both ends of the USB/audio board cable **(2)**. The cable is secured to the touchpad with adhesive **(3)**.

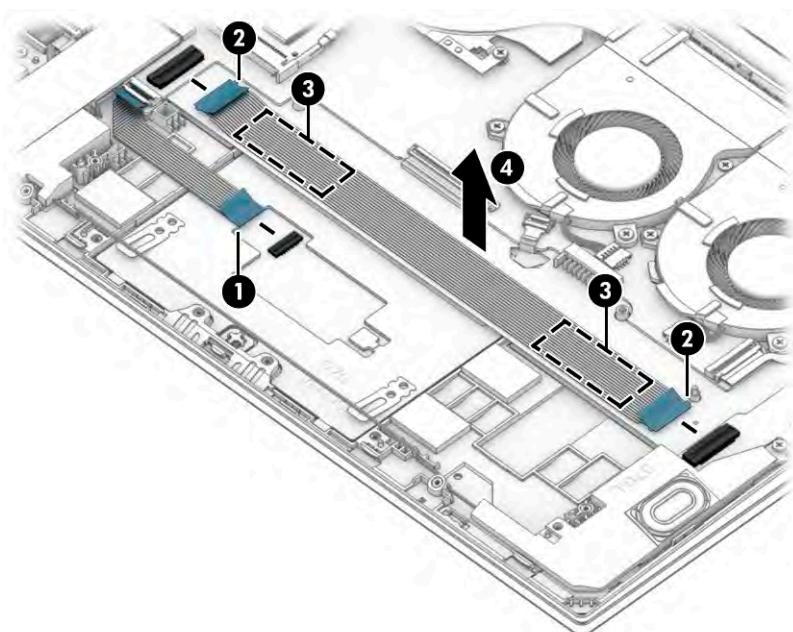

4. Lift the shielding from the top of the touchpad **(1)**.
5. Remove the three broad head Phillips M2.0 x 2.0 screws **(2)** from the touchpad.

6. Lift the top of the touchpad up (3), and then pull it away from the bottom of the computer to remove it (4).

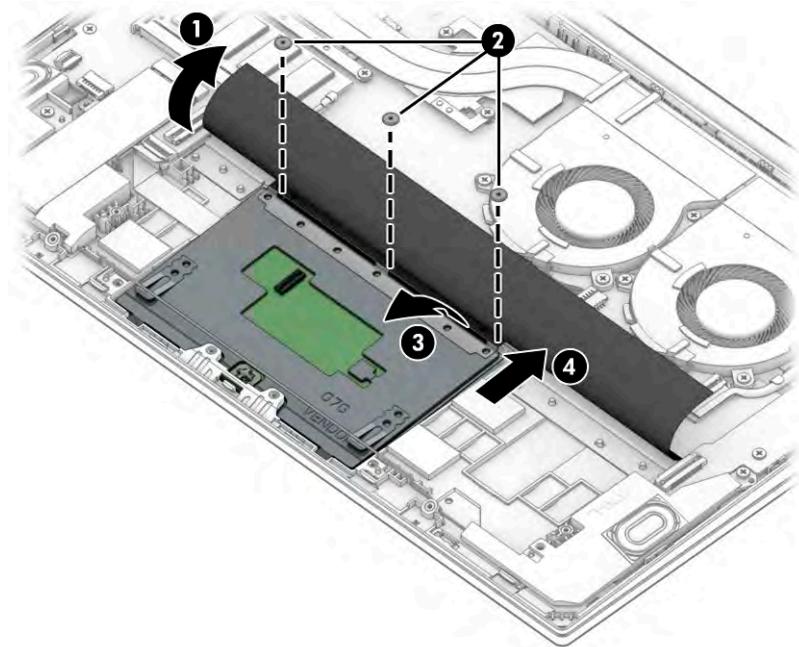

Reverse this procedure to install the touchpad.

Speakers

To remove the speakers, use this procedure and illustration.

Table 5-7 Speaker description and part number

Description	Spare part number
Speaker Kit	M16640-001


Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the solid-state drive (see [Solid-state drive on page 32](#)).

Remove the speakers:

1. Disconnect the speaker cable from the system board (1).
2. Remove the Phillips M2.0 × 3.0 screw from each speaker (2).

3. Remove the speakers from the computer (3).

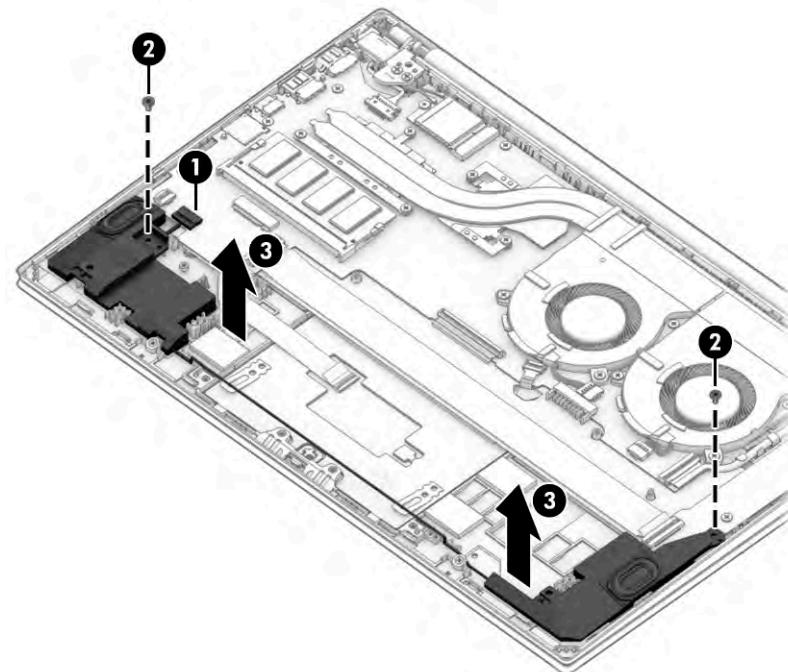

Reverse this procedure to install the speakers.

USB/audio board

To remove the USB/audio board, use this procedure and illustration.

Table 5-8 USB/audio board description and part number

Description	Spare part number
USB/audio board	M52695-001
USB/audio board cable	M16620-001


Before removing the USB/audio board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the left speaker (see [Speakers on page 37](#)).

Remove the USB/audio board:

1. Disconnect the cable from the ZIF connector on the board (1).
2. Remove the two Phillips M2.0 x 3.0 screws (2) that secure the board to the computer.

3. Remove the board from the computer (3).

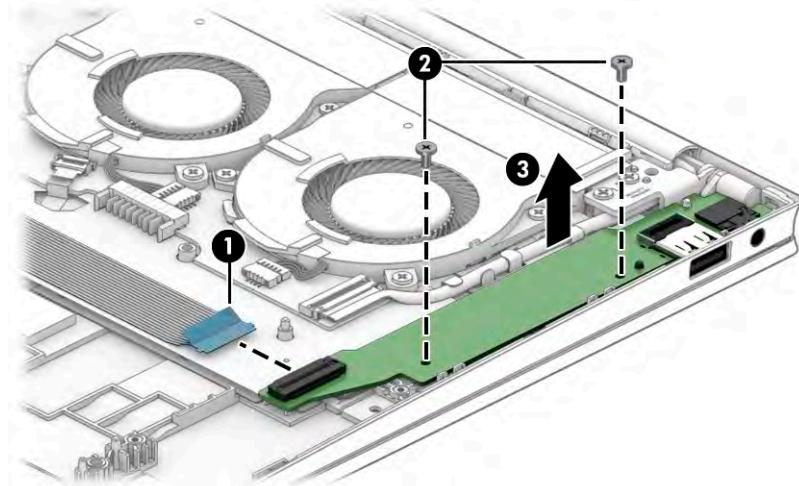

Reverse this procedure to install the USB/audio board.

Power connector cable

To remove the power connector cable, use this procedure and illustration.

Table 5-9 Power connector cable description and part number

Description	Spare part number
Power connector cable	808155-021


Before removing the power connector cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the power connector cable:

1. Remove the two Phillips M2.5 x 6.0 screws (1) from the right hinge.
2. Rotate the hinge off the power connector (2).
3. Disconnect the power connector cable from the system board (3).
4. Release the cable from the retention clip (4).

5. Remove the power connector cable from the computer (5).

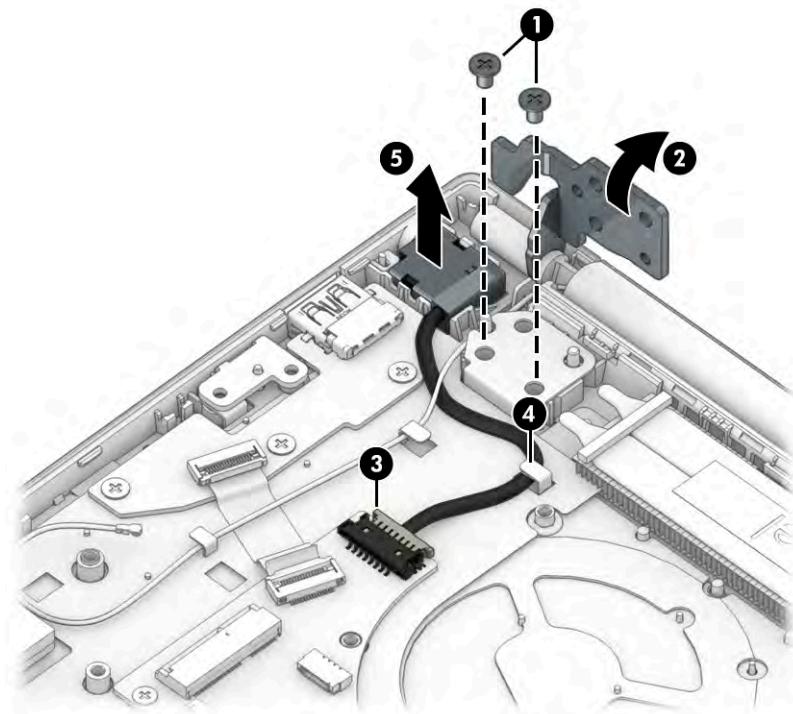

Reverse this procedure to install the power connector cable.

Fan

To remove the fan, use this procedure and illustration.

Table 5-10 Fan description and part number

Description	Spare part number
Fan for use in models with discrete graphics memory	M16664-001
Fan for use in models with UMA graphics memory	M16665-001


Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the fan (UMA models):


1. Disconnect the fan cable from the system board (1).
2. Remove the three Phillips M2.0 x 3.0 screws (2) that secure the fan to the computer.

3. Remove the fan from the computer (3).

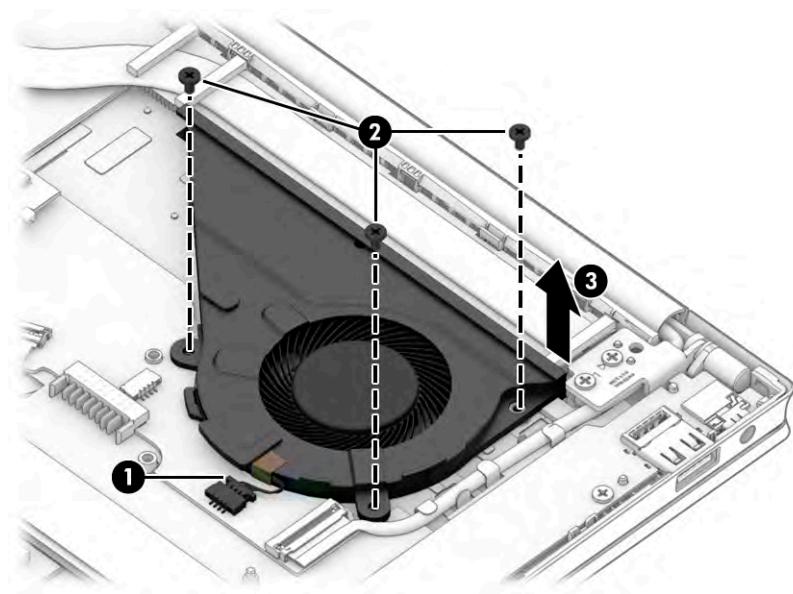

Remove the fan (discrete models):

1. Disconnect the fan cables from the system board (1).
2. Remove the three Phillips M2.0 x 3.0 screws (2) that secure each fan to the computer.
3. Remove the fans from the computer (3).

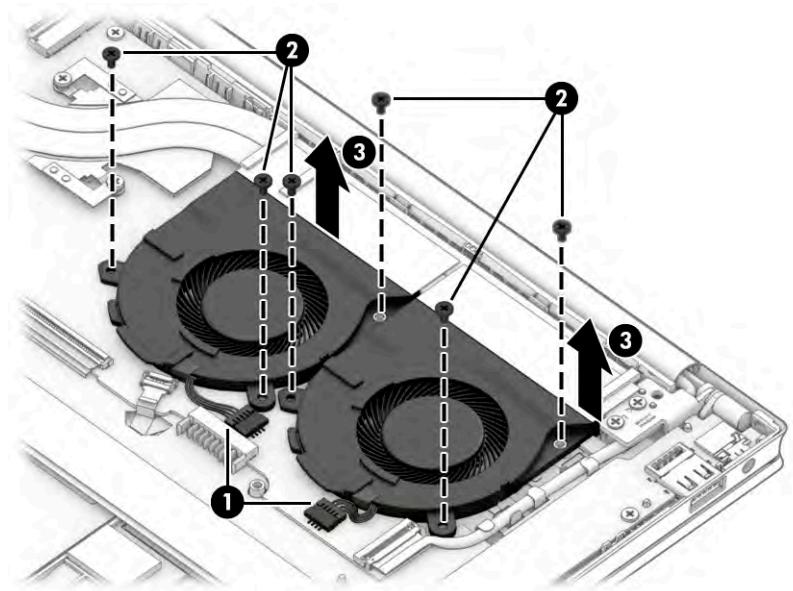

Reverse this procedure to install the fan.

Heat sink

To remove the heat sink, use these procedures and illustrations.

Table 5-11 Heat sink descriptions and part numbers


Description	Spare part number
Heat sink for use in models with discrete graphics memory	M52709-001
Heat sink for use in models with UMA graphics memory	M52710-001

Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the heat sink (UMA models):

1. In the order indicated on the heat sink, remove the four Phillips M2.0 × 2.0 screws **(1)** that secure the heat sink to the system board.
2. Remove the heat sink **(2)**.

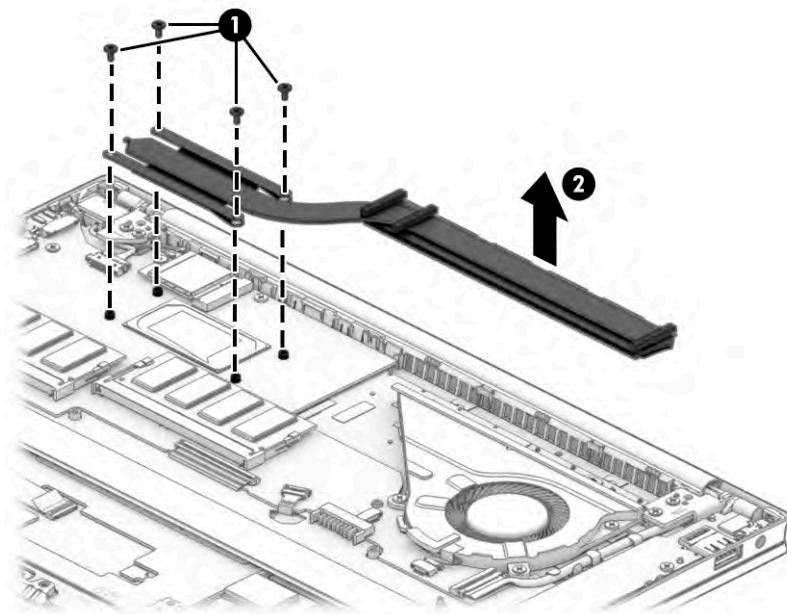


3. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

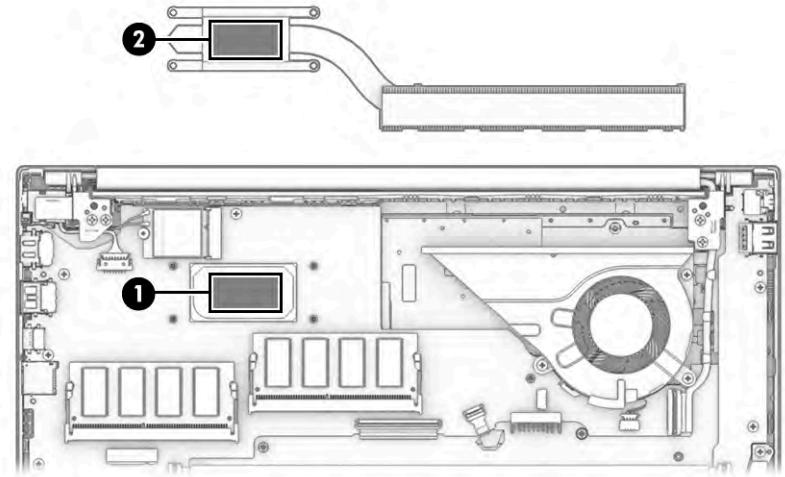

Remove the heat sink (discrete models):


1. In the order indicated on the heat sink, remove the five Phillips M2.0 × 2.0 screws **(1)** that secure the heat sink to the system board.
2. Remove the heat sink **(2)**.

 **NOTE:** Heat sink appearance may vary.

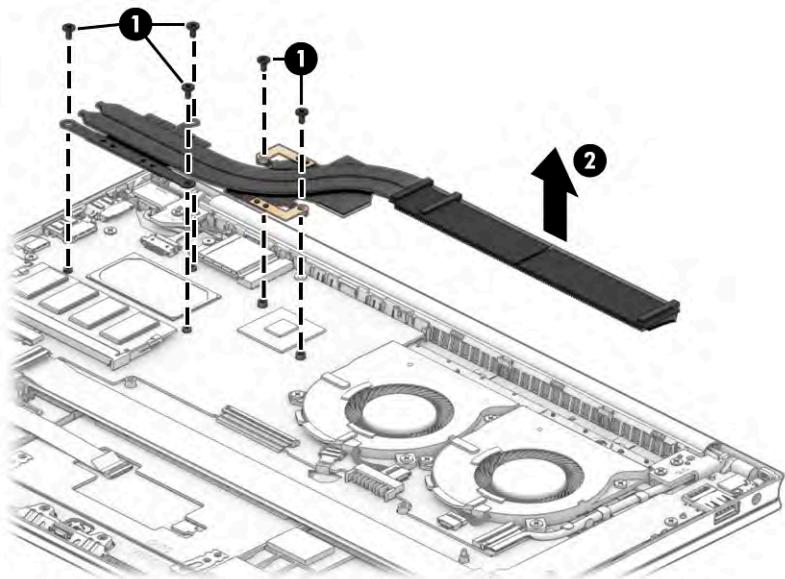

3. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

Thermal paste is used on two areas of the system board (1) (3) and associated locations on the heat sink (2) (4).

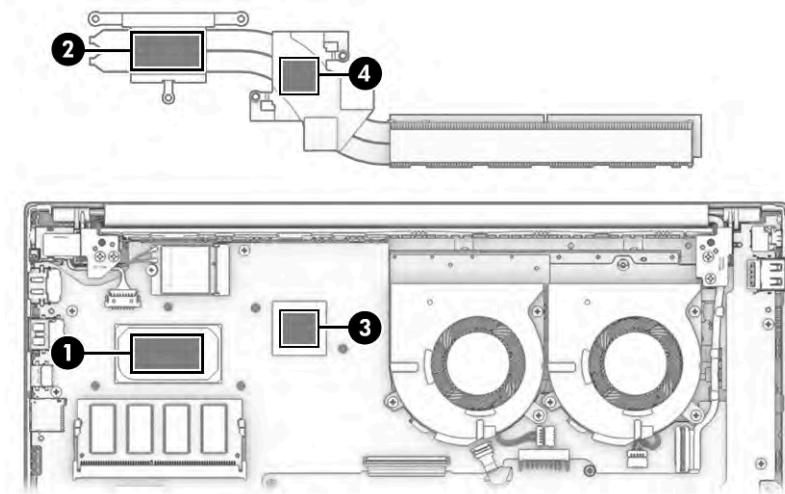

Reverse this procedure to install the heat sink.

System board

To remove the system board, use these procedures and illustrations.

Table 5-12 System board descriptions and part numbers

Description	Spare part number
System board (includes processor):	
All system boards use the following part numbers:	
xxxxxx-001: Non-Windows operating system	
xxxxxx-601: Windows 10 operating system	
AMD Ryzen7 5700 processor and NVIDIA GeForce MX450 graphics	M52708-xx1
AMD Ryzen5 5500 processor and NVIDIA GeForce MX450 graphics	M52707-xx1
AMD Ryzen7 5700 processor and UMA graphics memory	M52706-xx1
AMD Ryzen5 5500 processor and UMA graphics memory	M52705-xx1
AMD Ryzen3 5300 processor and UMA graphics memory	M52704-xx1

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the fan (see [Fan on page 40](#)).


When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- Memory modules (see [Memory modules on page 33](#)).
- WLAN module (see [WLAN module on page 30](#)).
- Solid-state drive (see [Solid-state drive on page 32](#)).
- Heat sink (see [Heat sink on page 41](#)).

Remove the system board:


1. Disconnect the following cables from the system board:

- Power connector (DC-in) board cable **(1)**
- WLAN antennas from the WLAN module **(2)**
- Display cable (ZIF) **(3)**
- Keyboard backlight cable (ZIF) **(4)** (select products only)
- Keyboard cable (ZIF) **(5)**
- USB board cable (ZIF) **(6)**
- Touchpad cable (ZIF) **(7)**
- Speaker cable **(8)**
- Fingerprint reader cable (ZIF) **(9)** (select products only)

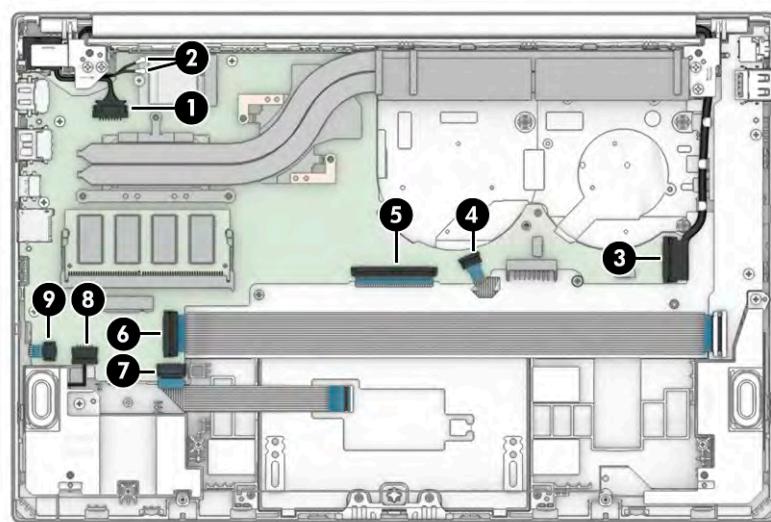

2. Remove the four Phillips M2.0 × 3.0 screws **(1)** that secure the system board to the computer.

3. Lift the right side of system board (2), and then pull the system board right and away from the connectors to remove it from the computer (3).

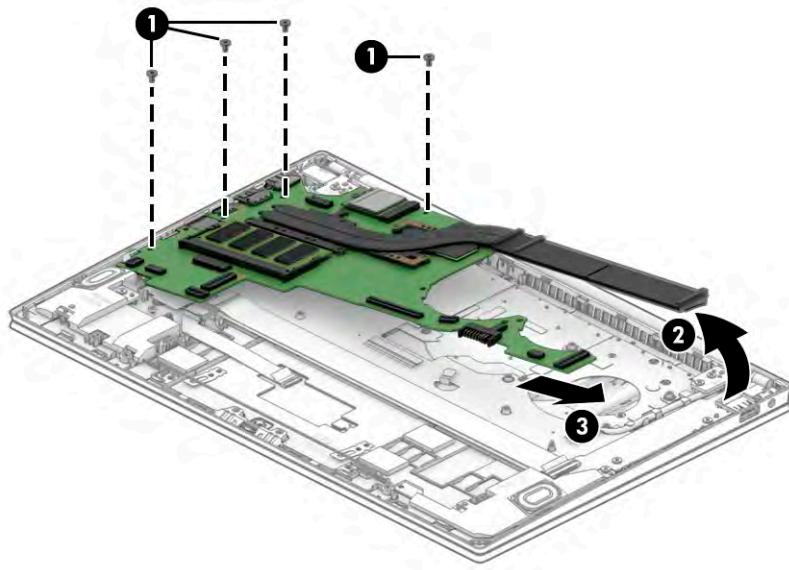

Reverse this procedure to install the system board.

Fingerprint reader

To remove the fingerprint reader, use this procedure and illustration.

Table 5-13 Fingerprint reader description and part number

Description	Spare part number
Fingerprint reader, natural silver	M08880-001
Fingerprint reader, warm gold	M08881-001
Fingerprint reader, fog blue	M08878-001
Fingerprint reader cable	M16618-001


Before removing the fingerprint reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the fan (see [Fan on page 40](#)).
5. Remove the system board (see [System board on page 44](#)).

Remove the fingerprint reader:

1. Remove the Phillips M2.0 x 2.0 screw (1) that secures the fingerprint reader bracket to the computer.
2. Remove the bracket from on top of the fingerprint reader (2).

3. Remove the fingerprint reader from the computer (3).

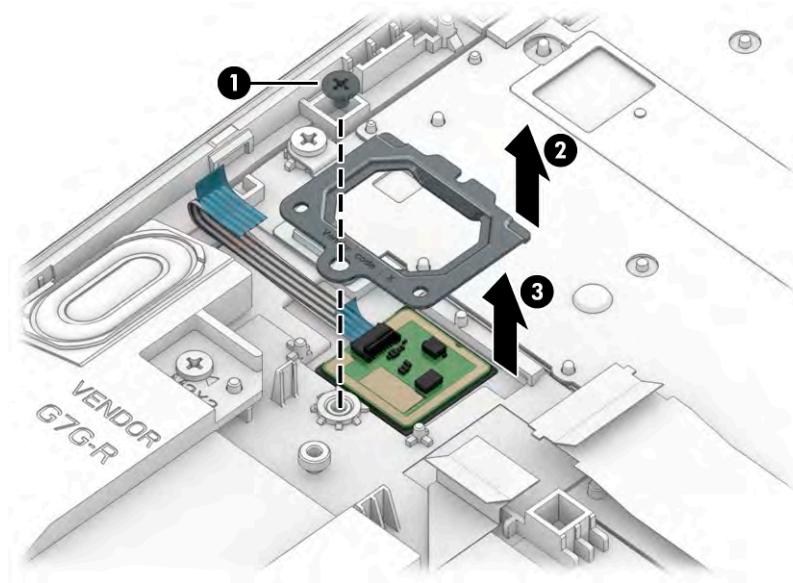

Reverse this procedure to install the fingerprint reader.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.

 **NOTE:** The display assembly is available as a spare part only at the subcomponent level. For display assembly spare part information, see the individual removal subsections.

Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 27](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the WLAN module (see [WLAN module on page 30](#)).


Remove the display assembly:

1. Disconnect the WLAN antenna cables (1) from the terminals on the WLAN module.


 **NOTE:** The WLAN antenna cable labeled 1/MAIN connects to the WLAN module Main terminal. The WLAN antenna cable labeled 2/AUX connects to the WLAN module Aux terminal.

2. Disconnect the display cable from the system board ZIF connector (2).

3. Release the display cable from the retention clips (3).

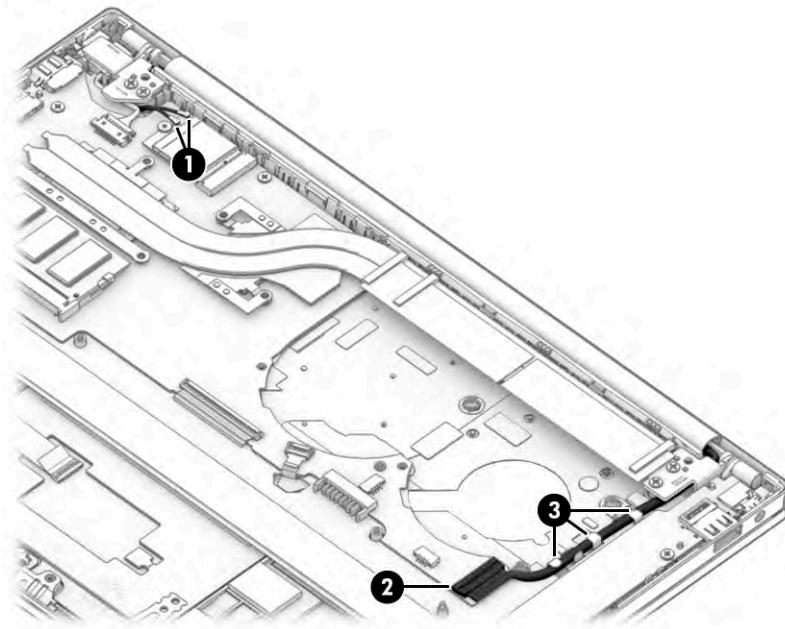

4. Open the display to open the hinges.
5. Remove the four Phillips M2.5 x 6.0 screws (1) that secure the display assembly to the computer.
6. Separate the display from the computer (2).

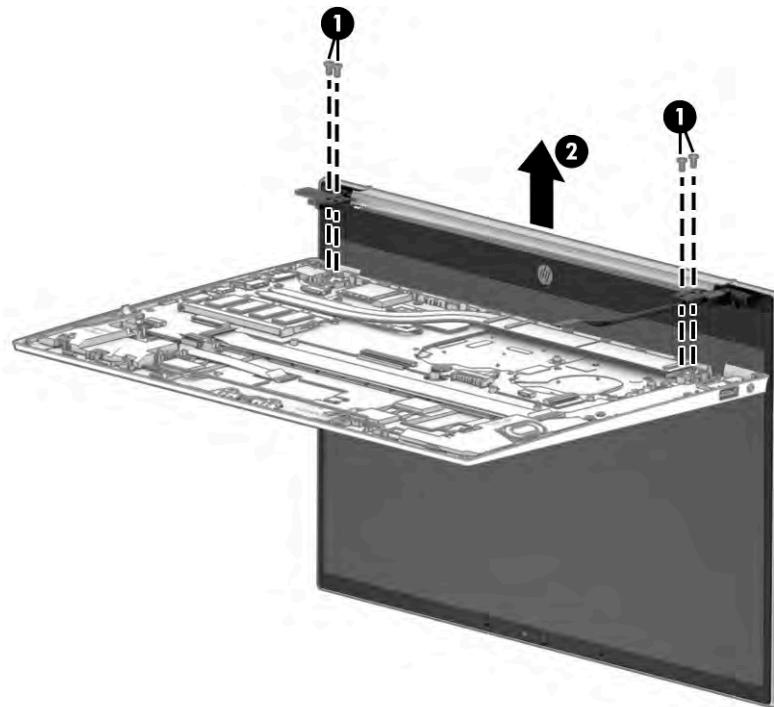

7. If you need to remove the display bezel:

- a. Use a flat, nonmarking tool **(1)** to release the top edge of the display bezel **(2)** from the display assembly.
- b. Release the left and right edges of the display bezel **(3)** from the display assembly.
- c. Release the bottom edge of the display bezel **(4)** from the display assembly.
- d. Remove the display bezel **(5)** from the display assembly.

Display adhesive is available in the Adhesive Kit as spare part number M17753-001.


The bezel is available as the following spare part numbers:

M16611-001: Ceramic white

M16612-001: Natural silver

M16615-001: Warm gold

M52693-001: Fog blue

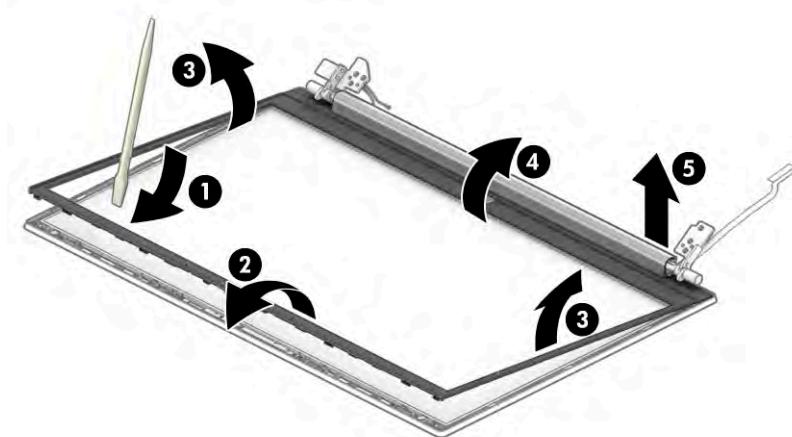

8. If you need to remove the display panel:

- a. The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the end of the tape **(1)**. While turning the tweezers, wrap the tape around the tweezers **(2)** as you continue to pull the tape out from behind the display panel **(3)**. You must pull the tape multiple times before it is completely removed.

b. Rotate the display panel over and place it next to the display enclosure **(4)**.

 **NOTE:** Pull the tape out slowly and evenly to prevent it from breaking prematurely.

Display adhesive is available in the Adhesive Kit as spare part number M17753-001.


Display panels are available as the following spare part numbers:

M52701-001: BrightView, UWVA, FHD, 250 nits

M52698-001: Antiglare, UWVA, FHD, 250 nits


M52699-001: Antiglare, UWVA, FHD, Touch-On Panel (TOP), 250 nits

M52700-001: Antiglare, UWVA, FHD, 400 nits

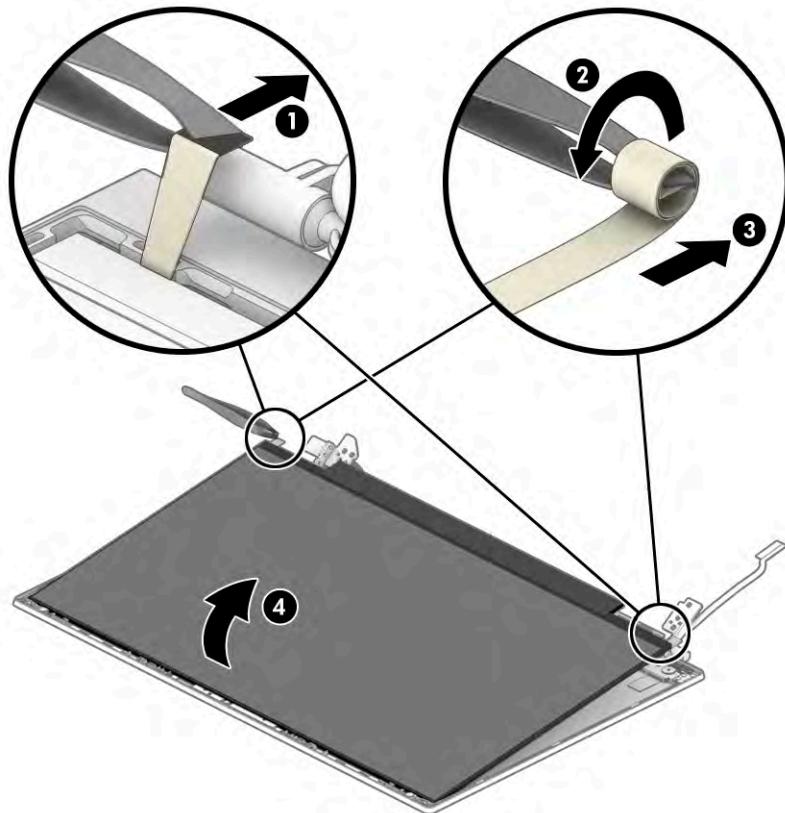


c. Release the adhesive support strip **(1)** that secures the display panel cable connector to the display panel.

d. Disconnect the display panel cable **(2)** from the display panel, and then remove the display panel **(3)**.

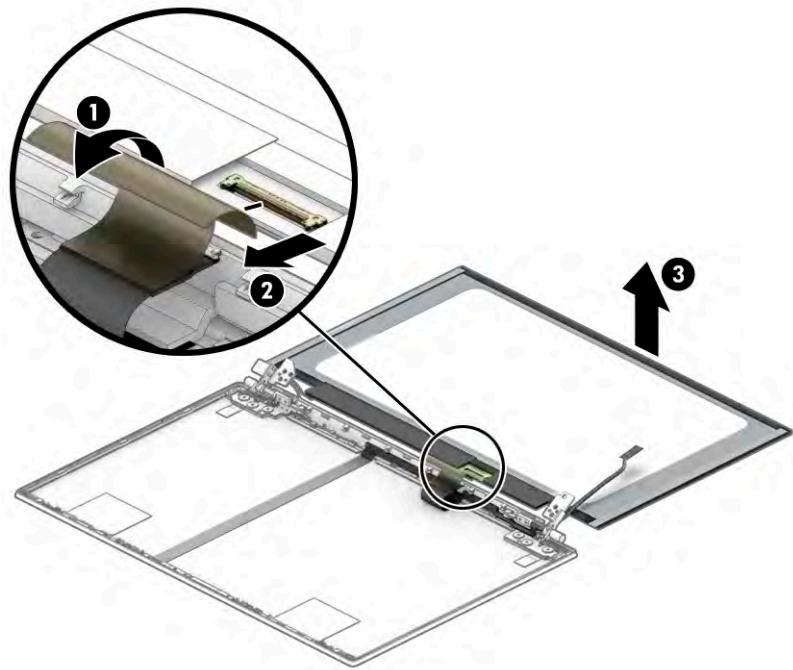

9. If you need to remove the camera module:

- a.** Use a tool to detach the camera module **(1)** from the display back cover. (The module is attached with double-sided adhesive.)
- b.** Disconnect the cable from the module **(2)**. Note that the cable routes under the module. The camera module is available as spare part number M24409-001.

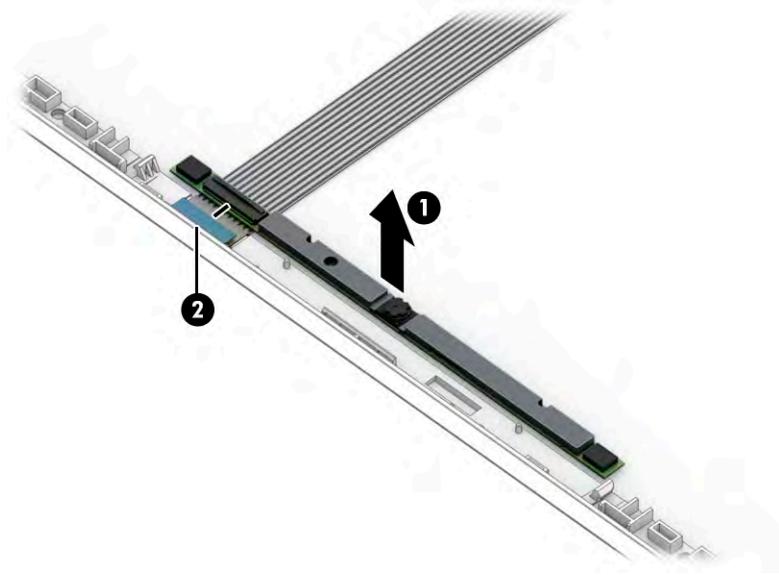


10. If you need to remove the display/camera cable, remove the cable from the routing along the bottom of the display rear cover (1), and then peel the cable off the inside of the display back cover (2).

Display panel cables are available as the following spare part numbers:

M16617-001: Nontouch display panels


M16616-001: Touch display panels

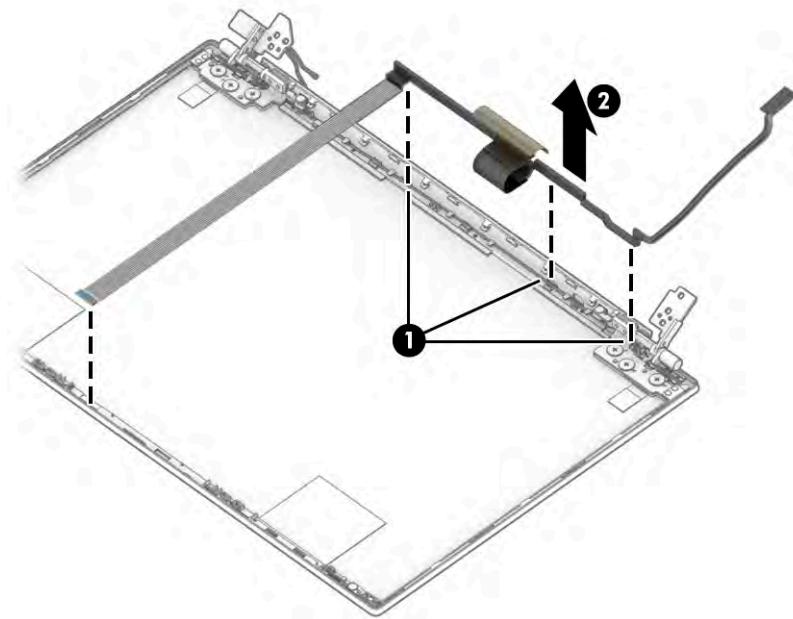

11. If you need to remove the hinges from the display rear cover:

- a. Remove the Phillips M2.0 × 2.5 screw (1) from the top of each hinge.
- b. Remove the three Phillips M2.0 × 2.5 screws (2) from the bottom of each hinge.
- c. Remove the Phillips M2.0 × 3.0 screw (3) from the inside-bottom of each hinge.
- d. Remove the display hinges from the display back cover (4).

The display hinges are available as spare part number M16622-001.

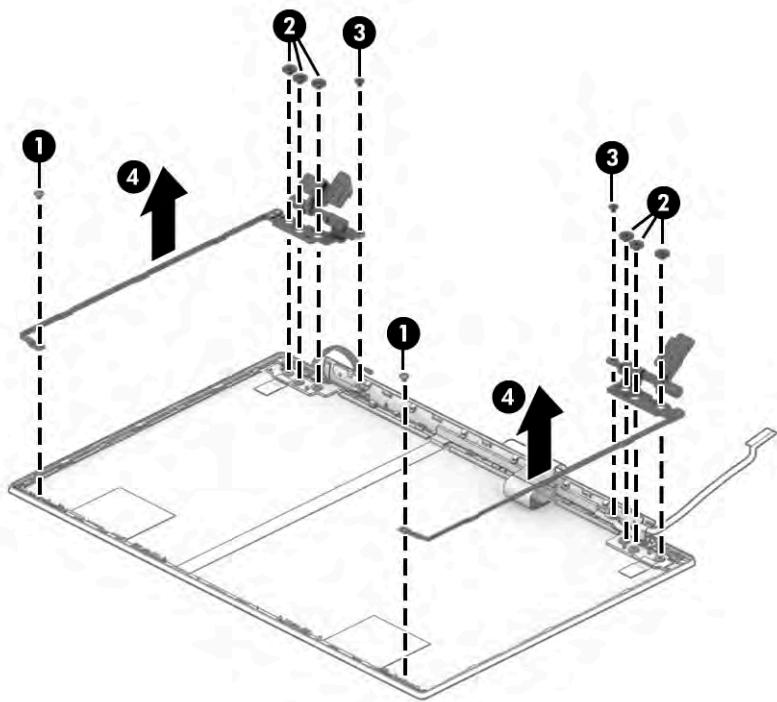

12. Peel the wireless antennas **(1)** off the display back cover. The antennas are secured with adhesive. Release the wireless antenna cables from the retention clips and routing channels built into the sides and bottom of the display back cover **(2)**. Note that some models have only one antenna.

The wireless cables and antennas are available as spare part number M16601-001 for dual antennas or M16600-001 for single antennas.


Display back covers are available as the following spare part numbers:

M16602-001: Ceramic white

M16603-001: Natural silver

M16606-001: Warm gold

M52692-001: Fog blue

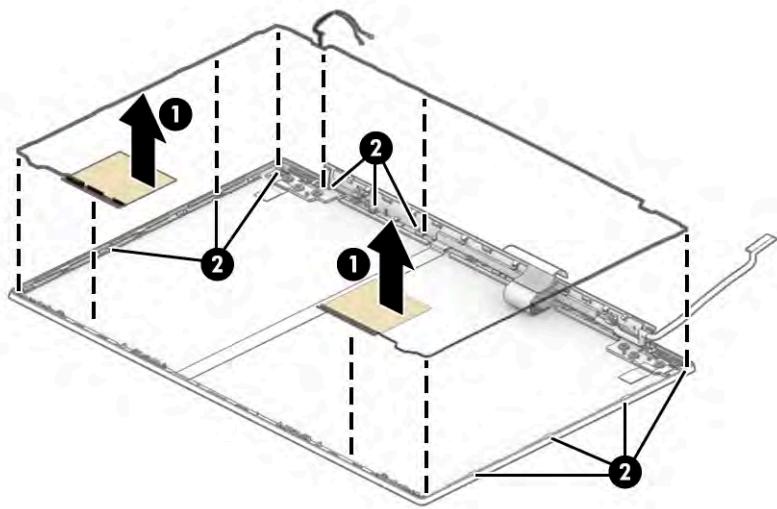

Reverse this procedure to reassemble and replace the display assembly.

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top cover/keyboards. The second table provides the country codes.

Table 5-14 Top cover with keyboard descriptions and part numbers

Description	Spare part number
Top cover with keyboard for use in models without a fingerprint reader	
● Natural silver, not backlit	M75245-xx1
● Natural silver, backlit	M75246-xx1
Top cover with keyboard for use in models with a fingerprint reader	
● Natural silver, not backlit	M75247-xx1
● Natural silver, backlit	M75248-xx1
● Luminous gold, backlit	M75249-xx1
● Fog blue, not backlit	M52711-xx1
● Fog blue, backlit	M52712-xx1

Table 5-15 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Solvenia	-BA1
Brazil	-201	India	-D61	South Korea	-AD1
Bulgaria	-261	Israel	-BB1	Spain	-071
Chile	-161	Italy	-061	Switzerland	-BG1
Czech Republic/Slovakia	-FL1	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001
Hungary	-211	Saudi Arabia	-171		

6 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).

 **IMPORTANT:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- ▲ Turn on or restart the computer and quickly press **f10**.

– or –

Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPags*. Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- **HP Support Assistant**
 1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.
 2. Select **My notebook**, and then select **Specifications**.
- **Setup Utility (BIOS)**
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 55](#)).
 2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **ctrl+alt+s**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 56](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Type **file** in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

7 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB drive or using online tools.

 **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.

 **NOTE:** If computer storage is 32 GB or less, Microsoft® System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- ▲ Go to <http://www.hp.com/support>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 59](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 59](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.

 **NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 59](#).

For more information about the first two methods, see the Get Help app:

Select the **Start** button, select the **Get Help** app, and then enter the task you want to perform.

 **NOTE:** You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 58](#).

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- ▲ Insert the HP Recovery media, and then restart the computer.

 **NOTE:** HP recommends that you follow the [Restoring and recovery methods on page 59](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly press and hold the volume up button, and then select **f9**.
– or –
Turn on or restart the tablet, quickly press and hold the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

8 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 62](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

- ▲ You have several options after you receive a failure ID:
 - Click **Next** to open the Event Automation Service (EAS) page, where you can log the case.
– or –
 - Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
– or –
 - Click the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Help and Support, HP Support Assistant, or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Help and Support (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support.

1. Select the **Start** button, and then select **HP Help and Support**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.
2. Select **Troubleshooting and fixes**.
3. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button.
2. Right-click **HP PC Hardware Diagnostics for Windows**, select **More**, and then select **Run as administrator**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or enter **Microsoft Store** in the taskbar search box.
2. Enter **HP PC Hardware Diagnostics Windows** in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

 **NOTE:** For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 64](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem:

- ▲ Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the failure ID code.

 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.

 **NOTE:** If you need to stop a diagnostic test, press **esc**.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive

 **NOTE:** To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 64](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.

 **NOTE:** The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.

 **NOTE:** For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.

- 3.** Make your customization selections.
- 4.** Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Specifications

This chapter provides specifications for your computer.

Computer specifications

This section provides specifications for your computer. When traveling with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 9-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	325 mm	12.8 in
Depth	217 mm	8.5 in
Height (front to back)	17 mm	0.67 in
Weight	1410 g	3.11 lb
Input power		
Operating voltage and current	19.5 V dc @ 3.33 A – 65 W	
	19.5 V dc @ 2.31 A – 45 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

35.6 cm (14.0 in) display specifications

This section provides specifications for your display.

Table 9-2 Display specifications

	Metric	U.S.
Active diagonal size	35.6 cm	14.0 in
Resolution	1366 × 768 (HD) 1920 × 1080 (FHD)	
Surface treatment	Antiglare BrightView	
Brightness	220 nits 250 nits 400 nits (FHD, 72% CG panels)	
Viewing angle	SVA UWVA	
Backlight	WLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 9-3 Solid-state drive specifications

	256 GB*	512 GB*	1 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MB/s	up to 2150 MB/s	up to 2150 MB/s
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MB/s	up to 1550 MB/s	up to 1550 MB/s
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	468,883,296	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)		

Table 9-3 Solid-state drive specifications (continued)

256 GB*	512 GB*	1 TB*
<p>*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.</p>		
<p>NOTE: Certain restrictions and exclusions apply. Contact support for details.</p>		

10 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V ac to 120 V ac, or from 220 V ac to 240 V ac.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V ac or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 10-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

Table 10-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KT	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type H05VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

11 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

AC adapter and battery light, identifying 6
AC adapters, spare part numbers 20
action key, identifying 12
audio-out (headphone)/audio-in (microphone) combo jack, identifying 6

B

backup, creating 58
backups 58
BIOS
determining version 55
downloading an update 56
starting the Setup Utility 55
updating 55
Bluetooth label 13
boot order, changing 59
bottom components 12
bottom cover
removal 27
rubber feet
removal 27
spare part number 27
spare part number
removal 27
spare part number 27
buttons
left touchpad 8
power 11, 12
right touchpad 8

C

cables
spare part numbers 19
camera
identifying 8
camera light, identifying 8
caps lock light 10
cautions
electrostatic discharge 22, 23
components
bottom 12
display 7

Keyboard area 8

left side 6
lights 9
right side 5
touchpad 8, 9
computer major components 15
computer specifications 67
connectors
power 6
control zone 8

D

display
specifications 67
display assembly
subcomponents 18
display components 7
display panel
illustrated 18
spare part number 18
display/camera cable
spare part number 19

E

electrostatic discharge (ESD) 22, 23
preventing damage 22, 23, 24
esc key, identifying 12

F

fan
removal 40
spare part number 40
fingerprint reader 11
removal 46
spare part numbers 46
fingerprint reader cable
spare part number 19
fn key, identifying 12

G

grounding methods 22, 23, 25
guidelines
packaging 22, 26
transporting 22, 26
workstation 22, 23

H

hard drive
specifications 67
HDMI port
identifying 6
heat sink
removal 41
spare part numbers 41
HP PC Hardware Diagnostics UEFI
downloading 64
failure ID code 63
starting 64
using 63
HP PC Hardware Diagnostics Windows
accessing 61, 62
downloading 62
failure ID code 61
installing 63
using 61
HP Recovery media
recovery 59
HP Sure Recover 60

I

illustrated parts catalog 15
internal microphones, identifying 8

J

jacks
audio-out (headphone)/audio-in (microphone) 6

K

keyboard
product description 2
keyboard with top cover
spare part numbers 54
keys
action 12
esc 12
fn 12
Windows 12

L

- labels
 - Bluetooth 13
 - regulatory 13
 - serial number 13
 - service 13
 - wireless certification 13
 - WLAN 13
- left control zone, identifying 8, 9
- left side components 6
- lights
 - AC adapter and battery 6
 - camera 8
 - caps lock 10
 - mute 10
 - power 10
 - touchpad 8
- low blue light mode 7

M

- memory modules
 - removal 33
 - spare part numbers 33
- mute light, identifying 10

P

- packaging guidelines 22, 26
- pointing device, product
 - description 2
- ports
 - HDMI 6
 - product description 2
 - USB SuperSpeed 6, 7
 - USB Type-C DisplayPort 5
 - USB Type-C power connector 5
 - USB Type-C SuperSpeed 5
- power button, identifying 11, 12
- power connector
 - identifying 6
- power connector cable
 - removal 39
 - spare part numbers 39
- power connector cable cable
 - spare part number 19
- power cord
 - requirements for all countries 70
 - requirements for specific countries and regions 70
 - set requirements 70

R

- power cords, spare part numbers 20
- power light, identifying 10
- product description
 - keyboard 2
 - pointing device 2
 - ports 2
- product name and number, computer 13

S

- power cords, spare part numbers 20
- power light, identifying 10
- product description
 - keyboard 2
 - pointing device 2
 - ports 2
- product name and number, computer 13

T

- recovery 58
 - discs 59
 - media 59
 - USB flash drive 59
- recovery media 58
 - creating using HP Cloud Recovery Download Tool 58
 - creating using Windows tools 58
- regulatory information
 - regulatory label 13
 - wireless certification labels 13
- Remote HP PC Hardware Diagnostics
 - UEFI settings
 - customizing 65
 - using 65
- removal and replacement
 - procedures 27
 - solid-state drive 32
- restoring 58
 - restoring and recovery methods 59
- right control zone, identifying 8, 9
- right side components 5

S

- Screw Kit, spare part number 20
- serial number, computer 13
- service labels, locating 13
- SIM slot, identifying 5
 - slots
 - SIM card 5
- solid-state drive
 - removal and replacement 32
 - specifications 68
- spare part country codes 54
- speaker
 - removal 37
 - spare part numbers 37
- speakers 13

U

- special keys
 - identifying 11
 - using 11
- specifications
 - computer 67
 - display 67
 - hard drive 67
 - solid-state drive 68
- static electricity 22, 23, 24
- system board
 - removal 44
 - spare part numbers 44
- system restore 59
- system restore point, creating 58

V

- vents, identifying 11, 13

W

Windows

- backup 58
- recovery media 58
- system restore point 58

Windows key, identifying 12

Windows tools, using 58

wireless antennas, identifying 8

wireless certification label 13

WLAN antennas, identifying 8

WLAN device 13

WLAN label 13

WLAN module

- removal 30
- spare part numbers 30

workstation guidelines 22, 23