



Maintenance and Service Guide

HP OmniBook 3 14 inch Laptop Next Gen
AI PC

Model number: 14-hz0xxx

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2026 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries, used with permission. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: February 2026

Document Part Number: P75223-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.windows.com>.

If your product ships with Windows in S

Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

-
- ⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the mobile computer, do not place the mobile computer directly on your lap or obstruct the computer air vents. Use the mobile computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer; or a soft surface, such as pillows, rugs, or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.
-

Important notice about Customer Self-Repair parts

Your computer includes Customer Self-Repair parts and parts that should be accessed only by an authorized service provider.



IMPORTANT: See [Removal and replacement procedures for Customer Self-Repair parts on page 29](#) for details.

Accessing parts described in [Removal and replacement procedures for authorized service provider parts on page 39](#) can damage the computer or void your warranty.

Table of contents

| | |
|--|-----------|
| 1 Product description | 1 |
| 2 Getting to know your computer | 4 |
| Right side | 4 |
| Left side | 5 |
| Display | 6 |
| Low blue light mode (select products only) | 6 |
| Wake-on-voice (select products only) | 6 |
| Keyboard area | 8 |
| Touchpad settings and components | 8 |
| Touchpad settings | 8 |
| Adjusting touchpad settings | 8 |
| Turning on the touchpad | 8 |
| Touchpad components | 8 |
| Lights | 9 |
| Special keys | 11 |
| Bottom | 11 |
| Labels | 12 |
| 3 Illustrated parts catalog | 14 |
| Computer major components | 14 |
| Display assembly subcomponents | 17 |
| Miscellaneous parts | 19 |
| 4 Removal and replacement procedures preliminary requirements | 21 |
| Tools required | 21 |
| Service considerations | 21 |
| Plastic parts | 21 |
| Cables and connectors | 21 |
| Drive handling | 21 |
| Electrostatic discharge information | 22 |
| Generating static electricity | 22 |
| Preventing electrostatic damage to equipment | 23 |
| Personal grounding methods and equipment | 23 |
| Grounding the work area | 24 |
| Recommended materials and equipment | 24 |
| Cleaning your computer | 25 |
| Enabling HP Easy Clean (select products only) | 25 |
| Removing dirt and debris from your computer | 25 |
| Cleaning your computer with a disinfectant | 26 |
| Caring for wood veneer (select products only) | 27 |

| | |
|--|-----------|
| Packaging and transporting guidelines..... | 27 |
| Accessing support information..... | 27 |
| 5 Removal and replacement procedures for Customer Self-Repair parts..... | 29 |
| Component replacement procedures..... | 29 |
| Preparation for disassembly..... | 29 |
| Bottom cover..... | 29 |
| Battery..... | 32 |
| Removing and reinstalling the same battery..... | 32 |
| Installing a new battery..... | 34 |
| 6 Removal and replacement procedures for authorized service provider parts..... | 39 |
| Component replacement procedures..... | 39 |
| Preparation for disassembly..... | 39 |
| Solid-state drive..... | 39 |
| WLAN module..... | 40 |
| Speakers..... | 42 |
| Touchpad..... | 43 |
| Fan..... | 44 |
| Display assembly..... | 45 |
| System board..... | 50 |
| Heat sink..... | 52 |
| USB board..... | 54 |
| Keyboard with top cover..... | 55 |
| 7 Using Setup Utility (BIOS)..... | 57 |
| Starting Setup Utility (BIOS)..... | 57 |
| Updating Setup Utility (BIOS)..... | 57 |
| Determining the BIOS version..... | 57 |
| Preparing for a BIOS update..... | 58 |
| Downloading a BIOS update..... | 58 |
| Installing a BIOS update..... | 59 |
| 8 Backing up, restoring, and recovering..... | 60 |
| Backing up information and creating recovery media..... | 60 |
| Using Windows tools for backing up..... | 60 |
| Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)..... | 60 |
| Restoring and recovering your system..... | 60 |
| Creating a system restore..... | 61 |
| Restoring and recovery methods..... | 61 |
| Recovering using the HP Recovery USB flash drive..... | 61 |
| Changing the computer boot order..... | 62 |
| Using HP Sure Recover (select products only)..... | 62 |
| 9 Using HP PC Hardware Diagnostics..... | 63 |
| Using HP PC Hardware Diagnostics Windows (select products only)..... | 63 |
| Using an HP PC Hardware Diagnostics Windows hardware failure ID code..... | 63 |
| Accessing HP PC Hardware Diagnostics Windows..... | 63 |

| | |
|---|-----------|
| Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only) | 63 |
| Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)..... | 64 |
| Downloading HP PC Hardware Diagnostics Windows..... | 64 |
| Downloading the latest HP PC Hardware Diagnostics Windows version from HP..... | 64 |
| Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store..... | 64 |
| Downloading HP Hardware Diagnostics Windows by product name or number (select products only) | 65 |
| Installing HP PC Hardware Diagnostics Windows..... | 65 |
| Using HP PC Hardware Diagnostics UEFI | 65 |
| Using an HP PC Hardware Diagnostics UEFI hardware failure ID code..... | 65 |
| Starting HP PC Hardware Diagnostics UEFI | 65 |
| Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)..... | 66 |
| Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive..... | 66 |
| Downloading the latest HP PC Hardware Diagnostics UEFI version..... | 67 |
| Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only) | 67 |
| Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)..... | 67 |
| Downloading Remote HP PC Hardware Diagnostics UEFI..... | 67 |
| Downloading the latest Remote HP PC Hardware Diagnostics UEFI version..... | 67 |
| Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number..... | 68 |
| Customizing Remote HP PC Hardware Diagnostics UEFI settings..... | 68 |
| 10 Specifications..... | 69 |
| Computer specifications..... | 69 |
| Display specifications..... | 70 |
| Solid-state drive specifications | 70 |
| 11 Power cord set requirements..... | 72 |
| Requirements for all countries | 72 |
| Requirements for specific countries and regions..... | 72 |
| 12 Swelling or deformation of notebook battery..... | 75 |
| Swollen notebook batteries..... | 75 |
| Swollen battery is not a safety issue | 75 |
| Discontinue using a swollen battery | 75 |
| Replace a swollen battery..... | 75 |
| Minimize battery swelling..... | 75 |
| Adaptive Battery Optimizer (consumer notebooks)..... | 76 |
| HP Battery Health Manager (commercial notebooks)..... | 76 |
| 13 Recycling..... | 77 |
| Index..... | 78 |

1 Product description

This table provides detailed product information.



NOTE: For the latest specifications related to your computer, go to <http://www.hp.com/support> and follow the instructions to find your product. Select **Specifications & Accessories**, select **Product information**, and then select the specifications link.

Table 1-1 Product components and their descriptions

| Category | Description |
|------------------------|---|
| Product Name | HP OmniBook 3 14 inch Laptop Next Gen AI PC Model number: 14-hz0xxx CTO model number: 14-hz000 |
| Processors | Qualcomm® processors Snapdragon® X12 6100 processor |
| Graphics | Internal graphics Qualcomm Adreno |
| Display | 35.6 cm (14.0 in), Widescreen Ultra Extended Graphics Array (WUXGA) (1920 × 1200) Antiglare, LED, Ultra Wide Viewing Angle (UWVA), 100% sRGB color coverage, True 8-bit color depth, 300 nits, 60 Hz Touch on panel, antiglare, LED, UWVA, 62.5% sRGB color coverage, True 8-bit color depth, 400 nits, 60 Hz Brightview, Organic Light-Emitting Diode (OLED), Low Blue Light, UWVA, 300 nits |
| Memory | Integrated memory is not accessible or upgradeable. LPDDR5x-quad-channel support Low power double data rate (LPDDR) 0.5v Supports the following configurations: <ul style="list-style-type: none">• 32 GB• 32 GB (for use in the People's Republic of China [PRC])• 16 GB• 16 GB (PRC) |
| Primary storage | PCIe, Non-Volatile Memory express (NVMe) M.2 2280 solid-state drives (SSDs) <ul style="list-style-type: none">• 1 TB, PCIe-4 × 4, NVMe value• 512 GB, PCIe-4 × 4, NVMe value• 256 GB, PCIe-4 × 4, NVMe value• 256 GB, Gen 3, 2280 NVMe |
| Audio and video | Dual speakers Supports HP Audio Boost |

Table 1-1 Product components and their descriptions (continued)

| Category | Description |
|----------------------------------|--|
| | HP FHD + IR camera: USB 2.0, indicator LED × infrared (IR) LED, f2.0, FHD BSI sensor, WDR/INR/HDR, 80° narrow field-of-view (NFOV) |
| | Dual-array digital microphone with appropriate software beam forming, echo cancellation, noise suppression |
| | 1080p by 30 frames per second |
| | Supports Windows Hello® |
| Wireless | Integrated wireless module (M.2 2230 with dual antennas) |
| | Qualcomm FastConnect 6900 M.2 2230 Wi-Fi® 6E + Bluetooth® 5.3 WW WLAN |
| Ports | Audio-out (headphone)/audio-in (microphone) combo jack |
| | HDMI 2.1 (supports up to 4K @ 60 Hz) |
| | USB 3.2 Gen 1 Type-A (2) |
| | USB 3.2 Gen 2 Type-C ports (2), support: <ul style="list-style-type: none"> • Data transfer • Power Delivery 3.0 • DisplayPort™ 1.4 out up to 4K @ 60 Hz • HDMI 2.0 out up to 4K @ 60 Hz with HDCP 2.2 out through adapter |
| Keyboard/pointing devices | Keyboard (with numeric keypad) |
| | Backlit |
| | Not backlit |
| | Clickpad requirements |
| | Image sensor |
| | Multitouch gestures enabled |
| | Precision touchpad |
| | Modern trackpad gestures |
| | Taps enabled as default |
| Power requirements | Battery |
| | 3 cell, 60 Whr |
| | Long life |
| | Fast charge |
| | HP Smart AC adapter (4.5 mm, non-power correction factor [nPFC]) (select products only) |
| | 65 W, GaN, wall mount, halogen free, foldable |
| | 65 W, GaN, wall mount, fixed |
| | 65 W, GaN, standard, straight |
| | Power cord |

Table 1-1 Product components and their descriptions (continued)

| Category | Description |
|-------------------------|---|
| | USB-C |
| Security | Microphone mute (on/off key on keyboard) |
| | Camera privacy cover |
| | Trusted Platform Module (TPM) 2.0 |
| Operating system | Windows® 11 Home 64 Copilot+ Standard |
| | Windows 11 Home 64 Copilot+ Standard Chinese Market CPPP |
| | Windows 11 Home 64 Copilot+ Standard Single Language Africa Market PPP |
| | Windows 11 Home 64 Copilot+ Standard Single Language APAC EM PPP |
| | Windows 11 Home 64 Copilot+ Standard Single Language India Market PPP |
| | Windows 11 Home 64 Copilot+ Standard Single Language Indonesia Market PPP |
| | Windows 11 Pro 64 Copilot+ Standard |
| | FreeDOS 3.0 |
| Serviceability | AC adapter |
| | Bottom cover |
| | Battery |

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side



Use this illustration and table to identify the components on the right side of the computer.



NOTE: See the illustration that most closely matches your computer.



Table 21 Right-side components and their descriptions

| | Component | Description |
|-----|--|--|
| (1) |  Audio-out (headphone)/Audio-in (microphone) combo jack | <p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none">■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> |
| (2) |  USB 5 Gbps port | <p>Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on.</p> <p>NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.</p> |

Left side

Use this illustration and table to identify the components on the left side of the computer.

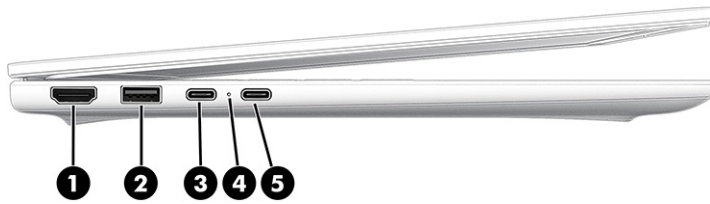


Table 2-2 Left-side components and their descriptions

| | Component | Description |
|-----|------------------------------|---|
| (1) | HDMI port | Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device. |
| (2) | USB port | Connects a USB device, provides data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device. |
| (3) | USB Type-C® 10 Gbps port | Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output. |
| (4) | AC adapter and battery light | <ul style="list-style-type: none">• White: The AC adapter is connected and the battery is fully charged.• Blinking amber: The AC adapter is disconnected and the battery has reached a low battery level.• Amber: The AC adapter is connected and the battery is charging.• Off: The battery is not charging. |

Table 2-2 Left-side components and their descriptions (continued)

| | Component | Description |
|-----|-------------------------|---|
| (5) | USB Type-C 10 Gbps port | Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output. |

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

Wake-on-voice (select products only)

Use the wake-on-voice feature to bring the computer out of the sleep state quickly.

To access the wake-on-voice settings, follow these steps:

1. Select the **Search** icon in the taskbar, type `XiaoWei` in the search box, and then select **XiaoWei**.
2. When the tool opens, scan the QR code with your mobile device, which takes you to the settings page, where you can select your wake-on-voice features.
3. Follow the on-screen instructions.



NOTE: Allow the XiaoWei app to continue running on the computer.

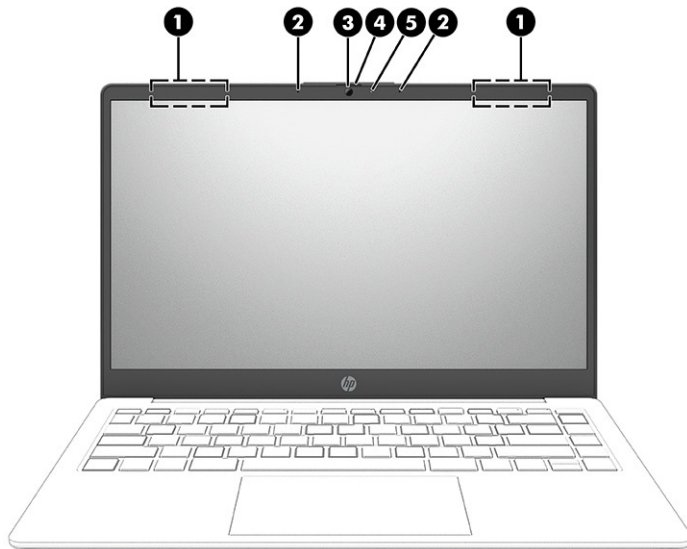


Table 2-3 Display components and their descriptions

| | Component | Description |
|-----|--------------------------|--|
| (1) | WLAN antennas* (2) | Send and receive wireless signals to communicate with wireless local area networks (WLANs). |
| (2) | Internal microphones (2) | Record sound. |
| (3) | Camera | Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows®, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product. |
| (4) | Camera privacy cover | By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens. |
| (5) | Camera light | On: The camera is in use. |

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard area, including the function keys and (select products only) power key, is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad settings and components

Learn the touchpad settings and components.

Touchpad settings

Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **touchpad** button.

If you are not using an external mouse, press the **Tab** key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

Touchpad components

Identify the touchpad components.

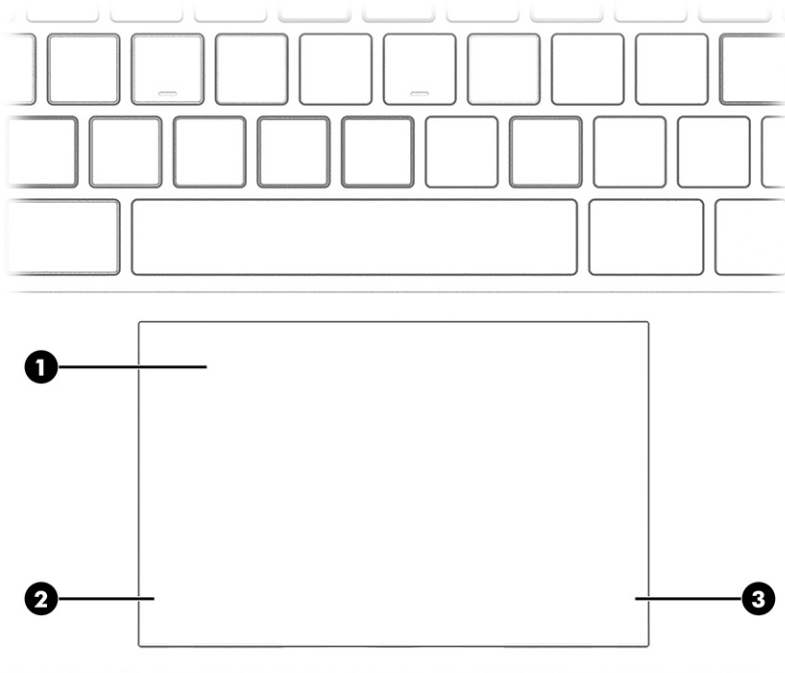


Table 2-4 Touchpad components and their descriptions

| | Component | Description |
|-----|-----------------------|---|
| (1) | Touchpad zone | Reads your finger gestures to move the pointer or activate items on the screen. |
| (2) | Left touchpad button | Functions like the left button on an external mouse. |
| (3) | Right touchpad button | Functions like the right button on an external mouse. |

Lights

Use this illustration and table to identify the lights on the computer.

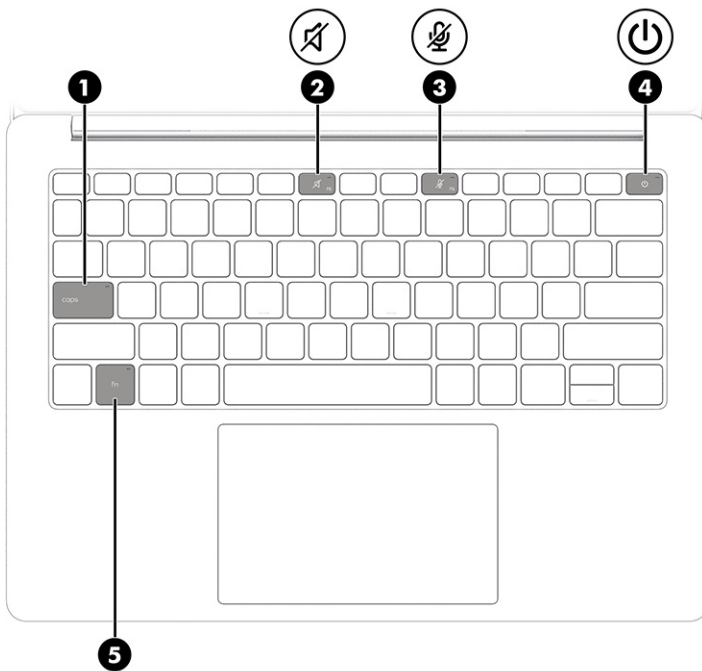





Table 2-5 Lights and their descriptions

| | Component | Description |
|-----|---|--|
| (1) | Caps lock light | On: Caps lock is on, which switches the key input to all capital letters. |
| (2) |  Mute light | <ul style="list-style-type: none"> On: Computer sound is off. Off: Computer sound is on. |
| (3) |  Microphone mute light | <ul style="list-style-type: none"> On: Microphone is off. Off: Microphone is on. |
| (4) |  Power light | <ul style="list-style-type: none"> On: The computer is on. Blinking (select products only): The computer is in the sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. Off: Depending on your computer model, the computer is off, in hibernation, or in hleep. Hibernation is the power-saving state that uses the least amount of power. |
| (5) | Fn lock light | <ul style="list-style-type: none"> On: FN Lock in enabled. Off: FN Lock in disabled. <p>NOTE: On some products, FN Lock is assigned as the secondary function of the left Shift key. To enable FN Lock, press fn + left Shift. Repeat the same key combination again to disable FN Lock.</p> |

Special keys

Identify the special keys.

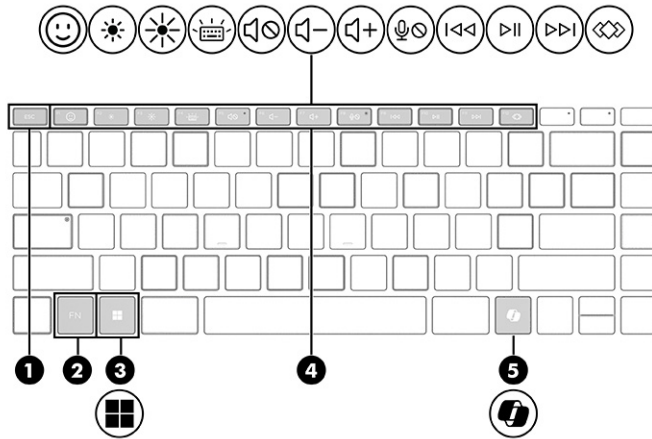




Table 2-6 Special keys and their descriptions

| | Component | Description |
|-----|---|---|
| (1) | esc key | Displays system information when pressed in combination with the fn key. |
| (2) | fn key | Executes specific functions when pressed in combination with another key. |
| (3) |  Windows key | Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu. |
| (4) | Action keys | Execute frequently used system functions as defined by the icon symbols on f1 through f12 function keys. |
| (5) |  Windows Copilot key | Opens Windows Copilot (select products only). NOTE: Copilot in Windows (select products only) requires Windows 11. Some features require a neural processing unit (NPU). The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. When the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See http://aka.ms/WindowsAIFeatures . |

Bottom

Identify the bottom components.

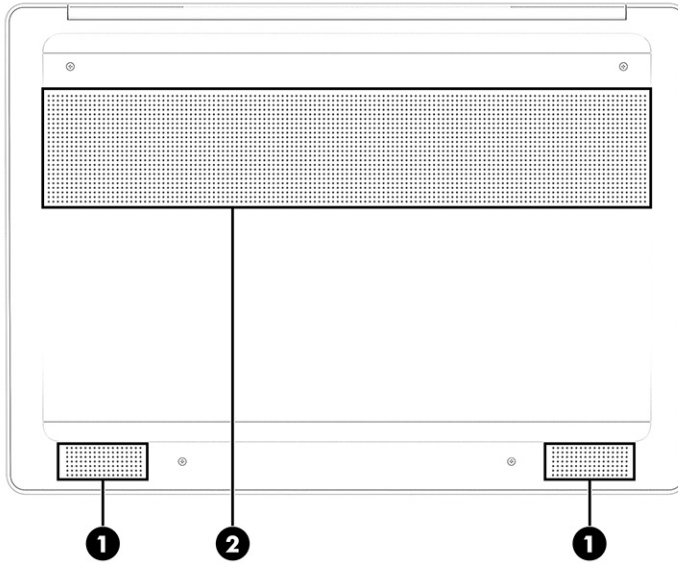


Table 2-7 Bottom components and their descriptions

| | Component | Description |
|-----|--------------|--|
| (1) | Speakers (2) | Produce sound. |
| (2) | Vent | Enables airflow to cool internal components. |

NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.

IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble the following example.

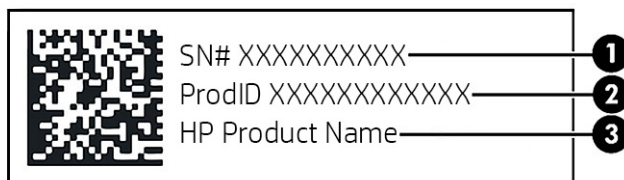


Table 2-8 Service label components

| Component | |
|-----------|----------------------------------|
| (1) | Serial number |
| (2) | Product ID |
| (3) | HP product name and model number |


- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.


3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

Use this illustration and table to identify the computer major components.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

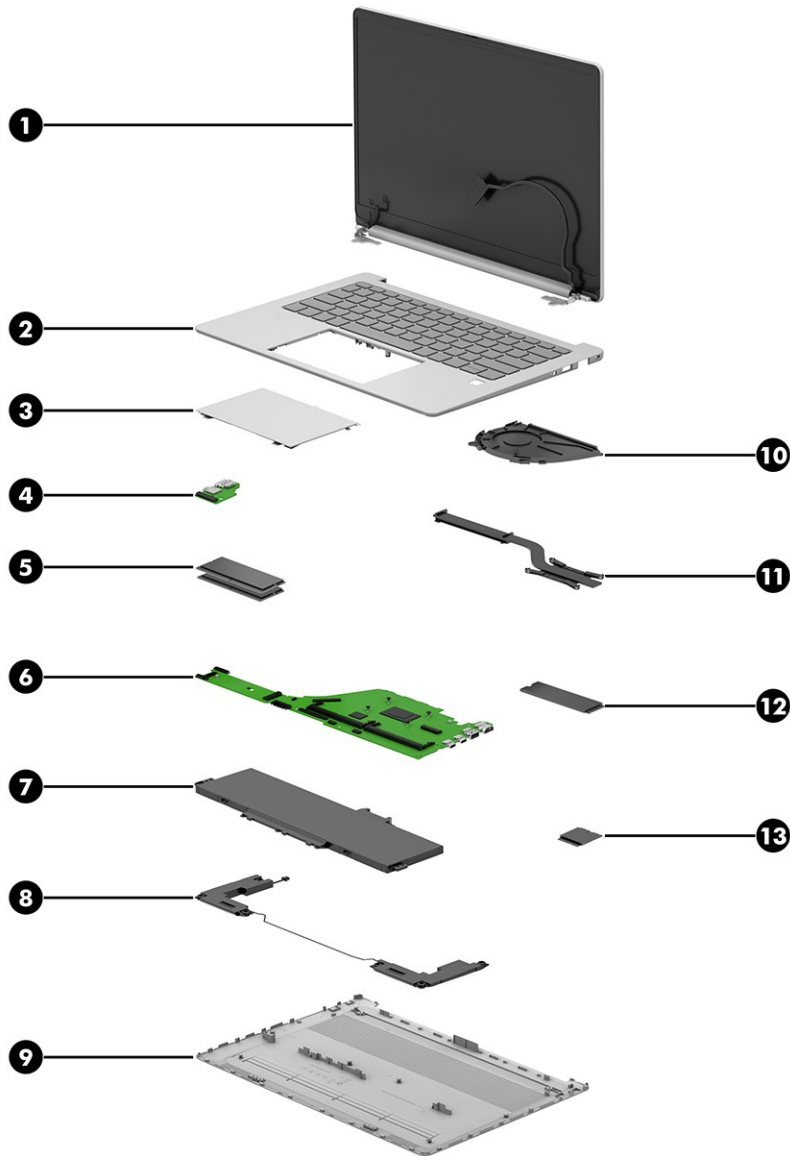


Table 3-1 Computer major component descriptions and part numbers

| Item | Component | Spare part number |
|------|---|-------------------------------|
| (1) | Display assembly NOTE: Display spare parts are available as subcomponents, not as whole units. Display subcomponent spare parts are available. | not available as a spare part |
| (2) | Top cover/keyboard NOTE: For a detailed list of country codes, see Keyboard with top cover on page 55 . | |
| | Glacier silver top cover, canvas gray keyboard and clickpad, backlit keyboard | P80838-001 |
| | Mica silver top cover, iron gray keyboard and clickpad, backlit keyboard | P80840-001 |
| | Starlit blue top cover, iron gray keyboard and clickpad, backlit keyboard | P80841-001 |
| | Warm gold top cover, iron gray keyboard and clickpad, backlit keyboard | P80842-001 |

Table 3-1 Computer major component descriptions and part numbers (continued)

| Item | Component | Spare part number |
|-------------|--|--------------------------|
| | Nouvelle silver top cover, darker nouvelle silver keyboard and clickpad, backlit keyboard | P81076-001 |
| | Starlit blue top cover, darker starlit blue opaque keyboard and clickpad, backlit AI keyboard (aluminum) | P98844-001 |
| (3) | Touchpad | |
| | Glacier silver | P80886-001 |
| | Mica silver | P80888-001 |
| | Starlit blue | P80889-001 |
| | Warm gold | P80890-001 |
| | Nouvelle silver | P82052-001 |
| (4) | USB audio board | P84819-001 |
| (5) | Memory module (not available for this product) | |
| (6) | System board (includes integrated processor) | |
| | NOTE: All system board spare part kits include replacement thermal material. | |
| | Qualcomm Snapdragon X12-6100 processor, 16 GB of system memory | P80743-601 |
| | Qualcomm Snapdragon X12-6100 processor, 32 GB of system memory | P80744-601 |
| | Qualcomm Snapdragon X12-6100 processor, 16 GB of system memory (PRC) | P80745-601 |
| | Qualcomm Snapdragon X12-6100 processor, 32 GB of system memory (PRC) | P80746-601 |
| (7) | Battery (3 cell, 60 Whr) | P53583-001 |
| (8) | Speakers | P81312-001 |
| (9) | Bottom cover | |
| | Iron gray, plastic | P80865-001 |
| | Glacial silver, plastic | P80866-001 |
| | Nouvelle silver, aluminum | P81309-001 |
| | Nouvelle silver, plastic | P82051-001 |
| | Starlit blue, plastic | P98829-001 |
| | Amethyst mineral, plastic | Q12384-001 |
| | Sapphire earthen, plastic | Q12385-001 |
| | Starlit blue, aluminum | P98830-001 |
| (10) | Fan | P80878-001 |
| (11) | Heat sink | P81311-001 |
| (12) | SSD | |
| | 1 TB, PCIe-4 × 4 | not spared |
| | 512 GB, PCIe-4 × 4 | N77392-005 |
| | 256 GB, PCIe-4 × 4 | N77391-005 |

Table 3-1 Computer major component descriptions and part numbers (continued)

| Item | Component | Spare part number |
|------|--|-------------------|
| | 256 GB, PCIe-3 × 4 | P90856-005 |
| (13) | WLAN module (Qualcomm FastConnect 6900 M.2 2230 Wi-Fi 6E + Bluetooth 5.3 WW WLAN) | P13807-005 |

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

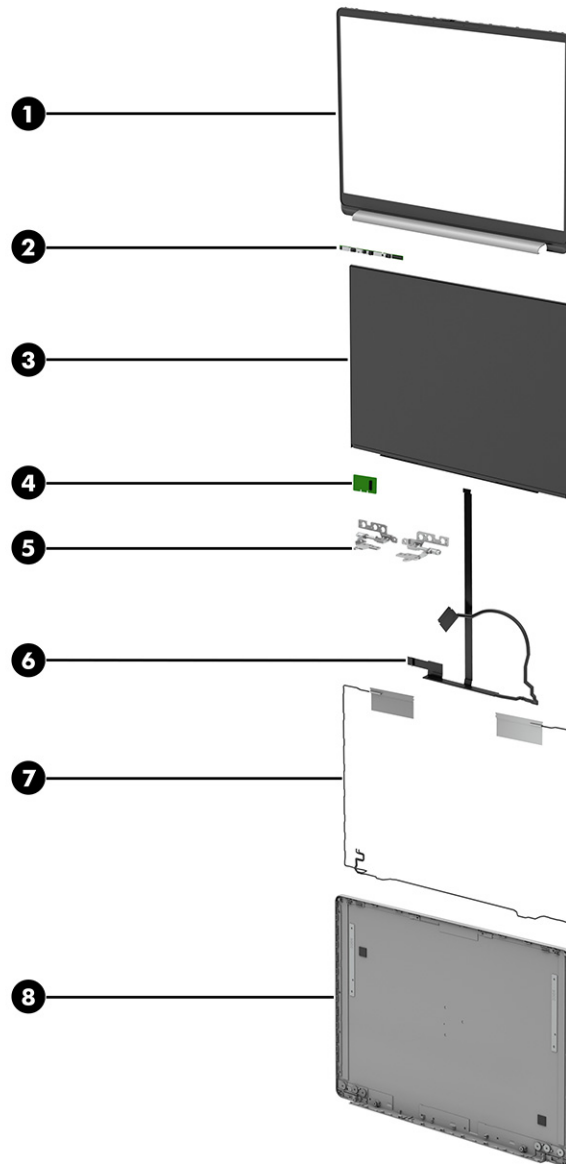


Table 3-2 Display component descriptions and part numbers

| Item | Component | Spare part number |
|-------------|---|--------------------------|
| (1) | Display bezel | |
| | Warm gold, IR | P80859-001 |
| | Glacier silver, IR | P80856-001 |
| | Mica silver, IR | P80857-001 |
| | Starlight blue, IR | P80858-001 |
| | Nouvelle silver, IR | P81308-001 |
| | Amethyst mineral, IR | Q12382-001 |
| | Sapphire earthen, IR | Q12383-001 |
| (2) | Camera module (includes rubber piece) | P81411-001 |
| (3) | Display panel | |
| | NOTE: Display panel adhesive is available as spare part number N44094-001. | |
| | FHD, antiglare, UWVA, 300 nits, low blue light | P80747-001 |
| | FHD, antiglare, UWVA, 300 nits, TOP, low blue light | P80748-001 |
| | FHD, antiglare, UWVA, 300 nits, low blue light | P80835-001 |
| | WUXGA, brightview, OLED, UWVA, 300 nits, low blue light | P80749-001 |
| (4) | OLED printed circuit assembly | |
| (5) | Display hinges (includes left and right hinges) | |
| | Hinge - plastic | P80884-001 |
| | Hinge - aluminum | P80885-001 |
| (6) | Display/camera cable | P81314-001 |
| (7) | WLAN antenna kit (includes antenna cables and transceivers) | P81315-001 |
| (8) | Display back cover | |
| | Glacier silver, plastic | P80843-001 |
| | Nouvelle, silver, aluminum, OLED panel | P81307-001 |
| | Mica silver, plastic | P80845-001 |
| | Starlit blue, plastic | P80846-001 |
| | Starlit blue, aluminum | P98827-001 |
| | Starlit blue, aluminum, OLED panel | P98828-001 |
| | Warm gold, plastic | P80847-001 |
| | Nouvelle silver, aluminum | P81306-001 |
| | Amethyst mineral, plastic | Q12388-001 |
| | Sapphire earthen, plastic | Q12389-001 |

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

| Component | Spare part number |
|--|-------------------|
| AC adapters | |
| 65 W, USB Type-C, straight, standard | P38779-001 |
| 65 W, USB Type-C, GaN, wall mount, fixed, 2 prong | P73759-001 |
| 65 W, USB Type-C, wall mount, 2 prong | P68491-001 |
| 65 W, USB Type-C, GaN, wall mount, fixed, 2 prong | P58629-001 |
| 65 W, USB Type-C, GaN, wall mount, foldable, 2 prong | P58630-001 |
| Screw Kit | P81313-001 |
| Power cords (C5, 1.0 m [3.3 ft], conventional with sticker) | |
| For use in Argentina | L19357-001 |
| For use in Australia | L19358-001 |
| For use in Denmark | L19360-001 |
| For use in Europe | L19361-001 |
| For use in India | L19363-001 |
| For use in Italy | L19364-001 |
| For use in Japan | L19365-001 |
| For use in South Korea | L19366-001 |
| For use in North America | L19367-001 |
| For use in the PRC | L19368-001 |
| For use in South America | L19369-001 |
| For use in Switzerland | L19370-001 |
| For use in Thailand | L19371-001 |
| For use in Taiwan | L19372-001 |
| For use in the United Kingdom | L19373-001 |
| For use in Thailand (bundle) | M85418-001 |
| Power cord (Duckhead, non-standard, straight, high-frequency) | |
| For use in Europe | P57782-001 |
| For use in the United Kingdom | P57783-001 |
| For use in Australia | P57784-001 |
| For use in South Korea | P57785-001 |
| For use in Thailand | P57786-001 |
| For use in the PRC | P57787-001 |

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

| Component | Spare part number |
|----------------------|--------------------------|
| For use in Argentina | P57788-001 |
| For use in India | P57790-001 |

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.


Tools required

You need the following tools to complete the removal and replacement procedures.

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.


 **NOTE:** As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors


Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.

 **IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:


- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

 **IMPORTANT:** To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 23](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-


Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

| Event | 55% relative humidity | 40% relative humidity | 10% relative humidity |
|---|-----------------------|-----------------------|-----------------------|
| Walking across carpet | 7500 V | 15,000 V | 35,000 V |
| Walking across vinyl floor | 3000 V | 5000 V | 12,000 V |
| Motions of bench worker | 400 V | 800 V | 6000 V |
| Removing dual in-line packages (DIPs) from plastic tube | 400 V | 700 V | 2000 V |
| Removing DIPs from vinyl tray | 2000 V | 4000 V | 11,500 V |
| Removing DIPs from polystyrene foam | 3500 V | 5000 V | 14,500 V |
| Removing bubble pack from PCB (printed circuit board) | 7000 V | 20,000 V | 26,500 V |
| Packing PCBs in foam-lined box | 5000 V | 11,000 V | 21,000 V |

 **NOTE:** Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.

 **NOTE:** As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

| Method | Voltage |
|-----------------------|---------|
| Antistatic plastic | 1500 |
| Carbon-loaded plastic | 7500 |
| Metalized laminate | 15,000 |

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.


1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - Select the **HP Easy Clean** icon in the taskbar.
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 25](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 26](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer


Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 27](#).


1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 26](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.


Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.


After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 25](#), [Caring for wood veneer \(select products only\) on page 27](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.


Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.


 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 25](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 26](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines


Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information


Use this information to find the HP support that you need.


Table 4-3 Support information locations

| Service consideration | Path to access information |
|--|--|
| <p>Records of reported failure incidents stored on the computer</p> | <p>Windows:</p> <p>Pre-operating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> 3. Press f10 to enter the BIOS setup. 4. Complete one of these tasks: <ul style="list-style-type: none"> • (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. • (On consumer products) Under the Main tab, select System Log. <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. <p>ChromeOS™:</p> <ol style="list-style-type: none"> 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>. |
| <p>Technical bulletins and alerts</p> | <p>To find technical bulletins, alerts, guides, and whitepapers:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com/support. 2. Follow the instructions to find your product. 3. Select Bulletins and Alerts to view technical bulletins. |
| <p>Repair professionals</p> | <p>To locate repair professionals:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Select Authorized service providers. 3. Select your location. |
| <p>Component and diagnosis information, failure detection, and required action</p> | <p>To locate diagnosis information and actions:</p> <ol style="list-style-type: none"> 1. Go to http://www.hp.com/go/techcenter/pcdiags. 2. Select the issue you want to diagnose. |

5 Removal and replacement procedures for Customer Self-Repair parts


This chapter provides removal and replacement procedures for Customer Self-Repair parts.


 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use these procedures to remove and replace computer components.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

Use these procedures to remove and replace computer components.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 21](#).

1. Turn off the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.

Table 5-1 Bottom cover description and part number

| Description | Spare part number |
|---------------------------|-------------------|
| Iron gray, plastic | P80865-001 |
| Glacial silver, plastic | P80866-001 |
| Nouvelle silver, aluminum | P81309-001 |


Table 5-1 Bottom cover description and part number (continued)

| Description | Spare part number |
|---------------------------|-------------------|
| Nouvelle silver, plastic | P82051-001 |
| Starlit blue, plastic | P98829-001 |
| Starlit blue, aluminum | P98830-001 |
| Amethyst mineral, plastic | Q12384-001 |
| Sapphire earthen, plastic | Q12385-001 |

Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).

Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface with the front toward you.
2. Remove the top two Phillips M2.5 × 6.0 screws **(1)** that secure the bottom cover to the computer.
3. Remove the bottom two Phillips M2.0 × 4.0 screws **(2)** that secure the bottom cover to the computer.

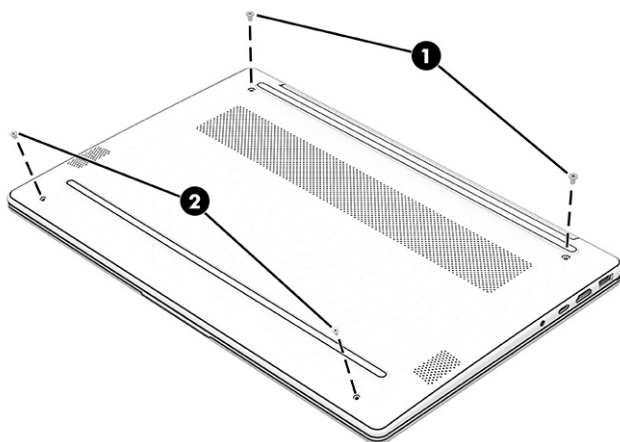


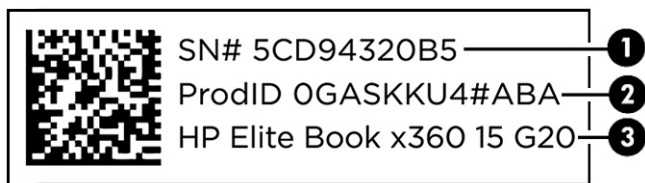


Table 5-2 Service label components

| Component | |
|-----------|----------------------------------|
| (1) | Serial number |
| (2) | Product ID |
| (3) | HP product name and model number |

New bottom cover label location

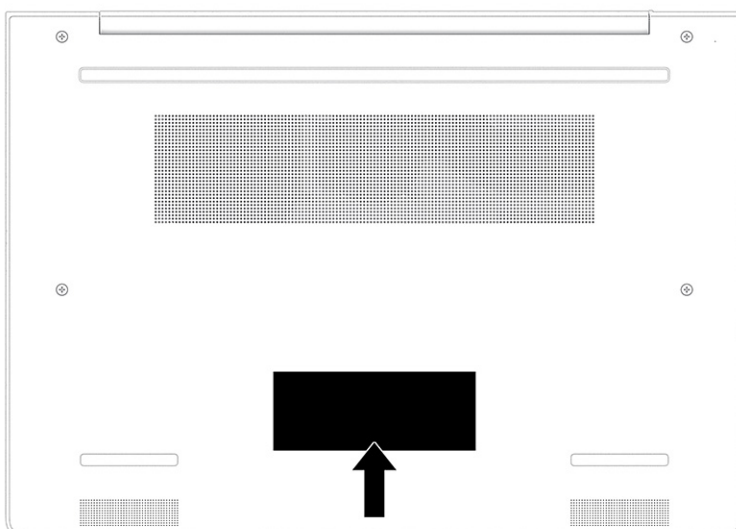

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Removing and reinstalling the same battery on page 32](#).
- To install a new battery, see [Installing a new battery on page 34](#).

Removing and reinstalling the same battery

Use this procedure and illustration to remove the battery.


⚠ WARNING! To avoid personal injury and damage to the product:


- Do *not* puncture, twist, or crack the battery.
 - Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
 - Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
 - Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
 - Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.
-

For additional battery information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide, select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).


 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.


Remove the battery:

1. Remove the five Phillips M2.0 x 4.0 screws **(1)** that secure the battery to the computer.

2. Remove the battery from the computer (2).

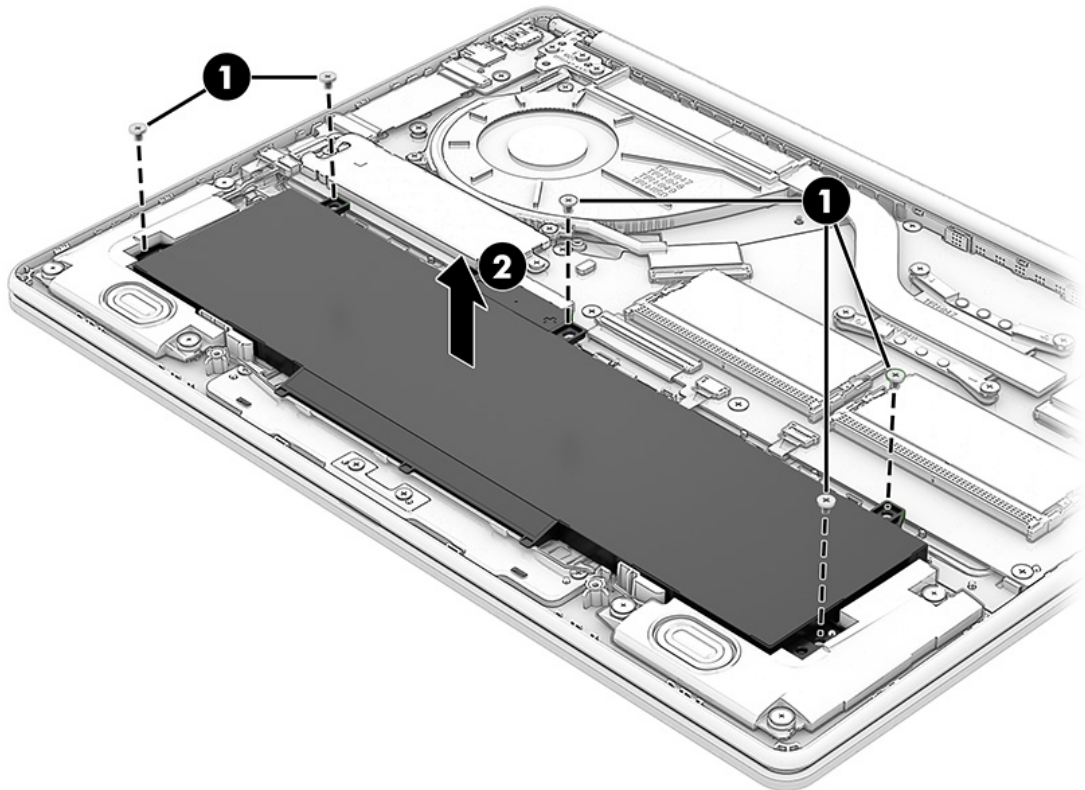

Reverse this procedure to install the battery.

 **NOTE:** When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Installing a new battery

To replace the battery, use these procedures and illustrations. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-3 Battery description and part number

| Description | Spare part number |
|--------------------------|-------------------|
| Battery (3 cell, 60 Whr) | P53583-001 |

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.

- Locate the nearest ABC dry chemical fire extinguisher for use in an emergency.

⚠ WARNING! This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

📝 NOTE: Screw locations, latch locations, and internal components might vary.

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.


📝 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:


1. To remove the battery using the revive kit:
 - a. Open the empty battery containment tray.



- b. Remove the paper backing layer from the adhesive on the tray.

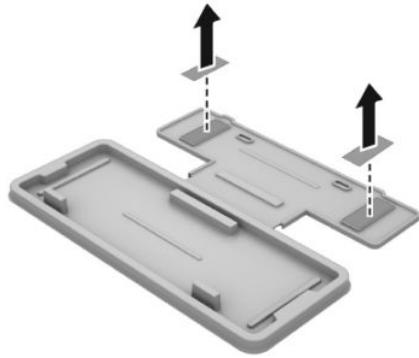


- c. Turn the tray (1) over so that the adhesive is facing down.
- d. Place the tray (2) centered on the battery.
- e. Press down on the indentations on the tray (3) to adhere it to the battery.

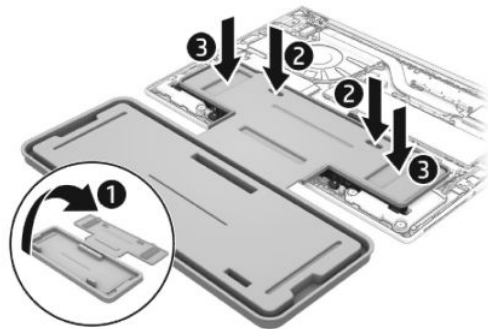



- f. Remove the Phillips screws (1) that secure the battery to the computer. Screw locations might vary.

- g. Lift the top of the tray (2) to remove the battery from the computer.

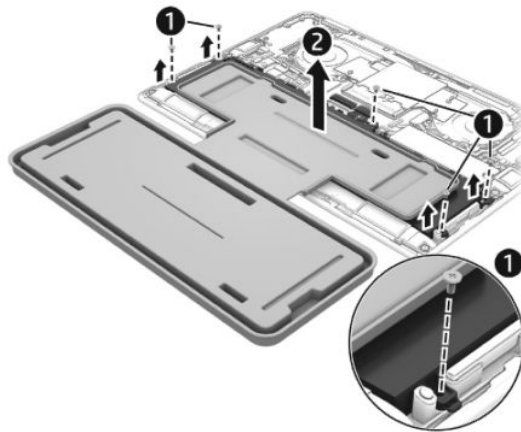


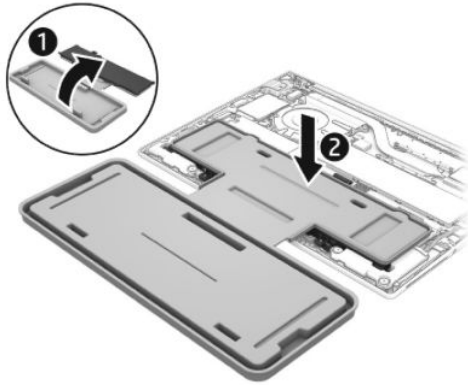
- h. Rotate the battery up and over into the cavity of the containment tray.

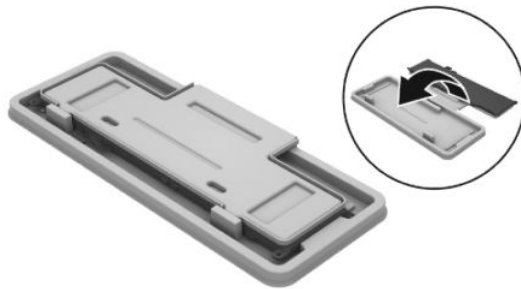


 **NOTE:** Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.


2. To install the battery using the revive kit:
- Open the containment tray that includes the new battery.
 - Turn the tray (1) over so the battery is facing downward, and then insert the battery (2) into the computer. Adhesive secures the battery to the tray.

 **NOTE:** To avoid damage when inserting the battery into the computer, be sure that the power connector on the battery lines up and successfully mates with the connector on the system board.




- c. Install the screws (1) to secure the battery. Screw locations might vary.
- d. Lift the containment tray (2) off the battery,

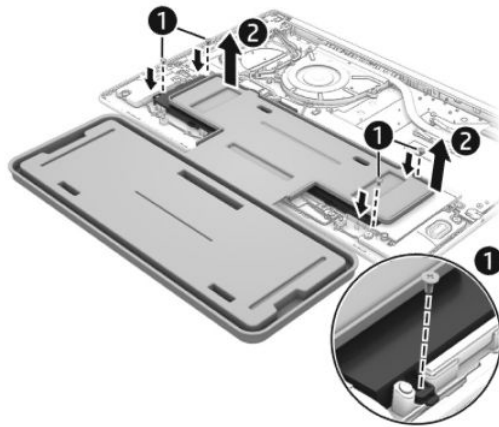



 **NOTE:** When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.


 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

Use the procedures described in this section to remove and replace computer components.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

Use these procedures to remove and replace computer components.

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 21](#).

1. Turn off the computer. If you are unsure whether the computer is off or in hibernation or sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Solid-state drive

Use this procedure and illustration to remove the SSD.

Table 6-1 SSD descriptions and part numbers

| Description | Spare part number |
|--------------------|-------------------|
| 1 TB, PCIe-4 × 4 | not spared |
| 512 GB, PCIe-4 × 4 | N77392-005 |
| 256 GB, PCIe-4 × 4 | N77391-005 |

Table 6-1 SSD descriptions and part numbers (continued)


| Description | Spare part number |
|--------------------|-------------------|
| 256 GB, PCIe-3 x 4 | P90856-005 |

Before removing the SSD, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).

Remove the SSD:

1. Remove the Phillips M2.0 x 2.5 screw (1) that secures the drive to the computer.
2. Pull the drive (2) away from the socket to remove it.

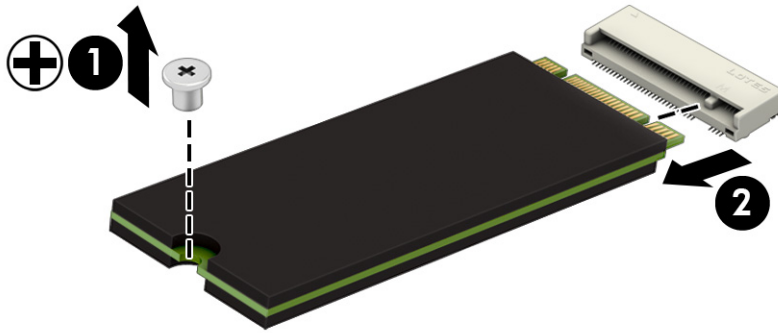

Reverse this procedure to install the SSD.


 **NOTE:** SSDs are designed with a notch to prevent incorrect insertion.

WLAN module

Use this procedure and illustration to install the WLAN module.

Table 6-2 WLAN module description and part number

| Description | Spare part number |
|---|-------------------|
| Qualcomm FastConnect 6900 M.2 2230 Wi-Fi®6E + Bluetooth 5.3 WW WLAN | P13807-005 |

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless


devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).


Remove the WLAN module:

1. Carefully disconnect the antenna cables (1) from the module.
2. Remove the Phillips M2.0 × 2.5 screw (2), and then remove the WLAN module (3).

 **NOTE:** The #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

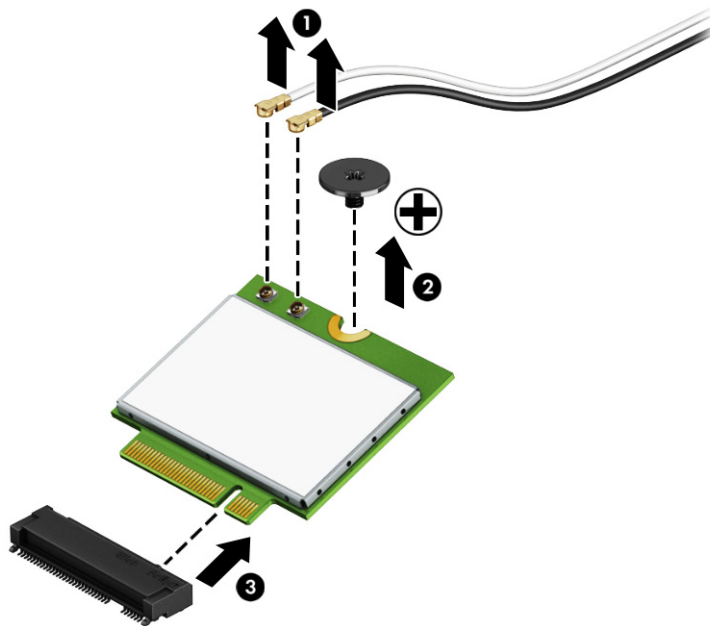

3. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

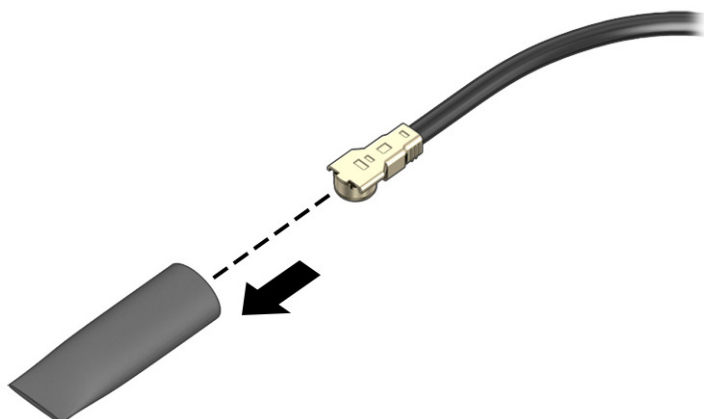

Reverse this procedure to install the WLAN module.

Speakers

Use this procedure and illustration to remove the speakers.

Table 6-3 Speaker description and part number

| Description | Spare part number |
|-------------|-------------------|
| Speaker Kit | P81312-001 |


Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).

Remove the speakers:

1. Disconnect the speaker cable from the USB audio board **(1)**.
2. Remove the cable from the routing path along the bottom of computer **(2)**.
3. Remove the three Phillips M2.0 x 4.0 screws **(3)** that secure each speaker to the computer.

4. Remove the speakers (4) from the computer.

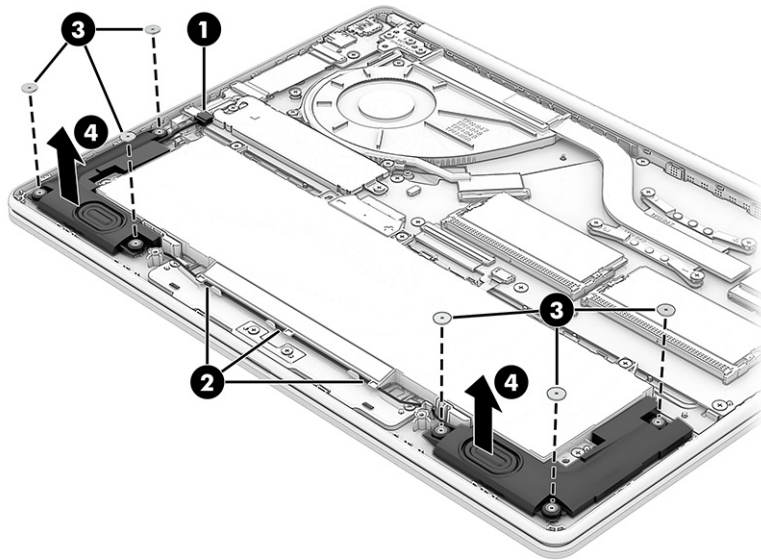

Reverse this procedure to install the speakers.

Touchpad

Use this procedure and illustration to remove the touchpad.

Table 6-4 Touchpad description and part number

| Description | Spare part number |
|-----------------|-------------------|
| Glacier silver | P80886-001 |
| Mica silver | P80888-001 |
| Starlit blue | P80889-001 |
| Warm gold | P80890-001 |
| Nouvelle silver | P82052-001 |


Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).


Remove the touchpad:

1. Remove the four Phillips M2.0 × 3.0 screws (1) that secure the touchpad bracket to the computer.

2. Remove the touchpad bracket from the computer (2).

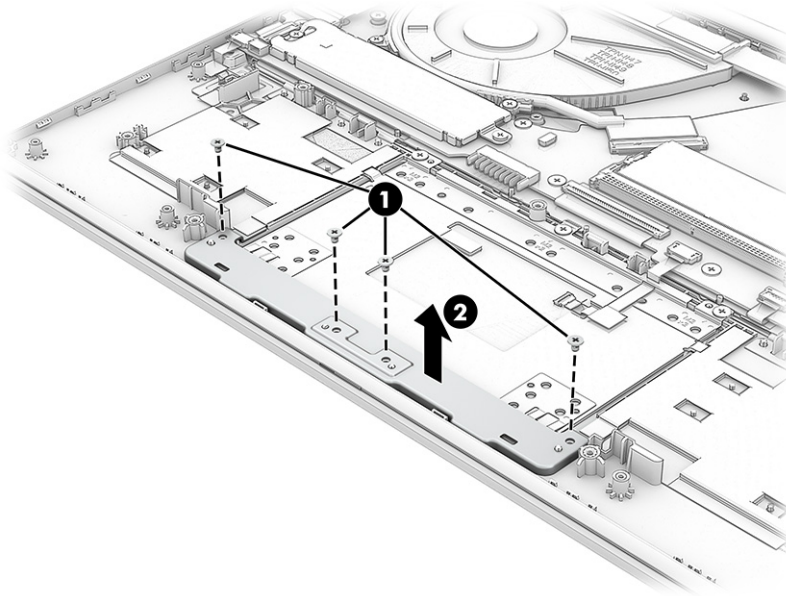

3. Disconnect the cable from the ZIF connector (1) on the touchpad.
4. Remove the three Phillips M2.0 × 3.0 screws (2) that secure the touchpad to the computer.
5. Remove the touchpad (3) from the computer.

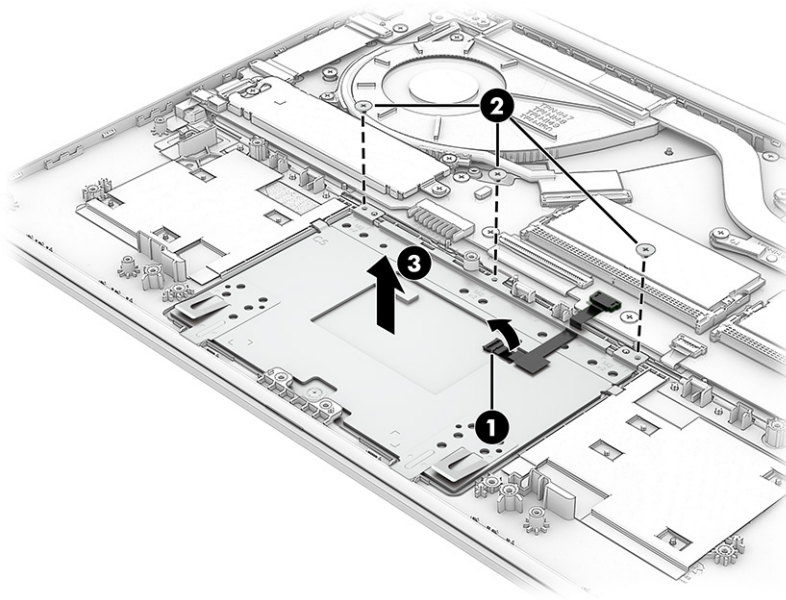

Reverse this procedure to install the touchpad.

Fan

Use this procedure and illustration to remove the fan.

Table 6-5 Fan description and part number


| Description | Spare part number |
|-------------|-------------------|
| Fan, 15 W | P80878-001 |

Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).

Remove the fan assembly:

1. Disconnect the fan cable (1) from the system board.
2. Remove the three Phillips M2.0 × 5.0 screws (2) that secure the fan to the computer, and then remove the fan (3) from the computer.

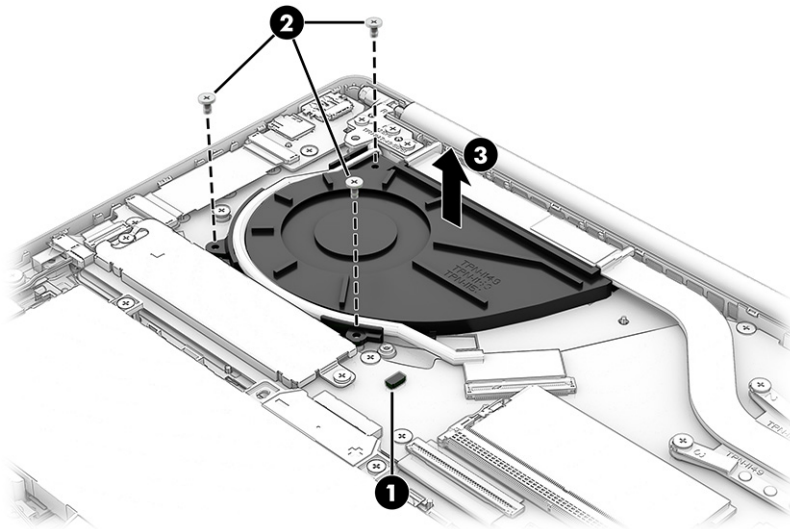

Reverse this procedure to install the fan.

Display assembly

Use these procedures and illustrations to remove and disassemble the display assembly.


Full hinge-up displays are not available as spare parts. Spare parts for displays are available only at the subcomponent level.

Before removing the display panel, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).

Remove the display assembly:

1. Disconnect the display cable (1) and disconnect the antenna cables from the WLAN module (2). Remove the display cable from the fan area (3).

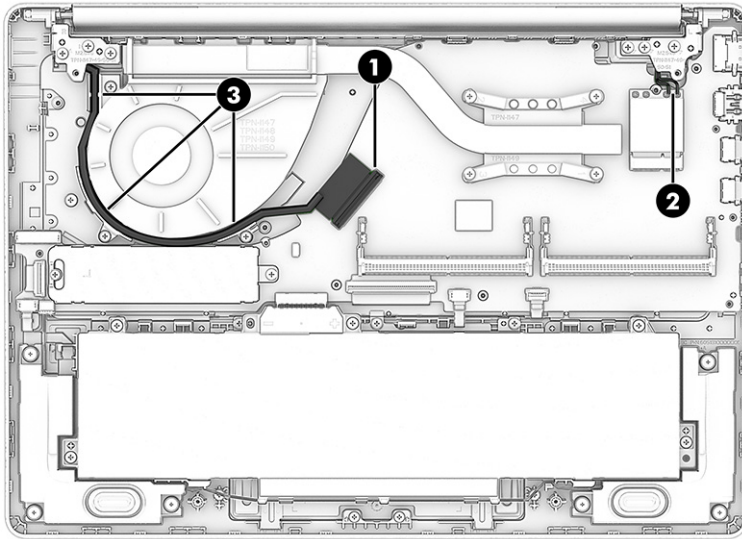


2. Remove the six Phillips M2.5 × 5.0 screws that secure the display assembly to the computer.

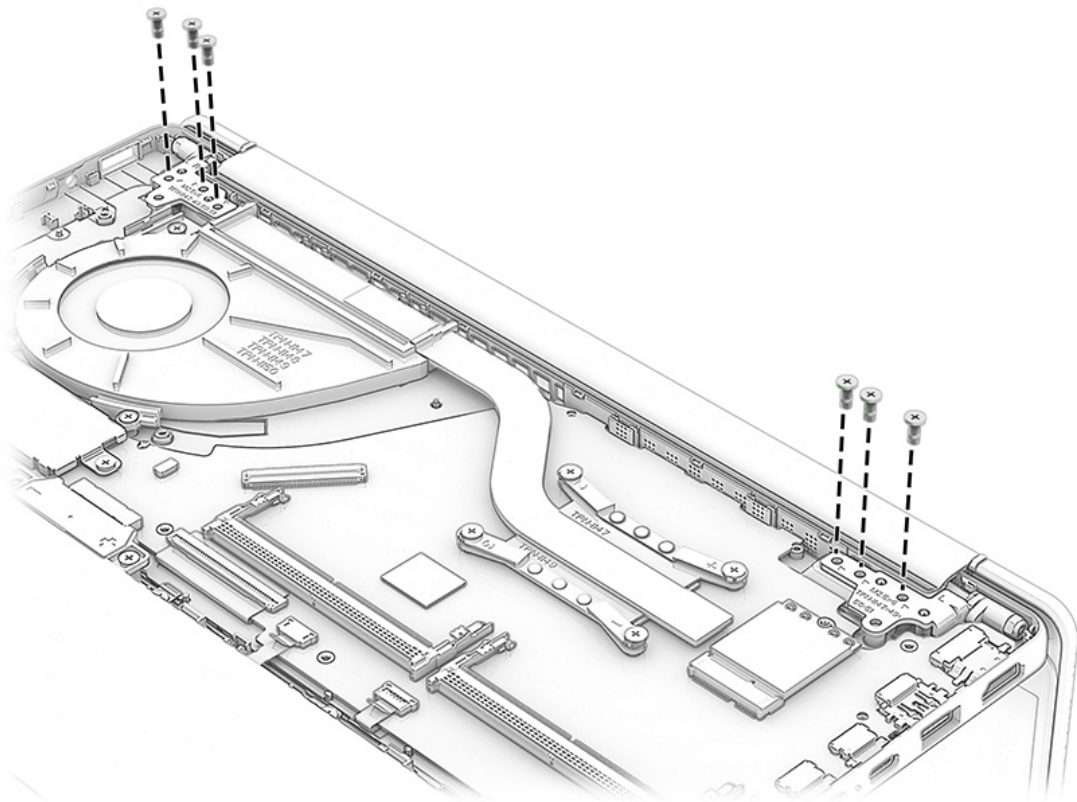


3. Rotate the display (1) upward to open the hinges, and then separate the display assembly (2) from the computer.


4. Separate the display assembly from the computer.

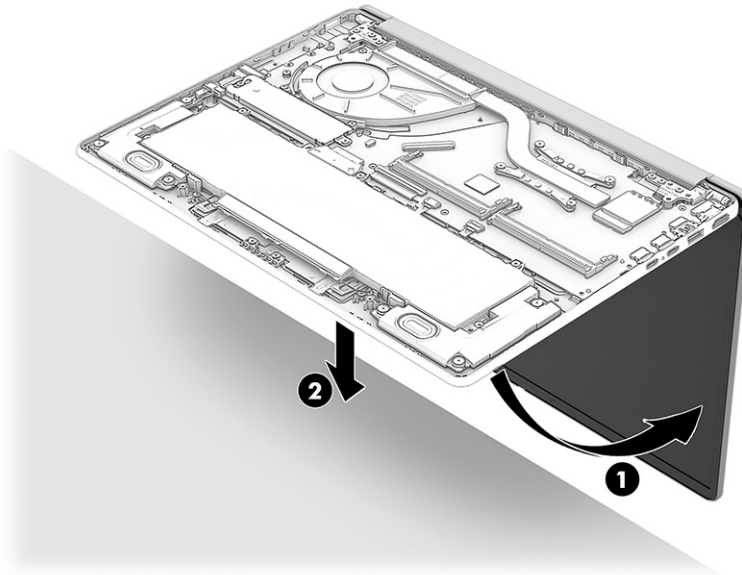

5. To replace display assembly subcomponents:

- a. Flex the top (1) and the inside edges of the left and right sides (2) of the bezel to release it.
- b. Slide a flat tool (3) across the inside of the bottom of the bezel to release it, and then remove the bezel from the display.

 **NOTE:** To avoid damaging the panel, do not use a tool to release the inside of the bezel. You can use a tool only when you insert it from the outside of the top, left, and right sides of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during removal.

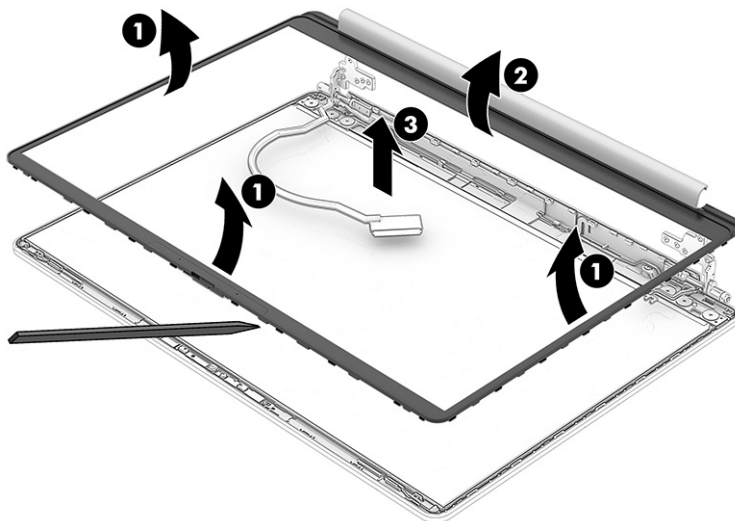


6. To remove the hinges from the display enclosure:

- a. Remove the six Phillips broadhead M2.0 × 2.0 screws (1) from each hinge.


- b. Remove the two Phillips M2.5 × 5.0 screws **(2)** from the edge.
- c. Remove the hinges **(3)** from the display.


The display hinges are available as spare part numbers P80884-001 and P80885-001.

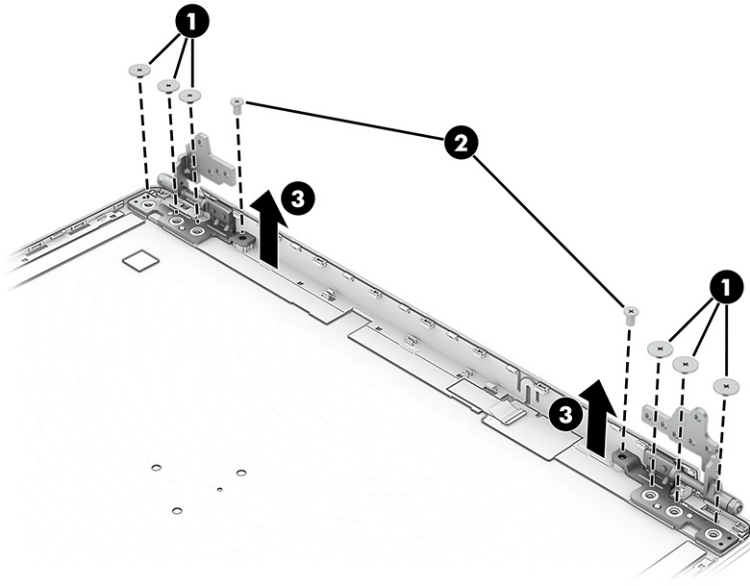

- 7. To remove the display panel:
 - a. The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the end of the tape **(1)**.
 - b. Disconnect the OLED cable **(2)**.
 - c. Tilt and lift out the display. Remove the cover tape **(3)**.
 - d. Lift the retainer bar **(4)**.
 - e. Disconnect the display cable **(5)**.


 **NOTE:** Be sure that the pull tabs on the adhesive strips are visible before replacing the cover.

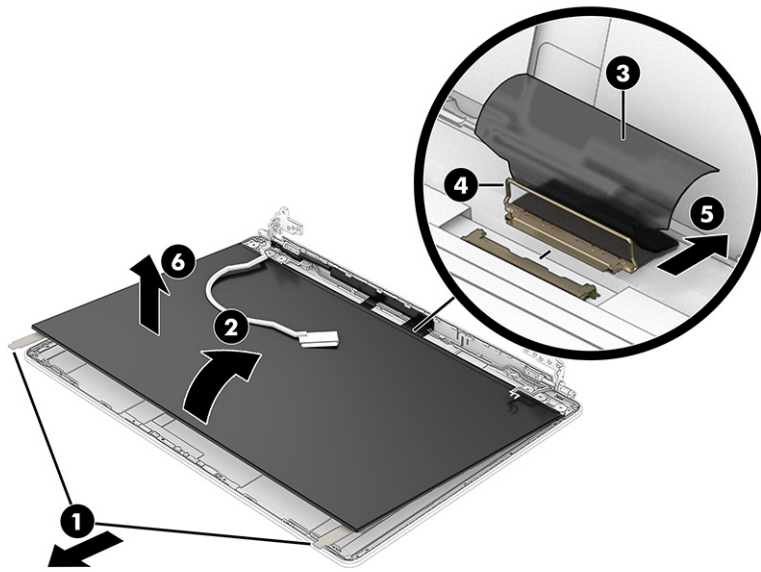


 **NOTE:** When replacing the touch control board or display panel, be sure to update the touch firmware, available on the [HP product support](#) page.

8. To remove the camera module:


- Lift up evenly across the module (1) and peel the module up from the display back cover, and then disconnect the cable from the reverse ZIF connector (2) on the module. Remove the module (3).

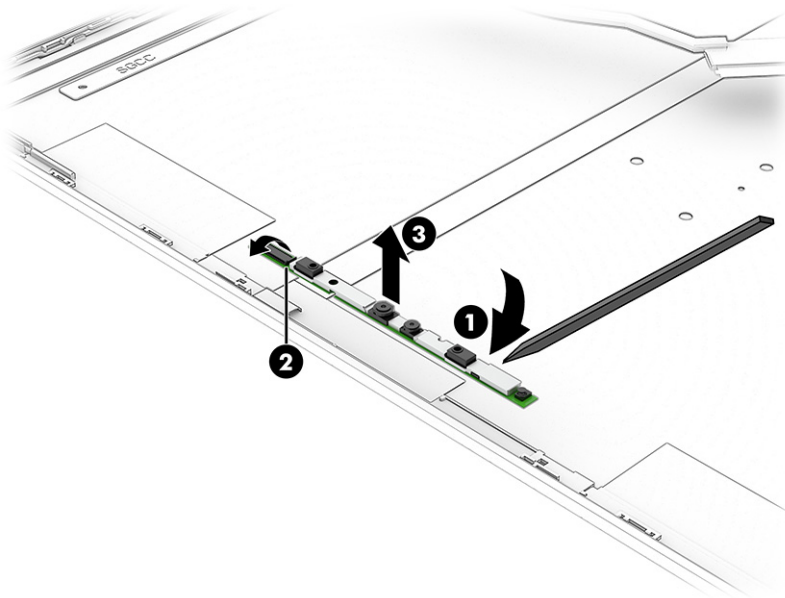

- To remove the display/camera cable, peel the cable (1) off the inside of the display back cover, remove the cable from the clips (2) at the bottom of the display back cover, and then remove the cable (3).

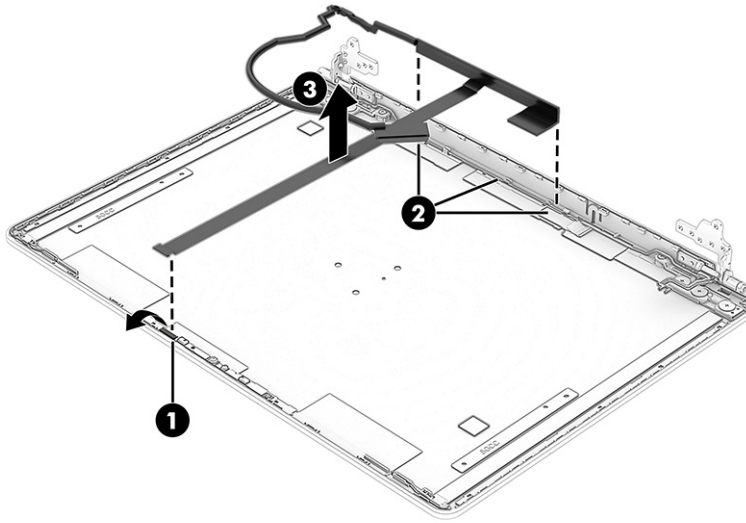

- To remove the antenna cables, peel the antennas (1) off the inside of the display back cover, remove the cables from the clips (2) at the bottom of the cover, and then remove the antennas and cables.

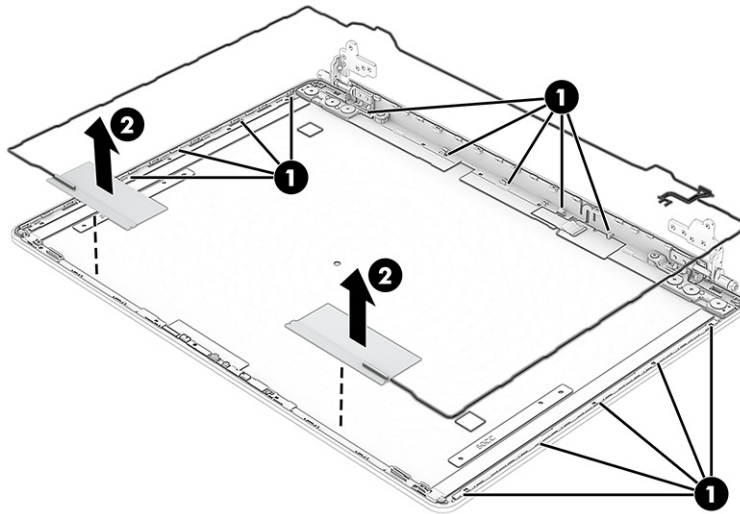

Reverse this procedure to reassemble and replace the display assembly.

System board

Use these procedures and illustrations to remove the system board.

Table 6-6 System board descriptions and part numbers

| Description | Spare part number |
|---|-------------------|
| System board (includes processor): | |

Table 6-6 System board descriptions and part numbers (continued)

| Description | Spare part number |
|--|-------------------|
| Qualcomm Snapdragon X12-6100 processor, 16 GB of system memory | P80743-601 |
| Qualcomm Snapdragon X12-6100 processor, 32 GB of system memory | P80744-601 |
| Qualcomm Snapdragon X12-6100 processor, 16 GB of system memory (PRC) | P80745-601 |
| Qualcomm Snapdragon X12-6100 processor, 32 GB of system memory (PRC) | P80746-601 |

Before removing the system board, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:


- WLAN module (see [WLAN module on page 40](#)).
- Heat sink (see [Heat sink on page 52](#)).

Remove the system board:

1. Disconnect the following cables from the system board:
 - Backlight cable **(1)**
 - Touchpad cable **(2)**
 - Keyboard cable **(3)**
 - Speaker cable **(4)**
 - I/O daughter board cable **(5)**
 - Display cable **(6)**
 - Fan cable **(7)**

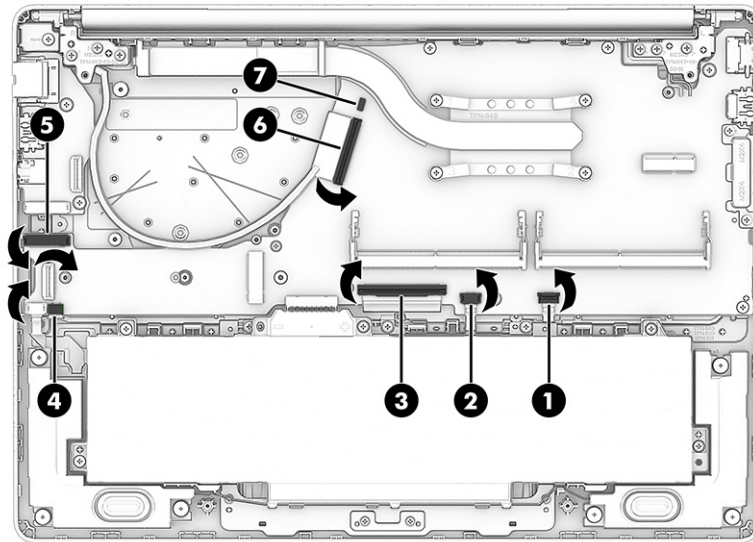

2. Remove the ten Phillips M2.0 × 5.0 screws (1) that secure the system board to the computer, and then remove the bracket (2).

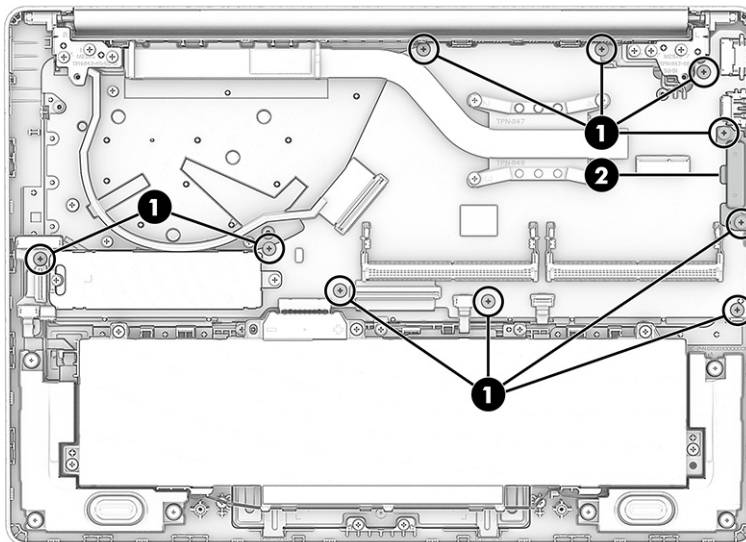

Reverse this procedure to install the system board.

Heat sink

Use this procedure and illustration to remove the heat sink.

Table 6-7 Heat sink description and part number


| Description | Spare part number |
|-------------|-------------------|
| Heat sink | P81311-001 |

Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).


Remove the heat sink:

1. In the order indicated on the heat sink, remove the four Phillips M2.0 × 4.0 screws (1) that secure the heat sink to the computer.
2. Remove the heat sink (2) from the computer.

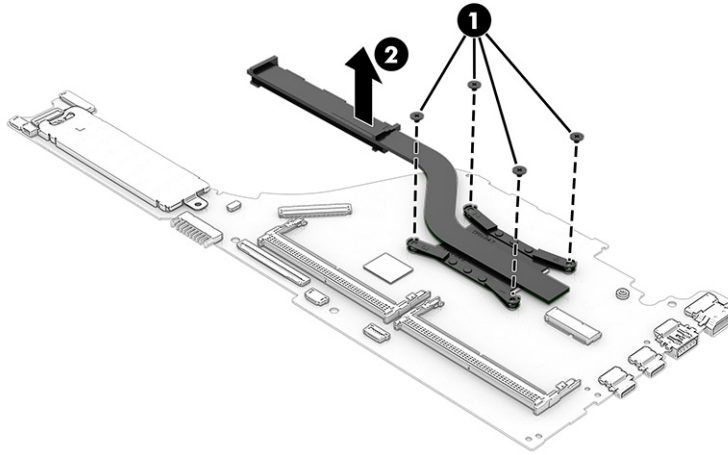

3. Thoroughly clean and replace the gray thermal paste on the heat sink each time it is removed. Each time the heat sink is removed, thoroughly clean and replace the gray thermal grease from the surface of the heat sink (1) and system board (2). Remember to reapply on the heat sink instead of

the system board. Thoroughly clean the gray thermal grease from system boards that you plan to recycle, because the gray grease will no longer be in a sealed space.

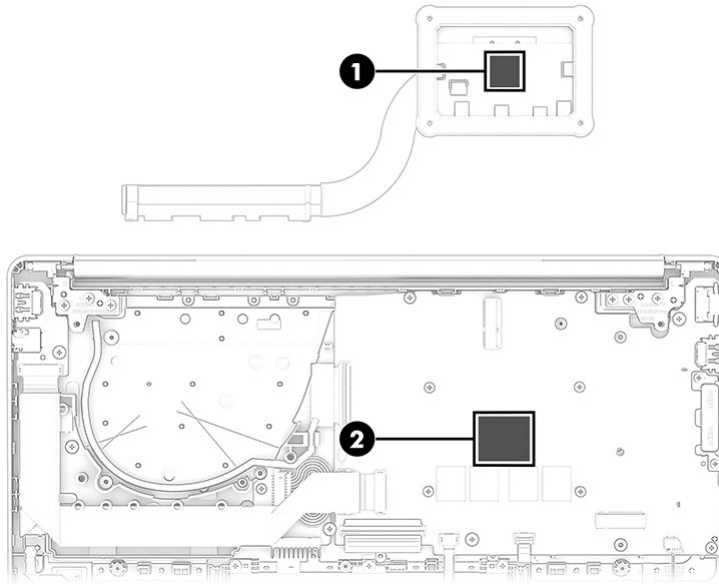

USB board

To remove the USB board, use this procedure and illustration.

Table 6-8 USB board description and part number

| Description | Spare part number |
|----------------------|-------------------|
| USB board with cable | P84819-001 |


Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 29](#)).
2. Remove the bottom cover (see [Bottom cover on page 29](#)).
3. Remove the battery (see [Removing and reinstalling the same battery on page 32](#)).

Remove the USB board:

1. Disconnect the cable from the system board ZIF connector **(1)**.
2. Remove the Phillips M2.0 × 3.0 screw **(2)** that secures the board to the computer.

- Lift the inside of the board up (3), and then pull the board up (4) and into the computer to remove it.

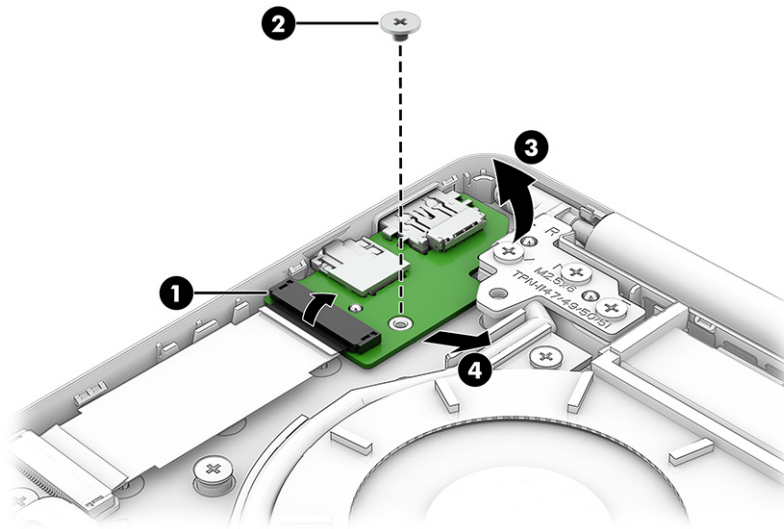

Reverse this procedure to install the USB board.

Keyboard with top cover

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part numbers for the top cover with keyboards. The second table provides the country codes.

Table 6-9 Top cover with keyboard descriptions and part numbers

| Description | Spare part number |
|--|-------------------|
| Glacier silver top cover, canvas gray keyboard and clickpad, backlit keyboard | P80838-001 |
| Mica silver top cover, iron gray keyboard and clickpad, backlit keyboard | P80840-001 |
| Starlit blue top cover, iron gray keyboard and clickpad, backlit keyboard | P80841-001 |
| Warm gold top cover, iron gray keyboard and clickpad, backlit keyboard | P80842-001 |
| Nouvelle silver top cover, darker nouvelle silver keyboard and clickpad, backlit keyboard | P81076-001 |
| Starlit blue top cover, darker starlit blue opaque keyboard and clickpad, backlit AI keyboard (aluminum) | P98844-001 |

Table 6-10 Spare part country codes


| For use in country or region | Spare part number | For use in country or region | Spare part number | For use in country or region | Spare part number |
|------------------------------|-------------------|------------------------------|-------------------|------------------------------|-------------------|
| Belgium | -A41 | Iceland | -DD1 | Saudi Arabia | -171 |
| Brazil | -201 | India | -D61 | Slovenia | -BA1 |
| Bulgaria | -261 | Israel | -BB1 | South Korea | -AD1 |
| Chile | -161 | Italy | -061 | Spain | -071 |
| Czech Republic/Slovakia | -FL1 | Japan | -291 | Switzerland | -BG1 |

Table 6-10 Spare part country codes (continued)

| For use in country or region | Spare part number | For use in country or region | Spare part number | For use in country or region | Spare part number |
|-------------------------------------|--------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|
| Denmark, Finland, and Norway | -DH1 | Kazakhstan | -DF1 | Taiwan | -AB1 |
| French Canada | -DB1 | The Netherlands | -B31 | Thailand | -281 |
| France | -051 | Northern Africa | -FP1 | Turkey | -141 |
| Germany | -041 | Portugal | -131 | Ukraine | -BD1 |
| Greece | -151 | Romania | -271 | United Kingdom | -031 |
| Hungary | -211 | Russia | -251 | United States | -001 |


7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).

 **IMPORTANT:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Use one of these options:

- Turn on or restart the computer and quickly press **f10**.
- Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.


- HP Support Assistant
 1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
 2. Under **My notebook**, select **Specifications**.
- Setup Utility (BIOS)

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 57](#)).
 2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **ctrl+alt+s**.


To check for later BIOS versions, see [Preparing for a BIOS update on page 58](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the HP AC adapter provided with the computer (select products only), a replacement AC adapter provided by HP, or an AC adapter with the power rating specified on the product label. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Updates**. The **Checking for Updates** window opens, and Windows checks for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).

The BIOS installation begins.


5. Complete the installation by following the on-screen instructions.




NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.


 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 61](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 61](#).

Creating a system restore


System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.


1. Run a Microsoft System Restore.
2. Run Reset this PC.

 **NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see [Recovering using the HP Recovery USB flash drive on page 61](#).

For more information about the first two methods, see the Get Help app:


- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.

 **NOTE:** You must be connected to the internet to access the Get Help app.

Recovering using the HP Recovery USB flash drive


You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive \(select products only\) on page 60](#).

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.


To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.

 **NOTE:** HP recommends that you follow the [Restoring and recovery methods on page 61](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
 - Volume up
 - Volume down

Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the OS
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 64](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.

2. Select **Fixes & Diagnostics**.
3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu.

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store


You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.


The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

 **NOTE:** For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 66](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 67](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable Fast Boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable Fast Boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

| | Metric | U.S. |
|--|---------------------------|---------------------|
| Dimensions | | |
| Width | 314.5 mm | 12.37 in |
| Depth | 226.0 mm | 8.88 in |
| Height for TWL/RPL-UR/PTL | | |
| DF/DF+ | 17.95 mm | 0.71 in |
| FF | 17.45 mm | 0.69 in |
| FF+ | 17.15 mm | 0.68 in |
| Height for RPL-HR | | |
| DF/DF+ | 19.95 mm (40W) | 0.79 in |
| FF | 19.45 mm (40W) | 0.77 in |
| FF+ | 18.85 mm (40W) | 0.75 in |
| Weight | 1422 g | 3.14 lb |
| Input power | | |
| Operating voltage and current | 19.5 V DC @ 3.33 A - 65 W | |
| | 19.5 V DC @ 2.31 A - 45 W | |
| Temperature | | |
| Operating | 5°C to 35°C | 41°F to 95°F |
| Nonoperating | -20°C to 60°C | -4°F to 140°F |
| Relative humidity (noncondensing) | | |
| Operating | 10% to 90% | |
| Nonoperating | 5% to 95% | |
| Maximum altitude (unpressurized) | | |
| Operating | -15 m to 3,048 m | -50 ft to 10,000 ft |

Table 10-1 Computer specifications (continued)

| | Metric | U.S. |
|--------------|-------------------|---------------------|
| Nonoperating | -15 m to 12,192 m | -50 ft to 40,000 ft |



NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

| | Metric | U.S. |
|-------------------------|---|---------|
| Active diagonal size | 39.6 cm | 15.6 in |
| Resolution | 1920 × 1080 (FHD) 3840 × 2160 (UHD) | |
| Surface treatment | Antiglare (FHD, UHD panels) Brightview (OLED panel) | |
| Brightness | 250 nits (FHD, 45% NTSC panel) 300 nits (FHD, 72% NTSC/100% sRGB panels) 400 nits (UHD panel) | |
| Viewing angle | UWVA | |
| Backlight | WLED AMOLED | |
| Display panel interface | eDP | |

Solid-state drive specifications

This section provides specifications for your SSDs.

Table 10-3 SSD specifications

| | 256 GB* | 256 GB OPAL2* | 512 GB* | 512 GB TLC* | 1 TB/2 TB* |
|-------------------|---------|------------------|---------|-------------|------------|
| Dimensions | | | | | |
| Height | 2.3 mm | 2.3 mm | 2.3 mm | 2.3 mm | 2.3 mm |
| Length | 80 mm | 80 mm | 80 mm | 80 mm | 80 mm |
| Width | 22 mm | 22 mm | 22 mm | 22 mm | 22 mm |
| Weight | < 10 g | < 10 g | < 10 g | < 10 g | < 10 g |

Table 10-3 SSD specifications (continued)

| | 256 GB* | 256 GB OPAL2* | 512 GB* | 512 GB TLC* | 1 TB/2 TB* |
|-----------------------------------|---------------------------------------|---------------------------------------|---------------------------------------|---------------------------------------|--|
| Interface type | PCIe | PCIe | PCIe | PCIe | PCIe |
| Ready time, maximum (to not busy) | 1.0 ms | 1.0 ms | < 1.0 ms | < 1.0 ms | 1.0 ms |
| Access times, logical | 0.1 ms | 0.1 ms | 0.1 ms | 0.1 ms | 0.1 ms |
| Transfer rate | | | | | |
| Sequential read | Up to 3100 MBps | Up to 3100 MBps | Up to 3500 MBps | Up to 6450 MBps | Up to 6400 MBps |
| Random read | Up to 300,000 IOPs | Up to 300,000 IOPs | Up to 300,000 IOPs | Up to 300,000 IOPs | Up to 300,000 IOPs |
| Sequential write | Up to 1200 MBps | Up to 1200 MBps | Up to 1600 MBps | Up to 3500 MBps | Up to 5000 MBps |
| Random write | Up to 100,000 IOPs | Up to 100,000 IOPs | Up to 100,000 IOPs | Up to 100,000 IOPs | Up to 100,000 IOPs |
| Total logical sectors | 500,118,192 | 1,000,215,216 | 1,000,215,216 | 1,000,215,216 | 1 TB: 2,000,409,264 2 TB: 4,000,797,360 |
| Operating temperature | 0°C to 70°C (32°F to 158°F) | 0°C to 70°C (32°F to 158°F) | 0°C to 70°C (32°F to 158°F) | 0°C to 70°C (32°F to 158°F) | 0°C to 70°C (32°F to 158°F) |

*Actual accessible capacity is less. Actual drive specifications might differ slightly.



NOTE: Certain restrictions and exclusions apply. Contact support for details.

11 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 11-1 Power cord requirements for specific countries and regions

| Country/region | Accredited agency | Applicable note number |
|----------------|-------------------|------------------------|
| Argentina | IRAM | 1 |
| Australia | SAA | 1 |
| Austria | OVE | 1 |
| Belgium | CEBEC | 1 |
| Brazil | ABNT | 1 |
| Canada | CSA | 2 |
| Chile | IMQ | 1 |
| Denmark | DEMKO | 1 |
| Finland | FIMKO | 1 |
| France | UTE | 1 |

Table 11-1 Power cord requirements for specific countries and regions (continued)

| Country/region | Accredited agency | Applicable note number |
|--------------------------------|-------------------|------------------------|
| Germany | VDE | 1 |
| India | BIS | 1 |
| Israel | SII | 1 |
| Italy | IMQ | 1 |
| Japan | JIS | 3 |
| Netherlands | KEMA | 1 |
| New Zealand | SANZ | 1 |
| Norway | NEMKO | 1 |
| The People's Republic of China | CCC | 4 |
| Saudi Arabia | SASO | 7 |
| Singapore | PSB | 1 |
| South Africa | SABS | 1 |
| South Korea | KTL | 5 |
| Sweden | SEMKO | 1 |
| Switzerland | SEV | 1 |
| Taiwan | BSMI | 6 |
| Thailand | TISI | 1 |
| United Kingdom | ASTA | 1 |
| United States | UL | 2 |

1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a 2-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a 2-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about lithium-ion batteries and the factors that can accelerate battery swelling, see https://support.hp.com/us-en/document/ish_6824662-6824706-16.

Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact <https://www.hp.com/go/contacthp> to understand what battery replacement options are available.

Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

Adaptive Battery Optimizer (consumer notebooks)

Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling Adaptive Battery Optimizer on your HP notebook, see https://support.hp.com/us-en/document/ish_9908083-9908127-16.

HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see https://support.hp.com/us-en/document/ish_4449597-3519507-16.

13 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

- A**
 - AC adapter and battery light, identifying 5
 - AC adapter, spare part number 19
 - AC adapters, spare part numbers 19
 - action key, identifying 11
 - antenna
 - illustrated 18
 - spare part number 18
 - audio-out (headphone)/audio-in (microphone) combo jack, identifying 4
 - audio, product description 1
- B**
 - backup, creating 60
 - backups 60
 - battery swelling 75
 - BIOS
 - determining version 57
 - downloading an update 58, 59
 - starting the Setup Utility 57
 - updating 57
 - Bluetooth label 12
 - boot order, changing 62
 - bottom components 11
 - bottom cover
 - illustrated 16
 - removal 29
 - spare part number 16, 29
 - buttons
 - left touchpad 8, 9
 - right touchpad 8, 9
- C**
 - camera
 - identifying 7
 - Camera light, identifying 7
 - camera privacy cover, identifying 7
 - camera/microphone module
 - illustrated 18
 - spare part number 18
 - caps lock light 10
 - caring for your computer 25
 - cautions
 - electrostatic discharge 21, 22
 - cleaning your computer 25
 - caring for wood veneer 27
 - disinfecting 26
 - HP Easy Clean 25
 - removing dirt and debris 25
 - components
 - bottom 11
 - display 6
 - keyboard area 8
 - left side 5
 - lights 9
 - right side 4
 - touchpad 8
 - computer major components 14
 - computer specifications 69
 - connectors
 - power 5, 6
 - control zone 8
- D**
 - display
 - specifications 69, 70
 - display assembly
 - subcomponents 17
 - display back cover
 - illustrated 17
 - spare part number 17
 - spare part numbers 18
 - display bezel
 - illustrated 17, 18
 - spare part number 17
 - spare part numbers 18
 - display cable
 - illustrated 17
 - spare part number 17
 - display components 6
 - display panel
 - illustrated 17, 18
 - product description 1
 - spare part number 17
 - spare part numbers 18
 - display panel cable
 - illustrated 18
 - spare part number 18
- E**
 - electrostatic discharge (ESD) 21, 22
 - preventing damage 21-23
 - esc key, identifying 11
- F**
 - fan
 - removal 44
 - spare part number 44
 - fingerprint reader
 - illustrated 16
 - spare part number 16
 - fn key, identifying 11
- G**
 - graphics, product description 1
 - grounding methods 21-23
 - guidelines
 - packaging 21, 27
 - transporting 21, 27
 - workstation 21
- H**
 - hard drive
 - product description 1
 - specifications 69
 - HDMI port
 - identifying 5
 - heat sink
 - illustrated 16
 - removal 52
 - spare part number 16, 52
 - hinge
 - illustrated 17, 18
 - spare part number 17
 - spare part numbers 18
 - hinge cover
 - illustrated 17
 - spare part number 17
 - HP PC Hardware Diagnostics UEFI
 - downloading 66
 - failure ID code 65
 - HP Hotkey Support software 66
 - starting 65, 66
 - using 65

HP PC Hardware Diagnostics

Windows

- accessing 63, 64
- downloading 64
- failure ID code 63
- installing 65
- using 63

HP Recovery media

- recovery 61

HP Sure Recover 62

I

illustrated parts catalog 14

internal microphones,
identifying 7

J

jacks

- audio-out (headphone)/audio-in
(microphone) 4

K

keyboard

- product description 2

keyboard with top cover

- spare part numbers 55

keys

- action 11
- esc 11
- fn 11
- Windows 11
- Windows Copilot 11

L

labels

- Bluetooth 12
- regulatory 12
- serial number 12
- service 12
- wireless certification 12
- WLAN 12

left control zone, identifying 8

left side components 5

lights

- AC adapter and battery 5
- camera 7
- caps lock 10
- microphone mute 10
- power 10
- touchpad 8

low blue light mode 6

M

memory module

- product description 1

microphone

- product description 1

microphone mute light,

- identifying 10

model name 1

O

operating system, product
description 3

P

packaging guidelines 21, 27

pointing device, product
description 2

ports

- HDMI 5
- product description 2
- USB 4
- USB port 5
- USB Type-C® 10 Gbps port 5
- UUSB Type-C® 10 Gbps port 6

power connector

- identifying 5, 6

power cord

- requirements for all
countries 72
- requirements for specific
countries and regions 72
- set requirements 72
- spare part numbers 19

power cords, spare part
numbers 19

power light, identifying 10

power requirements, product
description 2

primary storage

- product description 1

processor

- product description 1

product description

- audio 1
- display panel 1
- graphics 1
- hard drive 1
- keyboard 2
- memory module 1
- microphone 1
- operating system 3
- pointing device 2
- ports 2

power requirements 2

primary storage 1

processors 1

product name 1

security 3

serviceability 3

solid-state drive 1

video 1, 2

wireless 2

product name 1

product name and number,
computer 12

R

recovery 60

discs 61

media 61

USB flash drive 61

recovery media 60

- creating using HP Cloud
Recovery Download
Tool 60

- creating using Windows
tools 60

regulatory information

regulatory label 12

wireless certification labels 12

Remote HP PC Hardware

- Diagnostics UEFI settings
customizing 68
- using 67

removal and replacement

- procedures 29, 39
- SSD 39

restoring 60

restoring and recovery

- methods 61

right control zone, identifying 8

right side components 4

S

Screw Kit, spare part number 19

security, product description 3

serial number, computer 12

service labels, locating 12

serviceability, product
description 3

solid-state drive

- product description 1
- specifications 70

spare part country codes 55

speaker

- illustrated 16
- removal 42

- spare part number 16, 42
- speakers, identifying 12
- special keys
 - identifying 11
 - using 11
- specifications
 - computer 69
 - display 69, 70
 - hard drive 69
 - solid-state drive 70
- SSD
 - illustrated 16
 - removal and replacement 39
 - spare part number 16
- static electricity 21, 22
- support information 27
- swelling or deformation of notebook battery 75
- system board
 - illustrated 16
 - removal 50
 - spare part number 16
 - spare part numbers 50
- system restore 61
- system restore point, creating 60

T

- top cover/keyboard
 - illustrated 15
 - spare part number 15
- touchpad
 - illustrated 16
 - removal 43
 - settings 8
 - spare part number 16
 - spare part numbers 43
- touchpad buttons
 - identifying 8, 9
- touchpad components 8
- touchpad light, identifying 8
- touchpad settings, adjusting 8
- touchpad zone, identifying 8, 9
- transporting guidelines 21, 27
- traveling with the computer 12

U

- USB board
 - removal 54
 - spare part number 54
- USB port, identifying 4, 5
- USB Type-C 10 Gbps port, identifying 5
- USB Type-C® 10 Gbps port, identifying 6

V

- vents, identifying 12
- video, product description 1, 2

W

- Windows
 - backup 60
 - recovery media 60
 - system restore point 60
- Windows Copilot key, identifying 11
- Windows key, identifying 11
- Windows tools, using 60
- wireless antennas
 - illustrated 17
 - spare part number 17
- wireless antennas, identifying 7
- wireless certification label 12
- wireless, product description 2
- WLAN antenna kit
 - illustrated 18
 - spare part number 18
- WLAN antennas, identifying 7
- WLAN device 12
- WLAN label 12
- WLAN module
 - removal 40
 - spare part numbers 40
- workstation guidelines 21